




**THANK YOU FOR BUYING AN INDESIT PRODUCT.**  
In order to receive a more complete assistance, please register your product on [www.indesit.eu/register](http://www.indesit.eu/register)



**Before using the appliance carefully read the Safety Instructions.**

## CONTROL PANEL

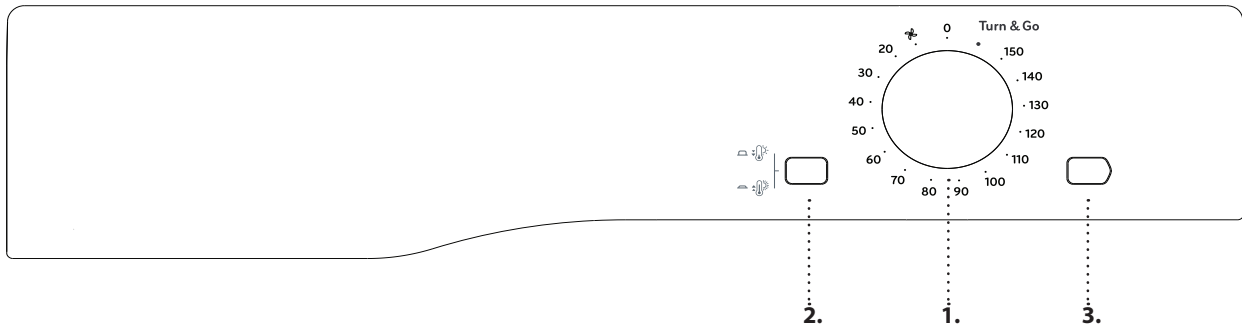

## FIRST TIME USE

Remove all the tapes used to hold items on the machine. Before you use it, clean the inside of the drum to remove any dust that could have accumulated during transport. Slight odour or vapour may be found if you open the door during its first use, this is normal and should only last a few minutes. Make sure that the ventilation hose is properly inserted (refer to the Safety Instructions, section 3 on the first page).

## DESCRIPTION OF CONTROL PANEL

### 1. "Drying Time" selection knob

This is used to set the drying time: turn the knob in a clockwise direction until the indicator is set to the desired drying time. The 0 position switches off the dryer.

### 2. "High Heat" button

To be used to increase the heat on drying cycles.

### 3. "Start" button

Press to begin drying.

## OPENING THE DOOR DURING THE CYCLE

Laundry can be checked while the drying cycle runs and any garments already dry can be removed, while drying continues for the remaining items. After closing the door, press the "Start" button to resume machine operation

## DAILY USE

**Doing this will keep your machine working at its BEST:**





**- remember to clean your filter after each drying cycle.**


**Refer to the Care & Maintenance section.**

1. Plug the dryer into the power supply socket.
  2. Open the door, ensure that the filter is clean and securely placed, check to see if the drum is empty before loading it.
  3. Load garments; always refer to instructions on clothing labels and the max loads indicated in the drying time table. Empty pockets. Make sure garments do not get caught between the door and/or the door filter. Do not load items that are dripping wet. Do not tumble dry large, very bulky items.
  4. Close the door.
  5. Turn the "Drying Time" selection knob until the indicator is pointing towards the most suitable drying time for the type of fabric in that load.
- Note:** do not attempt to turn the knob anticlockwise.
6. If necessary, set the temperature using the "High Heat" button.
  7. Press the "Start" button to begin drying.
  8. A final COOL TUMBLE phase (i.e. the fabrics are cooled) activates during the last few minutes of the drying cycle; always allow this phase to finish.
  9. The cycle ends when the selection knob reaches the "0" zero position and the drum stops.
  10. Open the door, remove the laundry.
  11. Disconnect the dryer from the power supply.
  12. Clean the filter and replace it.

## CARE LABEL

Always check the care labels, especially when placing garments in the tumble dryer for the first time. Below are the most commonly used symbols:

-  May be tumble dried.
-  Do not tumble dry.
-  Tumble dry – high heat.
-  Tumble dry – low heat.

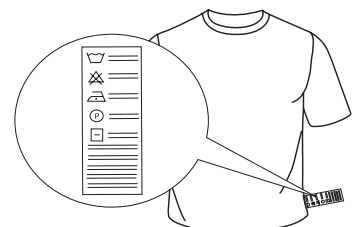

## DRYING TIMES AND OPTIONS

### Refresh

A short cycle suitable for refreshing fibres and garments through the emission of fresh air. It lasts about 10 minutes.

As this is not a drying cycle, it is not to be used for garments that are still wet.

It can be used on any load size but is more effective on smaller loads.

### High Heat

This button selects the drying temperature. When the button is out low heat is selected and when it is pushed in high heat is selected.

### Drying Times

The drying time depends on the size of the load and on the type of fabric it contains (see the table below).

A cool tumble cycle runs during the final 10 minutes of the cycle.

High Heat Cotton is the most efficient setting in terms of energy consumption (EU 392/2012). To reach maximum efficiency, select the highest temperature option.

### "Turn and Go" cotton full load 160 min.

A cycle suitable for a full cotton load. It sets up the right timing in just one turn of a dial.

### Drying Times table

The tables below show approximate drying times in minutes. Weights refer to dry garment weights.

High Heat Cotton - High (full) Heat			
Drying times 800-1000 rpm spin in washing machine			
1-2 kg	3-4 kg	5-6 kg	7-8 kg
20-45 mins	45-70 mins	70-100 mins	90-120 mins

Synthetics - High (full) Heat		
Drying times on reduced spin in washing machine		
1 kg	2 kg	3 kg
20-30 mins	35-45 mins	45-60 mins

Acrylics - Low (gentle) Heat	
Drying times 800-1000 rpm spin in washing machine	
1 kg	2 kg
25-40 mins	40-60 mins

Drying times are approximate and may vary depending on the following:

- *Amount of water retained after the spin cycle:* towels and delicate items can retain a lot of water (if laundry retains a large amount of water, use a longer cycle than the one recommended).
- *Fabrics:* items of the same fabric, but with different texture and thickness may have different drying times.
- *Amount of laundry:* single items and small loads take less time to dry.
- *Ironing:* if you will be ironing laundry, remove while slightly damp for better results. Items not being ironed can be left longer.
- *Temperature of the room:* the lower the temperature of the room, the longer it will take for the dryer to dry clothing.
- *Bulky items:* bulky items require special care. We recommend removing several times the items during the drying cycle to shake them out.

**Warning:** do not over-dry items.

All fabrics contain natural dampness which helps to keep them soft and fluffy.

## Maximum load sizes: 7 kg

Power consumption			
off-mode (Po) - Watts			0.06
left-on mode (PI) - Watts			0.06
Programs	Kg	kWh	Minutes
High Heat Cotton* <input type="checkbox"/>	7.0	4.49	116
High Heat Cotton* <input type="checkbox"/>	3.5	2.38	67
Synthetics	3.0	1.07	35

\*This is the reference setting used for the energy label and is suitable for drying normal wet cotton laundry.

## Maximum load sizes: 8 kg

Power consumption			
off-mode (Po) - Watts			0.06
left-on mode (PI) - Watts			0.06
Programs	Kg	kWh	Minutes
High Heat Cotton* <input type="checkbox"/>	8.0	5.02	129
High Heat Cotton* <input type="checkbox"/>	4.0	2.63	76
Synthetics	3.0	1.07	35

\*This is the reference setting used for the energy label and is suitable for drying normal wet cotton laundry.

## CARE AND MAINTENANCE

**WARNING: unplug the dryer during the cleaning and maintenance procedures.**

### Cleaning the door filter after each cycle (see Fig. A).

Pull the filter out and clean it by removing the lint from the filter surface under running water or using a vacuum cleaner. For optimal performance, dry up the filter before inserting it back in place.

**Do not use the dryer without having reinserted the filter in place.**

Remove the door filter as described below:

1. Open the door and pull the filter upwards.
2. Open the filter and remove the lint from all its parts. Replace the filter correctly making sure it is fully seated.

**The filter is an essential part for drying. It is intended to collect the lint formed during the drying process. If the filter is clogged, the air flow inside the dryer can become seriously affected: this will increase the drying time and energy consumption, and could damage the dryer.**

### Cleaning the tumble dryer

- The external metal, plastic and rubber parts can be cleaned with a damp cloth.
- At least every two or three months you **MUST** clean fluff build up around the filter housing and the vent tube. Check the vent tube and any permanent venting fixture to make sure that there has been no accumulation of fluff or lint.
- Do not use solvents or abrasives.


## TRANSPORT AND HANDLING

Never lift the dryer by holding on to its top side.

1. Unplug the dryer.
2. Make sure that the door is properly closed.
3. Disconnect the vent tube from the dryer.

## DESCRIPTION OF THE TUMBLE DRYER

1. Control panel
2. Door
3. Drum
4. Door filter

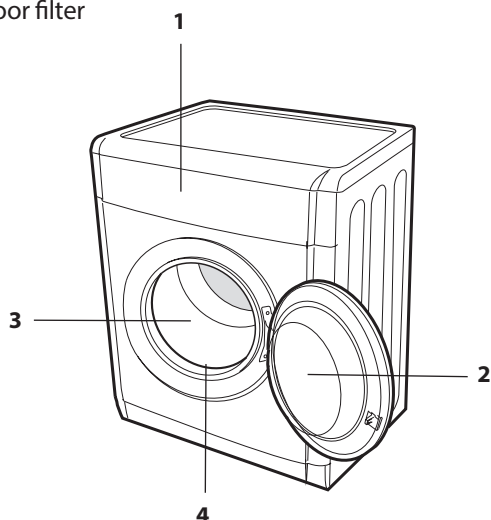

A



## TROUBLESHOOTING

Before contacting the Service Centre, refer to the table below. Often the malfunctions are minor and can be solved in few minutes.

Malfunction	Possible cause	Solution
The tumble dryer does not start.	The plug is not inserted into the socket.	Insert the plug into the socket.
	The plug is faulty.	Try to plug another appliance in the same socket. Do not use connecting electrical devices to the socket, such as adapters or extensions.
	A power failure occurred.	Wait for the power supply to be restored and switch the fuse on again if necessary.
	The door has not been closed properly.	Close the door.
	The drying time has not been set correctly.	Refer to the "Drying Time and Options" section to find the most suitable drying time and options for the type of load.
	The "Start" button was not pressed to begin drying.	Press the "Start" button.
The drying times are very long.	An appropriate maintenance was not carried out.	Refer to the "Care & Maintenance" section and perform the described operations.
	An incorrect drying time or option was selected for the type of load.	Refer to the "Drying Time and Options" section to find the most suitable drying times cycle and options for the type of load.
	The garments are too wet.	Carry out a washing cycle with higher spin speed to remove as much water as possible.
	The dryer may be overloaded.	Refer to the "Drying Times" table to check the max load for each drying times cycle.
	The vent tube or air intake vent is clogged up.	Clean and do not occlude the vent tube and the air intake vent, refer to "Care & Maintenance" section.
The dryer is noisy during the first few minutes of operation.	This is normal, especially if the dryer has not been used for a long time.	If the noise persists during the entire drying cycle, contact the After-sales Service.
The timer resets to zero without the dryer running.	This is normal, during this period you may hear a ticking noise from the timer.	This ensures you select the correct drying time when you next use the dryer.
Drum - slight odour or vapour.	Slight odour or vapour may be found if you open the door during its first use.	This is normal and should only last a few minutes.



Policies, standard documentation, ordering of spare parts and additional product information can be found by:

- Visiting our website [docs.indesit.eu](https://docs.indesit.eu) and [parts-selfservice.whirlpool.com](https://parts-selfservice.whirlpool.com)
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.



 **INDESIT**



19516188600

10/2021

W11520408