



Refrigerator Compartment

- A. Control panel
- B. Fan and “Active Oxygen” (depending on the model)
- C. LED lights (depending on the model)
- D. Shelves
- E. “Food Care Zone” drawer for meat, fish, cold cuts (depending on the model)
- F. Level covering fruit and vegetable drawer
- G. Fruit and vegetable drawer
- H. Rating plate (placed on the side of the fruit and vegetable drawer)
- P. Door shelves
- Q. Bottle holder (if provided)
- R. Bottle shelf

- Least cold zone
- Medium zone
- Coldest zone
- Fruit & vegetable zone

Freezer Compartment

- I. Stop Frost (if available)
- L. Upper drawer (area for storing frozen and deep frozen food)
- M. Middle drawer (freezing area)
- N. Lower drawer (area for storing frozen and deep frozen food)
- O. Ice cube trays (if provided)

Note: All of the drawers, door shelves and shelves can be removed.

The ideal storage temperatures for the food are pre-set in the factory.

Read the instructions carefully before using the appliance. Features, technical data and images may vary according to the model.

QUICK GUIDE

“ACTIVE OXYGEN FUNCTION”

Through the emission of a small quantity of ozone, this function enables a reduction in the proliferation of bacteria and micro-organisms inside the refrigerated drawer and limits bad odours. The quantity of ozone discharged by the device is minuscule and it is rapidly expended during the antibacterial action.

To activate the Active Oxygen function, press the O3 button on the control panel.

When the function is activated, a coloured light will appear on the device inside the refrigerated drawer, according to the following cyclical features:

- Green light: ozone emission phase
- Blue light: antibacterial and anti-odour action phase (without ozone emission)

To deactivate the function, simply press the O3 button on the control panel.

Note: when the Active Oxygen function is activated, a faint odour might be perceived inside the refrigerated drawer (the same odour that sometimes accompanies a thunder storm due to the ozone produced by the lightning): it is absolutely normal.

Note: Disabling the function optimizes energy consumption.

Fan

The fan activates and deactivates automatically for a better temperature distribution and for humidity reduction in the fridge compartment.

Temperature display

The display may alternately show the refrigerator compartment temperature (between 2°C and 8°C) or the temperature of the freezer compartment (between -16°C and -24°C).

Turning off the sound alarm

To turn off the sound alarm, briefly press the button.

Refrigerator compartment temperature

It is possible to set a different temperature with the “Fridge” button.

Fast Cool

Press the “Fridge” button for 3 seconds before placing a large quantity of fresh food in the refrigerator compartment. When the function is turned on, the icon will be displayed. The function turns off automatically after 6 hours, or manually by pressing the “Fridge” button for 3 seconds.

On/Stand-by

Press for 3 seconds to turn the appliance off. In Stand-by mode, two dashes light up on the display and the light in the refrigerator compartment does not turn on.

To turn the product on again, a brief press on the button is sufficient.

Note: this procedure does not disconnect the appliance from the electricity supply.

Freezer compartment temperature

It is possible to set a different temperature with the “Freezer” button.

Fast Freeze

Press the “Freezer” button for 3 seconds 24 hours before putting large quantities of food to freeze in the freezer compartment.

When the function is turned on the icon lights up.

The function turns off automatically after 48 hours, or manually by pressing the “Freezer” button again for 3 seconds. To maximise the freezing speed, the lower drawer can be removed and the food can be placed directly on the bottom of the compartment.

Note: do not put foods that are to be frozen in contact with others that are already frozen.

Vacation (holiday mode)

You can use this function in the event of your prolonged absence. Press the “O3” button for 3 seconds to turn the function on. The display will show the temperature of the refrigerator compartment (+12°C) and the icon will light up. After activating the function, remove the food from the refrigerator compartment and keep both doors closed - the refrigerator will maintain a suitable temperature to prevent odours from forming. The freezer, however, will stay turned on.

To turn off the function, press the button for 3 seconds.

What to do if...	Possible reasons:	Solutions:
The control panel is switched off, the appliance does not work.	The appliance may be in On/Stand-by mode. There may be an appliance power supply problem.	Turn the appliance on with the On/Stand-by button. Check that: <ul style="list-style-type: none">- there is not a power outage- the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered)- the household electrical system protection devices are efficient- the power cable is not broken.
The inside light does not work.	The light may need replacing. The appliance may be in On/Stand-by mode	<ul style="list-style-type: none">- Models with LED lights: contact the authorised Technical Assistance Service.- Turn the appliance on with the On/Stand-by button
The temperature inside the compartments is not low enough.	There could be various causes (see "Solutions")	Check that: <ul style="list-style-type: none">- the doors close properly- the appliance is not installed near a heat source- the set temperature is adequate- the circulation of air through the ventilation grilles on the base of the appliance is not obstructed.
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrosting water drain (see section "Maintaining and cleaning the appliance")
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect. It prevents condensation from forming.	No solution is necessary.
The red symbol is flashing and a sound signal is activated	Door open alarm It is activated when the refrigerator compartment door remains open for a prolonged period of time.	To turn the sound signal off, close the door of the product.
The red symbol is flashing, a sound signal is activated and the icon is activated.	Blackout alarm This activates when there is a prolonged interruption to the power supply which has caused an increase in temperature in the freezer compartment. Note: until the blackout alarm is deactivated, you cannot set a different temperature for the product.	Before turning off the sound signal, it is recommended that you pay attention to the temperature shown on the temperature display, corresponding to the highest temperature reached in the freezer compartment during the power cut. To turn the sound signal off, briefly press the "Turn off sound alarm" button. After pressing the button, the temperature display will again show the temperature set. If the freezer compartment has not yet reached the optimal temperature for the preservation of the food, the freezer compartment temperature alarm may activate (see freezer compartment temperature alarm). Check the condition of the food before consuming it.
The red symbol is lit up (without flashing), a sound signal is activated and the freezer temperature display is flashing.	Freezer compartment temperature alarm The freezer compartment temperature alarm indicates that the compartment is not at the optimum temperature. This may occur: when using for the first time, after defrosting and/or cleaning, when freezing large quantities of food or when the door to the freezer does not close completely.	To turn off the sound signal, briefly press the “Turn off sound alarm” button (the temperature display will stop flashing). When the optimum temperature conditions have been reached, the red icon will automatically turn off. If the freezer compartment temperature alarm continues, contact the Authorised Technical Assistance Service.
The red symbol is lit, a sound signal is activated and the letter "F" is flashing on the display.	Malfunction alarm The alarm indicates the malfunction of a technical component.	Call the authorized Technical Assistance Service. To turn the sound signal off, briefly press the "Turn off sound alarm" button
Note: some noises, such as gurgles and hissing, caused by the refrigeration system, are normal		