

DAILY REFERENCE GUIDE



THANK YOU FOR BUYING A WHIRLPOOL PRODUCT.

In order to receive a more complete assistance, please register your appliance on <http://www.whirlpool.eu/register>

Before using the appliance, carefully read the *Health and Safety* guide.




Before using the dryer, the transport bolts must be removed. For detailed instructions on how to

remove them, refer to the Installation Guide.


PRODUCT DESCRIPTION

APPLIANCE

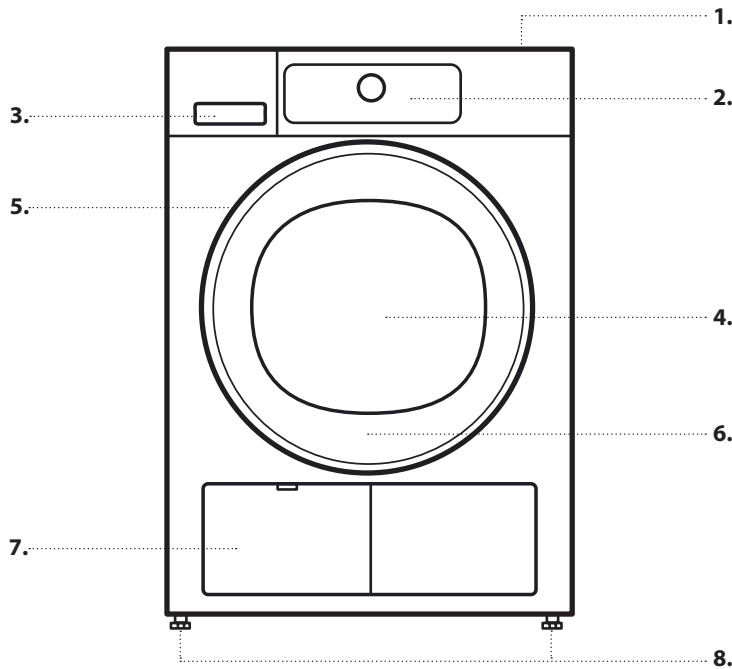

1. Worktop
2. Control panel
3. Water tank
4. Door
5. Door handle
6. Door filter (behind door)
7. Bottom filter (behind flap)
8. Adjustable feet (4)

CONTROL PANEL

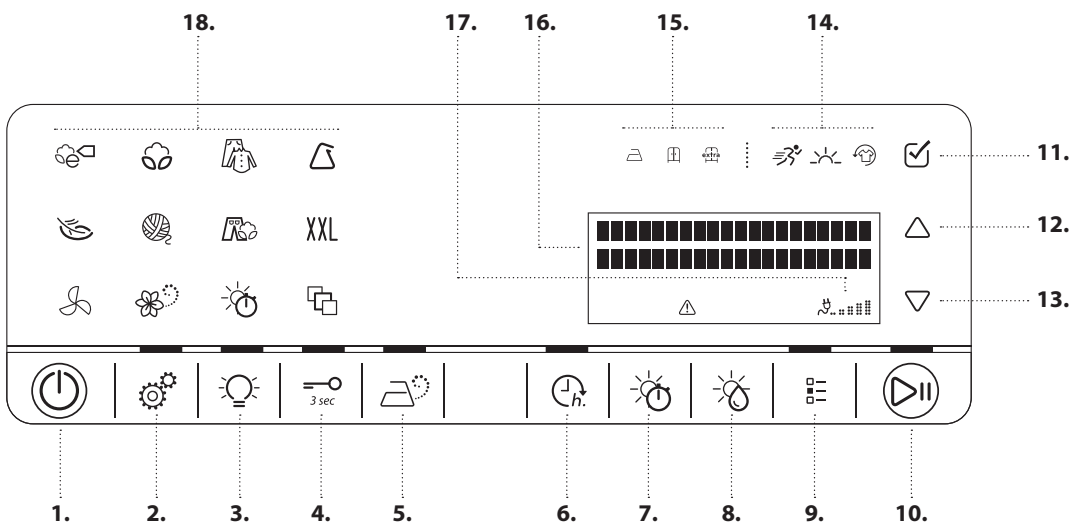


1. On/Off button (Reset if long pressed)
2. Settings button
3. Drum light
4. Key lock
5. Steam option
6. Finish in
7. Drying time
8. Dryness level
9. Options button
10. Start/Pause button
11. OK key (to confirm)
12. UP key
13. DOWN key
14. Options indicators
15. Dryness level indicators
16. Display
17. Eco monitor
18. Programmes area

FIRST TIME USE


BEFORE USING THE DRYER

CHECK DRAIN HOSE AND WATER TANK

Make sure that the water tank is correctly inserted.

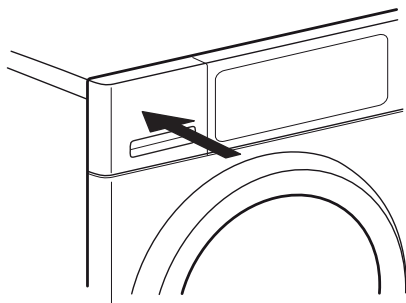

Make sure that the drain hose on the back of the dryer is fixed correctly, either to the dryer's water tank, or to your domestic sewage system (see Installation guide).

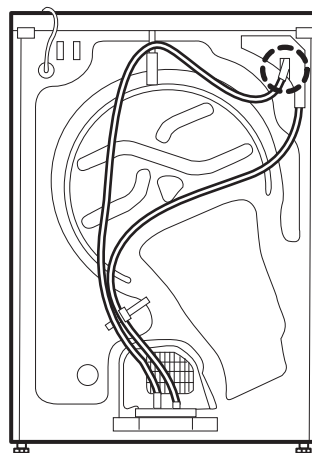

When switching on the dryer for the first time, you will be asked to

- Set the desired language
- Adapt the value for your local water conductivity
- Set the dryer to recall the last used programme setting or not when switching it on.

Refer to HINTS AND TIPS and OPTIONS, FUNCTIONS AND INDICATORS / Settings.

DAILY USE

See Use and Care Guide for more details on functions / see last page for information on how to obtain the Use and Care Guide

⚠ WARNING

Make sure that no lighters or matches remain in the laundry.

Make sure that the laundry is not soaked with flammable liquids.

1. LOAD LAUNDRY

- Prepare your laundry according to the recommendations in section “**HINTS AND TIPS**”. Make sure that pockets are empty.
- Open the door and load the laundry. the maximum load sizes given in the **CHART**.



2. CLOSE THE DOOR

- Make sure that no laundry gets stuck between door glass and door filter.
- Close the door so that you can hear it click shut.



3. SWITCH ON DRYER

- Press the **On/Off button**. An animation appears on the control panel, and there is a sound. Afterwards the dryer is ready to be operated.



4. SET THE DESIRED PROGRAMME

• Select programme:

Press the programme symbol on the control panel. Programme name, default dryness level and default programme duration appear on the display.

• Change the dryness level, if needed



Press the Dryness level button to select the desired dryness level:


	iron dry
	cupboard dry
	extra dry

The symbol on the control panel lights up.

• Select options, if needed

Press the options button; the list of available options appears on the display. Press the UP or DOWN key to navigate through the list. Press the OK key to select the desired option; a checkmark appears on the display next to the option name, and the option symbol lights up.

 Some options / functions can be selected by directly pressing the button:



If an option is not selectable for the programme, it shortly blinks and switches off again when the button is pressed, and there is a sound.

Refer to section OPTIONS, FUNCTIONS AND INDICATORS for more information.

• If “Drying time” or “Airing” programme was selected:



To adapt the drying or airing time,

- press the Drying time button
- adjust the desired drying or airing time by pressing the drying time button repeatedly, or alternatively by pressing the UP or DOWN key.

Confirm the selected duration by pressing the OK key.

5. START PROGRAMME

- Press and hold Start/Pause until the button lights up solidly. After a short load sensing phase, the drying process starts.
- The display indicates the remaining programme duration and the current programme phase.
- The duration can be recalculated and adapted in the course of the programme. During such phases, the display indicates the sensing phase, and an animation is shown on the control panel.



6. CHANGE THE SETTINGS OF A RUNNING PROGRAMME, IF NEEDED

You can still change some settings after a programme was started: Adjust drying time (only if programme Drying time or Airing is selected).

Adjust or cancel “Finish in”, if a delay was selected and started.

Add or cancel an option, provided the progress of the programme still allows it.

- Press the relevant button. The selected setting will blink for a few seconds.
- While blinking, you can adjust the setting by pressing the UP or DOWN key. If the value or setting stopped blinking, press the button again.
- Press the OK key to confirm the modification. If you do not confirm, the modification will be confirmed automatically – the modified setting will stop blinking after a while.

The programme will continue automatically.

To change the settings of a running programme or delay, you can also:

- Press Start/Pause to put the running programme on pause
- Change your settings
- Press Start/Pause again to continue the programme.

7. RESET A RUNNING PROGRAMME, IF NEEDED

- Press and hold the On/Off button until the display indicates that the programme is cancelled.
- Immediately open the door and unload the laundry, so that eventual heat in the laundry can dissipate.



8. SWITCH OFF THE DRYER AFTER PROGRAMME END

- The display indicates that the cycle has finished. Press On/Off to switch off the dryer. Open the door and take out the laundry.
- The dryer will switch off automatically in about a quarter of an hour after programme end, to save energy.
- If not switched off right after programme end, the dryer will tumble the laundry for about 10 minutes, to avoid creasing. The display alternately indicates the programme end and the anti-crease phase. This phase can be ended by either switching of the dryer as mentioned above, or by opening the dryer door.



9. EMPTY WATER TANK / CLEAN DOOR FILTER / CLEAN BOTTOM FILTER

- Refer to section CARE AND MAINTENANCE.

PROGRAMME CHART

Programme		Care labels	Max load (Kg)	Directly selectable			Selectable by options button		
				Dryness level	Steam option	Drying time	Fresh Care	Gentle	Rapid
ECO COTTON			max		—	—	✓	—	—
COTTON			max		—	—	✓	✓	✓
					✓				
MIXED			2.0	—	✓	—	✓	✓	—
SYNTHETICS			3.5		—	—	✓	✓	—
					✓				
DELICATES			2.5		—	—	✓	—	—
WOOL EXCELLENCE			1.0		—	—	—	—	—
JEANS			3.0		—	—	✓	✓	—
BIG ITEMS	XXL		3.0		—	—	✓	—	—
AIRING			max	—	—	✓	✓	—	—
STEAM REFRESH			1.5	—	—	—	—	—	—
DRYING TIME			max	—	—	✓	✓	—	—
SHIRTS			2.5		—	—	✓	✓	—
SILK			2.5		—	—	✓	—	—
SPORT			2.5		—	—	✓	—	—
TOWELS			5.0		—	—	✓	✓	✓
OUTDOOR			2.0		—	—	✓	—	—
DOWN JACKETS			1.5		—	—	✓	—	—
MINI LOAD			1.0		—	—	✓	—	—

✓ Selectable/optional — Not selectable/applicable

HINTS AND TIPS

Respect the care labels of your laundry; make sure that it is appropriate for being treated in a dryer.

DRYING CARE LABELS

The dots indicate the temperature degree for drying the laundry



Normal temperature



Reduced temperature



Do not tumble dry

SAVING TIPS

- To reduce the drying time, make sure that the laundry is spun with the maximum possible spin speed of the wash programme. This reduces the moisture content in the laundry.
- Always dry a full load; this optimizes the relative energy consumption.

ADAPTING THE DRYER TO WATER CONDUCTIVITY

The drying results are affected by the conductivity of the water used during washing. If, by modifying the available dryness levels (iron dry; cupboard dry; extra dry), you are not satisfied with the final drying results, you can adapt the water conductivity level. The dryer comes with preset level 2. Choose between level 1 (most damp results) and 5 (most dry results).

Refer to section OPTIONS, FUNCTIONS AND INDICATORS / Settings.

PROGRAMMES

Make sure that your laundry is suitable to be treated in a tumble dryer. Refer to HINTS AND TIPS / Care labels.

ECO COTTON

For drying normally wet cotton laundry.
Standard cotton programme, suitable to dry normally wet cotton laundry. Most efficient programme in terms of energy consumption for drying cotton laundry.
The values on the Energy Label are based on this programme.



COTTON

For drying cotton laundry.



MIXED

For drying mixed laundry made of cotton, linen, artificial fibres and their blends.



SYNTHETICS

For drying laundry made of synthetic fibres.



DELICATES

For drying delicate laundry which needs gentle treatment.



WOOL EXCELLENCE

For drying woollens labelled with the Woolmark TOTAL EASY CARE WOOL.



JEANS

For drying cotton jeans-wear and garments made of robust jeans like material, such as trousers and jackets.



BIG ITEMS

For drying big laundry items, such as bathmats, blankets etc.



AIRING

For airing, refreshing and loosening up laundry for 30 minutes, without heating.



STEAM REFRESH

For refreshing laundry with steam.



Specifically designed to refresh and remove odours from dry and clean casual garments like shirts, blouses, trousers made out of cotton, synthetics and their blends.

Before loading the laundry into the drum, slightly humidify it by spraying it with water (maximum 200 ml; use a water spray bottle). For this programme, dryness level "cupboard dry" is preset and cannot be changed.

After programme end, the garments shall be removed immediately and put on clothes hangers to minimize wrinkling.

DRYING TIME

Time-restricted drying programme. Select programme duration by option Drying time.



For all fabrics appropriate for tumble drying. Suitable to add an additional short drying phase after programme end.

Refer to OPTIONS, FUNCTIONS AND INDICATORS / option Drying time for more information.

SPECIAL PROGRAMMES

To set one of the following programmes, select and confirm the special programmes position. Then press the UP or DOWN key to select one of the following programmes; the display indicates the programme name. Confirm the desired programme by pressing the OK key.



Shirts

Gentle drying of shirts and blouses made of cotton, synthetic fibres or their blends.

Towels

For drying robust laundry made of cotton, such as terry towels.

Silk

Gentle drying of silk garments.

Sport

For drying sports garments made of synthetics or cotton.

Outdoor

For drying outdoor clothes which are appropriate for being treated in a dryer.

Downjackets

For drying big single items such as down jackets.

Miniload

Economic drying of small laundry loads.

OPTIONS, FUNCTIONS AND INDICATORS

Not all options are combinable; the non-combinable option switches off automatically.

OPTIONS which are directly selectable by pressing the respective button:

Steam option

Minimizes creasing of garments made of cotton, synthetics and their blends by adding a humidifying phase at the end of the drying cycle.

Use the option with small loads only, unload the garments from the dryer immediately after programme end and put them on clothes hangers.

The humidity level automatically adjusts to "cupboard dry" and cannot be changed with this option.



Drying time

To adjust the desired drying time if Drying time or Airing programme has been selected.

Press the button; the display indicates that the drying time can be set. Press the UP or DOWN key to select the desired drying time up to maximum 180 minutes.



Dryness level

To select the desired dryness level for the laundry load.

Press the button; the display indicates that the dryness level can be set. Press the UP or DOWN key to select the desired dryness level.



 iron dry

 cupboard dry

 extra dry

The selected dryness level lights up on the control panel.



OPTIONS which are selectable with the Options button

Fresh Care

Helps to keep your laundry fresh if you cannot unload it soon after programme end.

The dryer starts to tumble the laundry periodically a few minutes after programme end. This tumbling will last up to approximately 12 hours after end of the programme. You can stop it at any time by switching off the dryer with the On/Off button.



Gentle

Enables a more gentle treatment of the laundry by reducing the drying temperature.



Rapid

Enables quicker drying.



FUNCTIONS:

Settings

The following settings can be changed / selected:

- Display language / Key tones / Cycle end alert / Display contrast / Water conductivity (= adaptation to conductivity of water used for washing; adjustable from 1 = most damp results, to 5 = most dry results) / Remember last used cycle (if set to "Off", Eco Cotton is the default programme which is selected when switching on the dryer) / Eco mode (automatic switch-off function after programme end) / Return to factory settings.
- Press and hold the Settings button for at least 3 seconds; the display indicates the settings which can be adjusted.
- Press the UP or DOWN key to select the setting which you want to change; confirm it by pressing the OK key.
- Press the UP or DOWN key to adjust the setting; confirm by pressing the OK key.
- To exit the Settings mode, either navigate through the list with the UP or DOWN key until the display indicates that you can exit – then confirm by pressing the OK key. Or alternatively press the Settings button.



Key lock

To lock keys of the control panel against unwanted operation.

To lock the keys:

- The dryer must be switched on.
- Press and hold the Key lock button until the button lights up. Buttons and keys are locked now. Only the On/Off button works



If you switch the dryer off and on again, the key lock remains active until you unlock it.

To unlock the keys:

- Press and hold the Key lock button until the display indicates that the keys are unlocked.



Finish in

Enables to have the laundry ready at a particular time by setting a delay until end of the programme.



- Select programme and options.
- Press the "Finish in" button – "Finish in --:--" appears on the display.
- Press the UP or DOWN keys to select a delay up to 23:30 hours.
- Press "Start / Pause" – the countdown of the delay starts. The display indicates the default programme duration of the selected programme in the first line, and the selected "Finish in" period until programme end in the second line.
- The programme starts automatically, in time to be finished at the end of the selected "Finish in" period. The second line on the display keeps on indicating the countdown of the time until end of the programme.

To cancel the delay

- either press "Start/Pause" to cancel the delay. To start the selected programme immediately, press "Start/Pause" again .
- or press and hold "On/Off" to cancel the complete programme setting.

INDICATORS**Failure**

For any failures, refer to section TROUBLESHOOTING in the USE AND CARE GUIDE.

**Energy monitor**

Gives feedback about the energy consumption of the programme setting.


The less indicators light up, the more economic is your programme setting.

CARE AND MAINTENANCE

Switch off and unplug the dryer before doing any cleaning and maintenance.
Caution, the water in the water tank can still be hot.


- **Empty water tank after each drying cycle**

Hold the handle and carefully pull out the water tank. Hold the full water tank with both hands. Empty the water and insert the container by pushing it back into place. Make sure that it is properly inserted.

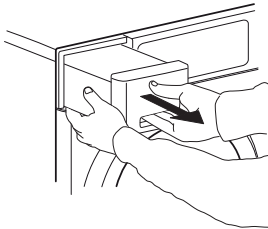


- **Clean door filter after each drying cycle**

Open the door and remove the door filter by pulling it upwards.

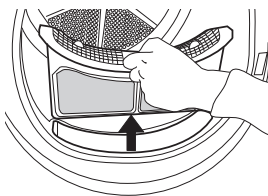


Press the button to open the door filter. Remove the lint inside. Close the filter and reinsert it in the right direction, so that it completely integrates in the filter chamber.

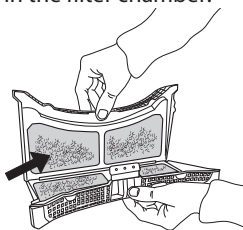


- **Clean the bottom filter after about every fifth drying cycle**

Open the bottom flap. Hold the handle and pull out the bottom filter.

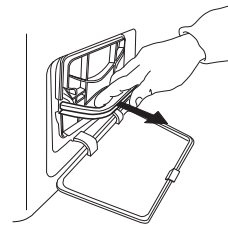

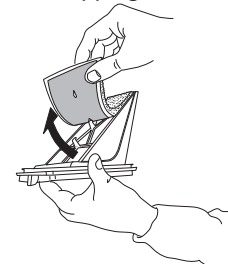

Remove the foam from the bottom filter, to clean it. Clean the filter foam and the filter by hand or under running water. Do not wash the filter foam in the washing machine. Wring out the filter foam. Do not insert it in the bottom filter dripping wet.



Fix the filter foam on the bottom filter. Clean the filter chamber of the dryer with a damp cloth or carefully with a vacuum cleaner. Insert the bottom filter again. Clap the filter handle down and close the bottom flap.

CONSUMPTION DATA

PROGRAMME	LOAD (KG)	SPIN SPEED (rpm)	HUMIDITY (%)	ENERGY CONSUMPTION (kWh)	DRYING TIME (min)
ECO COTTON 	10	1000	60	2.32	280
	5	1000	60	1.29	152
ECO COTTON 	10	800	70	2.70	302
	10	1400	50	2.13	219
COTTON IRON DRY	10	800	70	2.46	281
	10	1000	60	2.19	242
	10	1400	50	1.92	203
SYNTHETICS CUPBOARD DRY	3.5	1000	40	0.94	71

*Reference programmes for Energy Label / Regulation 392/2012 /EU Values are based on the default programme setting, with clean air and bottom filter. For consumer tests, the door filter and bottom filter need to be cleaned after each cycle. For tests according EN 61121, the appliance shall be installed using direct drain (see INSTALLATION GUIDE). The water shall be collected in an external container for proper measurement.

The energy consumption and drying time may differ from the values above.

They depend on the operation conditions in your home (such as voltage fluctuation, mixture of textiles, humidity of the textiles after spinning, load volume).

The values are determined according to European Norm 61121 and refer to the default programme setting; changing the setting also impacts the consumption data.

MAINTENANCE AND CLEANING AND TROUBLESHOOTING

Refer to the **Use and Care Guide**.

The **Use and Care Guide** can be obtained as follows:

- After-Sales Service; using the phone number in the warranty booklet
- Download from the Whirlpool website <http://docs.whirlpool.eu>



CONTACTING AFTER-SALES SERVICE

Provide both numbers shown on the service sticker inside the door when contacting the After-Sales Service team.

<http://www.whirlpool.eu>

The phone number can be found in the warranty booklet.



400010766344

Whirlpool® is a registered trademark of Whirlpool, USA

