

KitchenAid®

SCHENKSCHILD
GIDS VOOR HET BESTE RESULTAAT

POURING SHIELD
GUIDE TO EXPERT RESULTS

VERSEUR/PROTECTEUR
GUIDE DU CONNAISSEUR

SPRITZSCHUTZ MIT EINFÜLLSCHÜTTE
ANLEITUNG FÜR PROFI-ERGNISSE

COPERCHIO VERSATORE ANTISPRUZZO
GUIDA PER OTTENERE RISULTATI PROFESSIONALI

COLADOR TAMIZ
GUÍA PARA CONSEGUIR RESULTADOS PROFESIONALES

STÄNKSKYDD
GUIDE FÖR BÄSTA RESULTAT

DEKSELET
VEILEDNING FOR PROFESJONELLE RESULTATER

SYÖTTÖKOURU
OPAS PARHAISIIN TULOSSIIN

PLASTSKÆRM
SÅDAN FÅR DU DE BEDSTE RESULTATER

RESGUARDO DE SALPICOS
GUIA PARA RESULTADOS PROFISSIONAIS

HVEITIBRAUT
LEIÐBEININGAR UM RÉTTA NOTKUN

ΠΡΟΣΤΑΤΕΥΤΙΚΟ ΚΑΛΥΜΜΑ ΜΕ ΣΤΟΜΙΟ
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ ΓΙΑ ΤΕΛΕΙΑ ΑΠΟΤΕΛΕΣΜΑΤΑ

English



Model 5KN1PS
1-Piece Pouring Shield
Designed exclusively for use
with KitchenAid® Stand Mixers.

Table of Contents

Important Safeguards	3
Using Your Pouring Shield	4
KitchenAid® Household Stand Mixer Attachment Warranty	5
Service Centers	5
Customer Service	5

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:



DANGER

You can be killed or seriously injured if you don't immediately follow instructions.



WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:


1. Read all instructions.
2. To protect against risk of electrical shock, do not put mixer in water or other liquid.
3. The appliance is not intended for use by young children or infirm persons without supervision.
4. Unplug mixer from outlet when not in use, before putting on or taking off parts and before cleaning.
5. Avoid contacting moving parts. Keep fingers out of discharge opening.
6. Do not operate the mixer with a damaged cord or plug or after the mixer malfunctions, or is dropped or damaged in any manner. Return the mixer to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock or injury.
8. Do not use the mixer outdoors.
9. Do not let the cord hang over the edge of table or counter.
10. Do not let cord contact hot surface, including the stove.
11. This product is designed for household use only.

SAVE THESE INSTRUCTIONS

Using Your Pouring Shield

To Attach:

1. Turn speed control to "0" (OFF).
2. Unplug stand mixer or disconnect power.
3. Attach flat beater, dough hook, or wire whip and bowl.

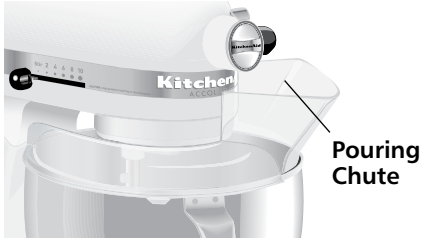

4. From the front of the mixer, slide the pouring shield over the bowl until the shield is centered. The bottom rim of the shield should fit within the bowl.

To Use:

1. For best results, rotate the shield so that the motor head covers the u-shaped gap in the shield. This will position the pouring chute just to the right of the attachment hub as you face the mixer.
2. Pour ingredients into the bowl through the pouring chute.

To Scrape Bowl:

NOTE: Do not scrape bowl while the mixer is running.

Turn mixer to "0" (OFF). Slide the pouring shield off the bowl, lift the mixer head for Tilt-head Mixer or lower bowl for Bowl-Lift Mixer, and scrape.

To Clean Pouring Shield:

Wash the Pouring Shield in warm, soapy water.

NOTE: The pouring shield is not dishwasher-safe!

KitchenAid® Household Stand Mixer Attachment Warranty

Length of Warranty:	KitchenAid Will Pay For :	KitchenAid Will Not Pay For :
<p>Europe, Australia & New Zealand: Two Year Full Warranty from date of purchase.</p> <p>Other: One Year Full Warranty from date of purchase.</p>	<p>Replacement parts and repair labor costs to correct defects in materials or workmanship. Service must be provided by an Authorized KitchenAid Service Center.</p>	<p>A. Repairs when Pouring Shield is used for operations other than normal household food preparation.</p> <p>B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes.</p>

English

KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.

Service Centers

All service should be handled locally by an Authorized KitchenAid Service Center. Contact the dealer from whom the unit was purchased to obtain the name of the nearest Authorized KitchenAid Service Center.

In the U.K.:

Call: 0845 6011 287

In Ireland:

M.X. ELECTRIC
Service Department
25 Alymer Crescent
Kilcock, CO.KILDARE

Call: 1 679 2398/87 2581574

Fax: 1 628 4368

In Australia:

Call: 1800 990 990

In New Zealand:

Call: 0800 881 200

Customer Service

In U.K. & Ireland: Tollfree number 00800 38104026

Address: KitchenAid Europa, Inc.
PO BOX 19
B-2018 ANTWERP 11
BELGIUM

www.KitchenAid.com



FOR THE WAY IT'S MADE.®

® Registered Trademark of KitchenAid, U.S.A.

™ Trademark of KitchenAid, U.S.A.

The shape of the stand mixer is a trademark of KitchenAid, U.S.A.

© 2006. All rights reserved.

Specifications subject to change without notice.