


IMPORTANT SAFETY INSTRUCTIONS

- **WARNING:** to avoid a hazard due to instability, positioning or fixing of the appliance must be done in accordance with the manufacturer instructions.
 - **WARNING:** keep the appliance ventilation openings clear of obstruction..
 - **WARNING:** do not damage the appliance refrigerant circuit pipes.
 - **WARNING:** Do not use mechanical, electric or chemical means other than those recommended by the Manufacturer to speed up the defrost process.
 - **WARNING:** Do not use or place electrical devices inside the appliance compartments if they are not of the type expressly authorised by the Manufacturer.
 - **WARNING:** ice-makers and/or water dispensers not directly connected to the water supply must be filled with potable water only.
- Information:** This appliance does not contain CFCs. The refrigerant circuit contains R134a (HFC) or R600a (HC) (see the rating plate inside the appliance).
- Appliances with Isobutane (R600a): isobutane is a natural gas without environmental impact, but is flammable. Therefore, make sure the refrigerant circuit pipes are not damaged. Keep special attention in case of damaged pipes emptying the refrigerant circuit.
 - This product may contain Fluorinated Greenhouse Gases covered by the Kyoto Protocol; the refrigerant gas is inside a hermetically sealed system. Refrigerant gas: R134a has a Global Warming Potential of (GWP) 1300.
 - C-Pentane is used as blowing agent in the insulation foam and it is a flammable gas. Pay special attention during disposal operations.
 - This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications
 - Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
 - Cleaning and user maintenance shall not be made by children without supervision.

- To avoid the risk of children becoming trapped and suffocating, do not allow them to play or hide inside the appliance.
- It must be possible to disconnect the appliance from the power supply by unplugging it if plug is accessible, or by means of an accessible multi-pole switch installed upstream of the socket in conformity with national safety standards.
- Plug the appliance into a grounding socket: the appliance must be correctly connected to an approved earthing system.
- Do not use single/multi adapters or extension cords.
- During installation, make sure the appliance does not damage the power cable.
- Do not pull the appliance power cable
- The appliance must be handled and installed by two or more persons.
- Installation and maintenance including replacement of the supply cord must be carried out by the manufacturer or a qualified technician, in compliance with the manufacturer's instructions and the local safety regulations in force. In order to avoid a hazard do not repair or replace any part of the appliance including the supply cord, unless specifically stated in the user manual.

SAFEGUARDING THE ENVIRONMENT


1. Packing

The packing material is 100% recyclable and bears the recycling symbol . For disposal, comply with the local regulations. Keep the packing materials (plastic bags, polystyrene parts, etc.) out of the reach of children, as they are a potential source of danger.

2. Scrapping/Disposal

The appliance is manufactured using recyclable material.

This appliance is marked in compliance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring the correct disposal of this appliance, you can help prevent potentially negative consequences for the environment and the health of persons.

The symbol  on the appliance, or on the accompanying documents, indicates that this appliance should not be treated as domestic waste but must be taken to a special collection centre for the recycling of electrical and electronic equipment. When scrapping the appliance, make it unusable by

cutting off the power cable and removing the doors and shelves so that children cannot easily climb inside and become trapped.

Scrap the appliance in compliance with local regulations on waste disposal, taking it to a special collection centre; do not leave the appliance unattended even for a few days, since it is a potential source of danger for children.

For further information on the treatment, recovery and recycling of this product, contact your competent local office, the household waste collection service or the shop where you purchased the appliance.

Declaration of conformity

- This appliance has been designed for preserving food and is manufactured in compliance with Regulation (CE) No. 1935/2004.
- This appliance has been designed, manufactured and marketed in compliance with:
 - safety objectives of the "Low Voltage" Directive 2006/95/CE (which replaces 73/23/CEE and subsequent amendments);
 - the protection requirements of Directive "EMC" 2004/108/EC.

BEFORE USING THE APPLIANCE

To ensure best use of your appliance, carefully read the operating instructions which contain a description of the product and useful advice. Keep these instructions for future reference.

1. After unpacking the appliance, make sure it is not damaged and that the door closes properly. Any damage must be reported to the dealer within 24 hours of delivery of the appliance.

2. Wait at least two hours before switching the appliance on, to ensure that the refrigerant circuit is fully efficient.
3. Clean the inside of the appliance before using it.

PRECAUTIONS AND GENERAL RECOMMENDATIONS

INSTALLATION

- Be careful not to damage the floors (e.g. parquet) when moving the appliance.
- Make sure the appliance is not near a heat source.
- Install and level the appliance on a floor strong enough to take its weight and in a place suitable for its size and use.
- The appliance is arranged for operation in places where the temperature comes within the following ranges, according to the climatic class given on the rating plate. The appliance may not work properly if it is left for a long time at a temperature outside the specified range.

Climatic Class	Amb. T. (°C)
SN	From 10 to 32
N	From 16 to 32
ST	From 16 to 38
T	From 16 to 43

- Make sure the voltage specified on the rating plate corresponds to that of your home.

SAFE USE

- Do not store or use petrol, flammable liquids or gas in the vicinity of this or other electrical appliances. The fumes can cause fires or explosions.
- Do not swallow the contents (non-toxic) of the ice packs (in some models).

- Do not eat ice cubes or ice lollies immediately after taking them out of the freezer since they may cause cold burns.
- For products designed to use an air filter inside an accessible fan cover, the filter shall be always in position when the refrigerator is in function.
- Before carrying out any maintenance or cleaning operation, unplug the appliance or disconnect it from the power supply.
- Use the refrigerator compartment only for storing fresh food and the freezer compartment only for storing frozen food, freezing fresh food and making ice cubes.
- Do not store glass containers with liquids in the freezer compartment since they may break.
- Avoid storing unwrapped food in direct contact with internal surfaces of the refrigerator or freezer compartments.
- "The bulb used inside the appliance is specifically designed for domestic appliances and is not suitable for general room lighting within the home (EC Regulation 244/2009)".

The Manufacturer declines any liability for injury to persons or animals or damage to property if the above advice and precautions are not respected.

ENERGY-SAVING TIPS

- Install the appliance in a dry, well ventilated room far away from any heat source (e.g. radiator, cooker, etc.) and in a place not exposed directly to the sun. If required, use an insulating plate.
- To guarantee adequate ventilation follow installation instructions.
- Insufficient ventilation on back of the product increases energy consumption and decreases cooling efficiency.
- The internal temperatures of the appliance may be affected by the ambient temperature, frequency of door opening, as well as location of the appliance. Temperature setting should take into consideration these factors.
- Allow warm food and drinks to cool down before placing in the appliance.
- Do not obstruct the fan (if available) with food items.
- After placing the food check if the door of compartments closes properly, especially the freezer door.
- Reduce to a minimum door opening.
- When thawing frozen food, place them in the refrigerator. The low temperature of the frozen products cools the food in the refrigerator.
- Appliances could have special compartments (Fresh Food Compartment, Zero Degree Box,...). In case not differently specified in the specific booklet of product, they can be removed, maintaining equivalent performances.
- Positioning of the shelves in the refrigerator has no impact on the efficient usage of energy. Food should be placed on the shelves in such way to ensure proper air circulation (food should not touch each other and distance between food and rear wall should be kept).
- You can increase storage capacity of frozen food by removing baskets and, if present, Stop Frost shelves, maintaining an equivalent energy consumption.
- Damaged gasket must be replaced as soon as possible.
- High energy class products are fitted with highefficiency motors that remain operational for longer, but have a low power consumption. Do not worry if the engine continues to run for longer periods.
- "Night sensor" and "Screensaver" in active mode and "Door Handle LEDs" in OFF position will lead to energy saving.

BEFORE USING YOUR FRIDGE

General information about new NO FROST technology

New No-Frost fridges differ from other static fridges in their operating principle.

In normal fridges, the humidity entering the fridge in the door openings and the humidity of the food causes freezing in the freezer compartment.

To defrost the snow and ice in the freezer department, you should turn off the fridge, take the food that needs to be kept in a constant temperature off the fridge, and remove the ice gathered in the freezer department periodically.

The situation in the freezer compartment is completely different in no-frost fridges.


Dry and cool air is blown through the freezer compartments via fan.

Cold air dispersed homogeneously between the shelves cools all your food equally and uniformly, thus prevents humidity and freezing.


The freezer compartment is cooled by statically. The air is distributed homogeneously between the racks in the cooling section with the fan, and all your foods can be cooled evenly and properly.

As there is no air passage between the sections, the smells on the 3 different parts of your refrigerator do not mix.

Therefore your New No-Frost fridge allows you ease of use, besides its huge volume and stylish appearance.

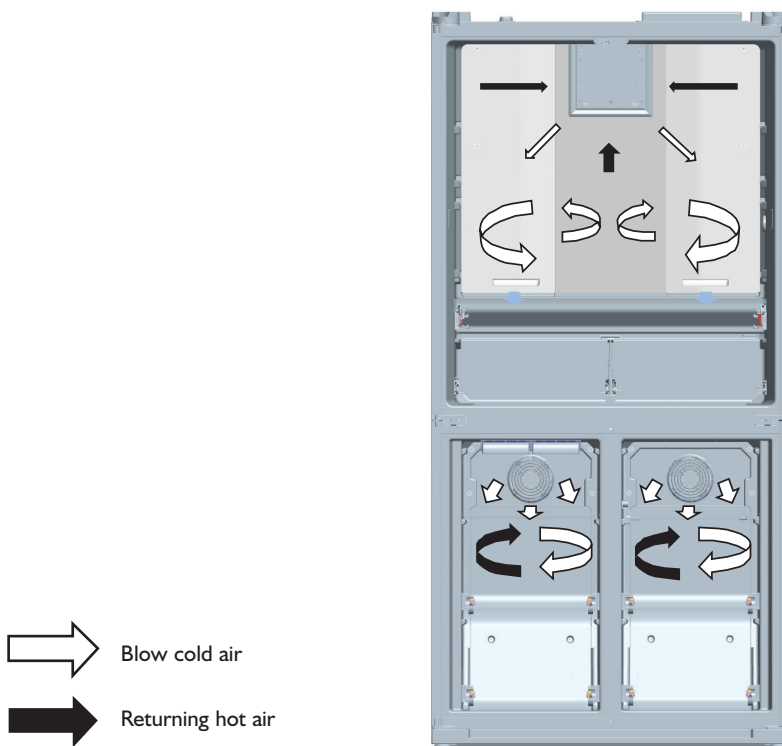


PRODUCT DESCRIPTION

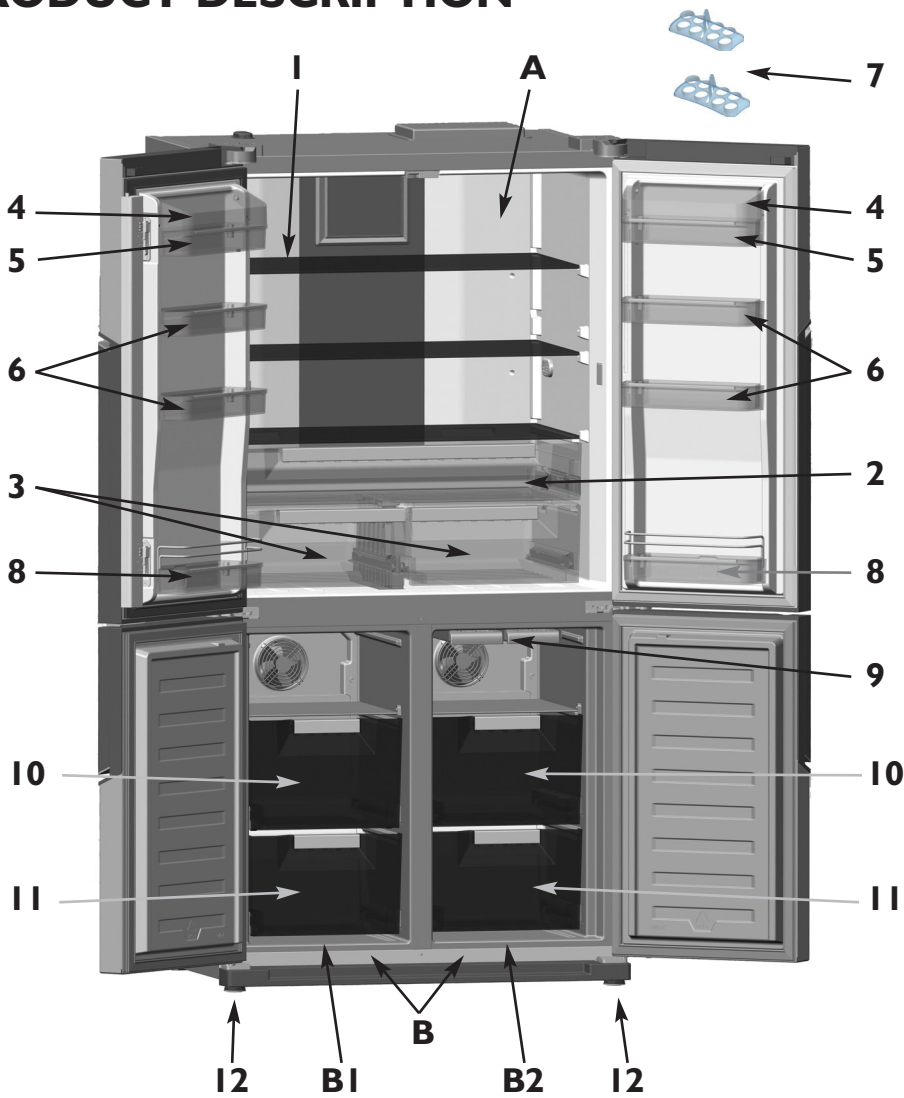

- A.** Cooler Compartment
- B.** Fridge / Freezer Compartment
 - B1.** Zone-1
 - B2.** Zone-2
- 1.** Fridge compartment shelves
- 2.** Chiller (breakfast) compartment
- 3.** Crispers
- 4.** Cheese-Butter shelf covers
- 5.** Cheese, butter shelf
- 6.** Door shelves
- 7.** Eggcups
- 8.** Door bottle shelves
- 9.** Iceboxes
- 10.** Freezer / Cooler top baskets
- 11.** Freezer / Cooler bottom baskets
- 12.** Adjustable stays

The purpose of this presentation is informing you about the parts of your appliance. The parts may vary depending on the model of the appliance.

DISPLAY

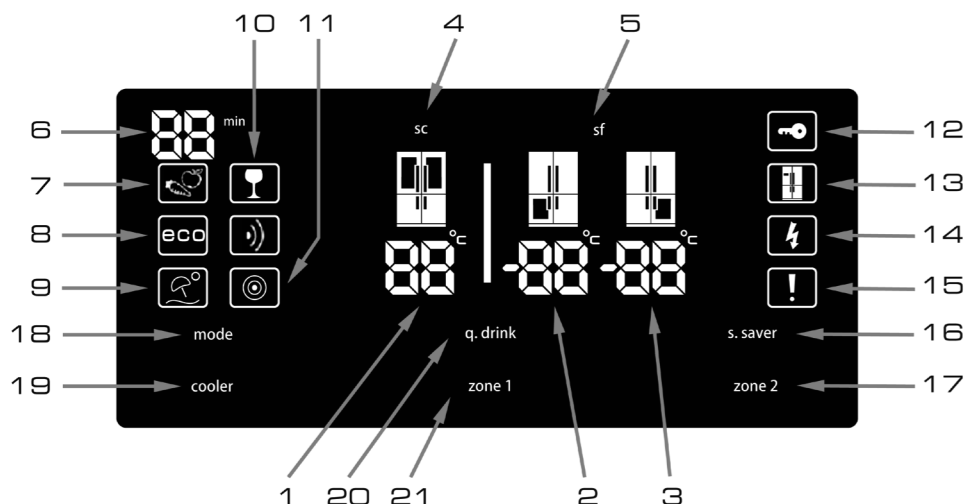

- | | |
|--|-----------------------------------|
| 1. Fridge Compartment Temperature indicator | 11. Night sensor |
| 2. Left Freezer Compartment Temperature indicator | 12. Child lock |
| 3. Right Freezer Compartment Temperature indicator | 13. Dealer-Demo mode |
| 4. Super cooling light | 14. Low voltage warning |
| 5. Super freezing light | 15. Alarm |
| 6. Qdrink alarm counter | 16. Screensaver button |
| 7. Active Chill mode | 17. Zone 2 (Right freezer) button |
| 8. Economy mode | 18. Mode button |
| 9. Holiday mode | 19. Cooler button |
| 10. Qdrink light | 20. Qdrink mode button |
| | 21. Zone 1 (Left freezer) button |

The values on the screen indicate temperature values specified by the consumer.

PRODUCT DESCRIPTION

ACTIVE CHILL mode

ACTIVE CHILL mode works to protect the flavor, texture, and appearance of food. By maintaining ideal temperature and humidity levels, pre-set to optimize the freshness of fruits and vegetables, we create the conditions for longer shelf-life. To select ACTIVE CHILL mode, Zone I section should be cooler. To switch the appliance to ACTIVE CHILL mode, you should just press [mode] button until "ACTIVE CHILL symbol" light comes on. Zone I button will be off and user can not change Zone I compartment temperature.

If Zone I is used as freezer, user should observe below rules before usage of ACTIVE CHILL mode.

Important: If Zone I/Zone2 compartment will be converted from freezer to cooler:

- You should empty the food in the related compartment and clean the compartment. You should leave the door close for 4 hours. Then, food will be placed in the relevant compartment.
- Baskets and/or shelves removed from the compartment should be re-fitted.

Note: ACTIVE CHILL mode shouldn't be activated if Zone I is used as freezer.

Note: Foods should not be put in front of the fan.

ACTIVE CHILL mode keeps fruits and vegetables fresh and helps vitamin and nutritional values of fruits and vegetables to protect by maintaining ideal humidity and temperature conditions.

Maximum storage conditions of some fruits and vegetables

FRUITS & VEGETABLES STORAGE TIME

Lettuce	10 days
Green leaves	10 days
Tomato	7 days
Cucumber	7 days
Lemon	15 days
Cherry	15 days
Orange	20 days
Strawberry	5 days
Carrot	20 days
Broccoli	10 days
Spinach	10 days
Squash	15 days
Apple	25 days
Grapes	20 days
Artichoke	15 days

Note: These conditions illustrate an maximum rate of decay of some fruits and vegetables stored

properly with ACTIVE CHILL mode. All storage times are suggestion. Storage times of fruits and vegetables depend on the quality of the food, postharvest conditions and uninterrupted refrigeration from harvest until storage in a ACTIVE CHILL mode appliance. Individual cases may vary.

Note: Packaged fruits and vegetables are consumed until expire dates of produces.

Economic mode [eco]

It ensures that your refrigerator runs within ideal temperatures. In order to activate "ECO" mode, you should just press [mode] button until "eco and e" light is on.

Holiday mode (H)

It is represented by an umbrella and sun. If you will go to holiday for a long time during which you will not use cooler compartment, you may activate this mode. To switch the appliance to holiday mode, you should just press [mode] button until "holiday symbol and H" light comes on.

Night sensor

Thanks to this function that is activated when you press night sensor [mode] and [s.saver] buttons for 3 seconds, your refrigerator's lights will be OFF in case of sufficient illumination, therefore you will save energy.

Child lock (Key Symbol)

In order to activate child lock, you need to press [cooler]+[zone 2] buttons simultaneously for 5 seconds. When the child lock is active, other buttons will be deactivated, and therefore changing the settings you have made will be prevented. In order to deactivate child lock, you, again, need to press [cooler]+[zone 2] buttons simultaneously for 5 seconds.

Dealer Demo mode

It is a mode used by service and not related to the use of refrigerator.

Alarm

Once an alarm light comes on, you should contact a service.

If you press [s.saver] button when there is an alarm and an exclamation mark on the display, the alarm sound will turn off, however the exclamation mark will stay on the digital indicator panel until error is fixed.

Screensaver [s.saver]

Thanks to this function that is activated when you press [s.saver] button for 3 seconds, you save energy by utilizing digital indicator panel with its lights off. In order to deactivate the mode, repress [s.saver] button for 3 seconds.

Zone 2 (Right freezer)

It is temperature setting button for bottom-right compartment. By pressing [zone 2] button freezing value of bottom-right part can be set as -16, -17, -18, -19, -20, -21, -22, -23, -24 Celsius temperature values. If you want to use bottom-right part as cooler, press [zone 2] button for 3 seconds to switch to this mode, and set to 2, 3, 4, 5, 6, 7, 8 Celsius temperature values.

Cooler [COOLER]

It is used for temperature setting of cooler compartment. By pressing [cooler] button, you can set the values of cooler part to 2, 3, 4, 5, 6, 7, 8 Celsius temperature values.

Qdrink mode (QDRINK)

[q.drink] button should be pressed to activate beverage cooling mode. Each press will increment the time for 5 minutes up to 30 minutes, and then it returns to zero. You can view the time zone you want to set on "Qdrink alarm counter" section. Qdrink mode only lets the refrigerator release an audible alert after a specific period.

Important: It should not be confused with cooling. You must adjust the time according to the temperature of the bottles before you put them in zone1 and/or zone2 compartments. For example, you can set the time as "5 minutes" in the beginning. After this time, if the cooling is insufficient, you might set another 5 or 10 minutes.

While using this mode, you must check the temperature of the bottles regularly. When the bottles are cool enough, you must take them out of the appliance. If you forget bottles in Q.DRINK mode, bottles may explode.

Important: If you are using Zone1 and Zone2 compartments for cooling, this mode will not be activated.

Zone 1 (Left freezer)

It is temperature setting button for bottom-left compartment. By pressing [zone 1] button freezing value of bottom-left part can be set as -16, -17, -18, -19, -20, -21, -22, -23, -24 Celsius temperature values. If you want to use bottom-left part as cooler, press [zone1] button for 3 seconds to switch to this

mode, and set to 2, 3, 4, 5, 6, 7, 8 Celsius temperature values.

Quick freezing (SF SUPERFREEZE)

You should press on [zone1] and/or [zone2] buttons until "sf" letters are displayed on the display. Once "sf" letters are viewed, a beep sound will be released if you press no button and the mode will be selected. You can use this mode to freeze prepared meals or freeze large amounts of food quickly. You should active this function 6 hours before to place the foods to be frozen in the compartment. Quick freezing mode will automatically be deactivated after 30 hours or once the freezer compartment temperature sensor feels sufficient temperature.

For quick freezing, you should divide the food to frozen evenly in zone1 and zone2 compartments.

Quick cooling (SC SUPERCOOL)

Press cooler button until "sc" letters are viewed on the display. Once "sc" letters are viewed, a beep sound will be released if you press no button and the mode will be selected. You can use this mode to cool prepared meals or cool large amounts of food quickly. Quick cooling mode will be automatically cancelled after 4 or 6 hours depending on the environmental temperature or when the cooler compartment reaches a sufficiently low temperature.

Door lights On/Off (DOOR LIGHT ON/OFF)

Illumination system hidden in the door handles of the product should be used based on demand. In order to activate illumination system on the door handles, you need to press [mode] button for 3 seconds. For deactivation, press [mode] button for 3 seconds again.

In case of "ON" position, door illuminations will always be on.

Using a Freezer Compartment as Cooler Compartment Based On Demand

The bottom-right and -left compartments on the appliance can be used either as freezer and cooler. Preferably, you need to press [zone 1] button for 3 seconds to use bottom-left part as cooler or [zone 2] button for 3 seconds to use bottom-right part as cooler.

Important : If Zone1/Zone2 compartment will be converted from freezer to cooler:

- You should empty the food in the related compartment and leave the door close for 4

hours. Then, food will be placed in the relevant compartment.

- Baskets and/or shelves removed from the compartment should be re-fitted.

Similarly, in order to utilize any of bottom compartments used as cooler as freezers again, you need to press the related compartment button for 3 seconds.

Important : If Zone 1/Zone 2 compartment will be converted from cooler to freezer:

- You should empty the food in the related compartment and leave the door close for 2 hours. Then, food will be placed in the relevant compartment.
- When zone 1 and zone 2 compartments used as cooler are switched to Holiday or Economic setting value, it will keep on running as cooler.

Important

- If you want to use zone compartments as cooler, please give priority to Zone 1 compartment for energy saving.
- Do not use Zone 2 compartment as freezer at ambient temperatures over 38°C.

Compartment On-Off mode


You can wholly cancel compartments you do not need nor want by checking through indicator panel. In order to turn off Zone 2 and cooler at the same time, hold [mode] and [zone 2] buttons pressed simultaneously for 5 seconds, and all figures indicating the part turned off will disappear on the digital indicator panel.

In order to turn off Zone 1 compartment, hold [mode] and [zone 1] buttons pressed simultaneously for 5 seconds, and all figures indicating the part turned off will disappear on the digital indicator panel.

In order to turn off just the cooler, hold [mode] and [cooler] buttons pressed simultaneously for 5 seconds, and all figures indicating the part turned off will disappear on the digital indicator panel.

In order to reactivate the turned-off compartment, use the same combination of buttons.

REFRIGERATOR COMPARTMENT

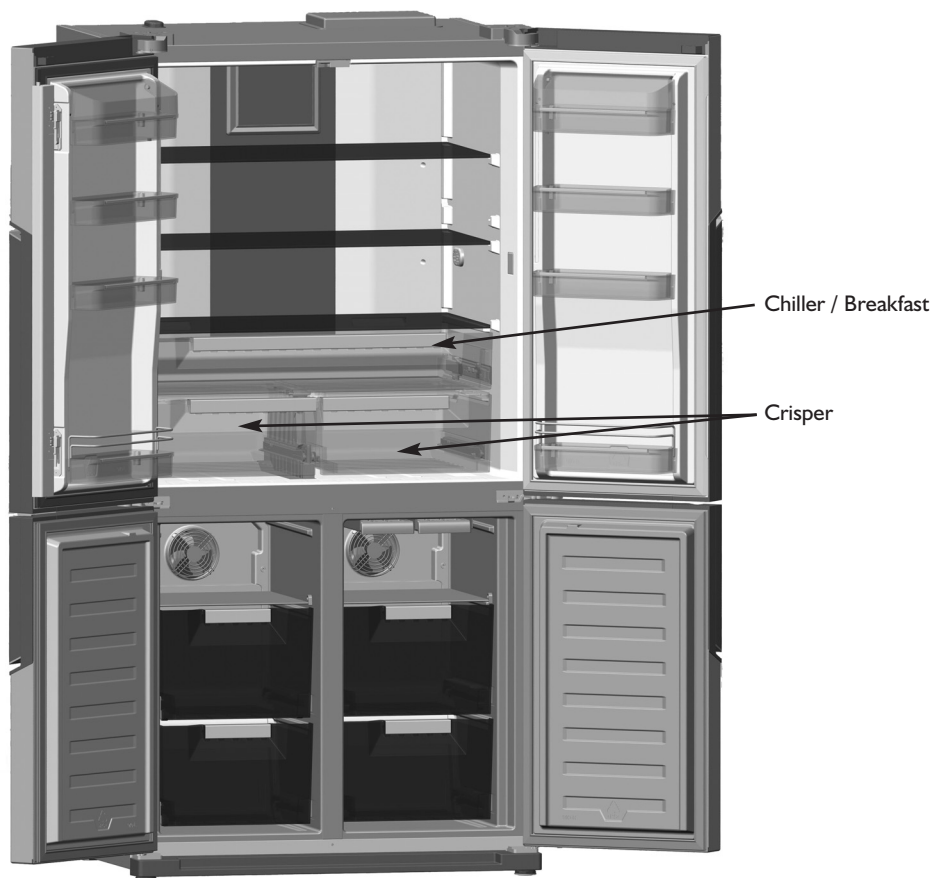

Chiller / Breakfast


When this compartment is used as 0°C compartment (chiller), it ensures that your food is preserved at 0°C. You can keep the frozen foods that you take out of the deepfreeze compartment in order to defrost them or you can keep the meats and cleaned fishes (in plastic bags or packets) etc. which you will use within 1-2 days without need for freezing.

Note: Water is frozen in 0°C but the foods including salt or sugar can be frozen in colder environments.


Please do not put the food you would like frozen or iceboxes in this partition.

Crisper air setting button

Turn the air adjustment knob between crisper and chiller to open position when the crisper is filled excessively. This way, the air intake into the crisper is adjusted and food remains fresh for a longer period of time.

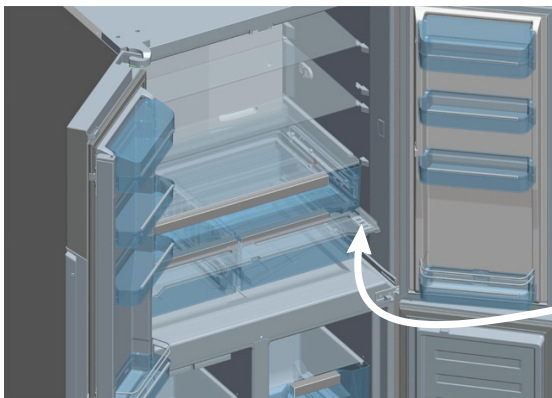

Crisper air adjustment button

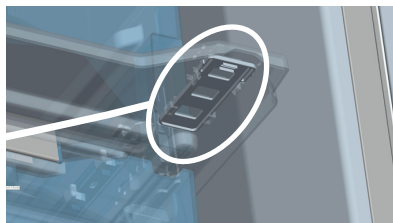

Visual and text descriptions on the accessories section may vary according to the model of your appliance.

PLACING THE FOOD

Cooler Compartment

- Under normal operation conditions, it is enough to set the temperature of cooler compartment to +4 / +6 °C.
- In order to avoid frosting, humidification and odour, food should be placed to the fridge in closed containers or covered with appropriate material.
- Hot food and beverages should be cooled to room temperature before being placed in the fridge.
- Vegetables and fruits can be placed into crisper by packaging with clean and if possible, spongy plastic bags.
- Storing fruits and vegetables separately helps ethylene sensitive vegetables (green leafy, broccoli, carrot etc.) not to affect ethylene releaser fruits (banana, peach, apricot, fig etc.)
- You should not put wet vegetables into the refrigerator.
- Storage time for all food produces depends on food initial quality and uninterrupted refrigeration cycle before refrigerator storage.
- You should not store meat products and fruits&vegetables in the same places not to contaminate. Water leaking in meat can be contamination in the refrigerator. You should package meat products and clean leakages on the shelves.
- You should not put food in front of air flow passage.
- Storage time for all food produces depends on food initial quality and uninterrupted refrigeration cycle before refrigerator storage.
- You should consume packaged foods until expire date.

Important Note:

- Cover the liquid and stews when you put them on fridge. Otherwise, the humidity amount inside the fridge increases. And, this causes the fridge to operate more. Covering the food and beverages also allow you to protect their taste and flavour.
- Potatoes, onion and garlic shouldn't be kept in the fridge. Some suggestions on the placing and storing of your food in the fridge compartment are supplied below.

Food	Maximum Storing time	Where to place in the fridge department
Vegetables and fruits	1 week	Vegetable bin
Meat and fish	2 - 3 Days	Wrapped in plastic foil or bags or in a meat container (on the glass shelf)
Fresh cheese	3 - 4 Days	In special door shelf
Butter and margarine	1 week	In special door shelf
Bottled products milk and yoghurt	Until the expiry date recommended by the producer	In special door shelf
Eggs	1 month	In the egg shelf
Cooked food		All shelves

FREEZER COMPARTMENT

- The freezer compartment is used for storing frozen foods for a long time or for producing ice.
- If you leave the door of freezer open for a long time, frosting will appear on the lower stage of freezer. Thus, air circulation will be obstructed. In order to avoid this, first unplug the cord and wait until thawed. After ice melts, you should clean the freezer.
- You can take off baskets, cover, etc. to increase storing volume of freezer.
- Volume specified on the product label shows the value without baskets, covers, etc.

IMPORTANT

Please never refreeze frozen food after thawing them.

It may be hazardous to your health as it may lead to food poisoning.

- Do not place hot food to the freezer before cooling them. This may cause other frozen food in the freezer to get decayed.
- When buying frozen food, make sure that it was frozen under appropriate conditions and its package is not torn.
- In case of humidification on package of frozen food and a smelly odour, food may have been stored under inappropriate conditions beforehand and it may have gotten decayed. Do not buy those kinds of food.
- Storing time for frozen food may differ according to the ambient temperature, frequency of door openings, thermostat adjustments, type of food and the time between the buying of the food and placing of the food in the freezer. Always follow instructions on the package and do not exceed storing period.
- Note: If frozen food taken out of freezer of refrigerator is placed into bottom compartment one day before, it promotes refrigerator by preserving its temperature there, so energy will be saved. If you put the material in the deep freeze to an open area, energy loss occurs.

Some spices in cooked food (aniseed, basil, dill, vinegar, spice mix, ginger, garlic, onion, mustard, thyme, marjoram, black pepper, bologna sausage etc.) may have a foul taste when stored for a long time. Therefore, frozen food should be spiced just a little or spice should be added after the food is thawed.

The storing time for the food depends on the oil used. Margarines, veal fat, olive oil and butter are suitable, peanut oil and lard are not suitable.

Cooked food in liquid form should be frozen in plastic containers, other food should be frozen wrapped in plastic foil or in plastic bags.


Some suggestions on the placing and storing of your food in the freezer compartment are supplied on the following pages.

Icebox

- Remove the icebox by grasping its front side.
- Fill $\frac{3}{4}$ of icebox with water and insert it.
- You can take ice after 2 hours approximately. You can service by extracting icebox.

Note: When placing the icebox after filling with water, make sure that you position it horizontally without tilting. Otherwise, water inside icebox may pour on the basket.

Icebox

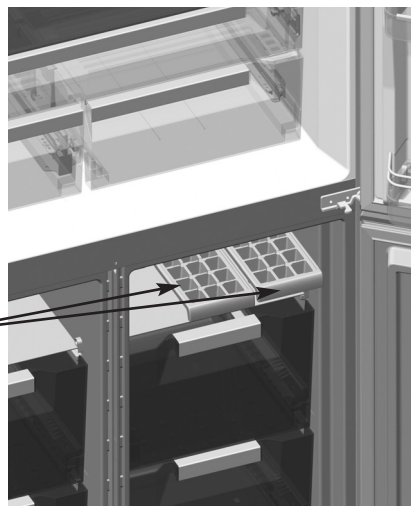

PLACING THE FOOD

Meat and fish	Preparation	Maximum storing time (month)
Steak	Wrapping in a foil	6 - 8
Lamb meat	Wrapping in a foil	6 - 8
Veal roast	Wrapping in a foil	6 - 8
Veal cubes	In small pieces	6 - 8
Lamb cubes	In pieces	4 - 8
Minced meat	In packages without using spices	1 - 3
Giblets (pieces)	In pieces	1 - 3
Bologna sausage/salami	Should be packaged even if it has membrane	
Chicken and turkey	Wrapping in a foil	4 - 6
Goose and Duck	Wrapping in a foil	4 - 6
Deer, Rabbit, Wild Boar	In 2.5 kg portions and as fillets	6 - 8
Freshwater fishes (Salmon, Carp, Siluroidea)	After cleaning the bowels and scales of the fish, wash and dry it; and if necessary, cut the tail and head.	2
Lean fish; bass, turbot, flounder		4
Fatty fishes (Tunny, Mackarel, bluefish, anchovy)		2 - 4
Shellfish	Cleaned and in bags	4 - 6
Caviar	In its package, aluminium or plastic container	2 - 3
Snail	In salty water, aluminum or plastic container	3

Vegetables and Fruits	Preparation	Maximum storing time (month)
String beans and beans	Wash and cut to small pieces and boil in water	10 - 13
Beans	Hull and wash and boil in water	12
Cabbage	Cleaned and boil in water	6 - 8
Carrot	Clean and cut to slices and boil in water	12
Pepper	Cut the stem, cut into two pieces and remove the core and boil in water	8 - 10
Spinach	Washed and boil in water	6 - 9
Cauliflower	Take the leaves apart, cut the heart into pieces, and leave it in water with a little lemon juice for a while	10 - 12
Eggplant	Cut to pieces of 2cm after washing	10 - 12
Corn	Clean and pack with its stem or as sweet corn	12
Apple and pear	Peel and slice	8 - 10
Apricot and Peach	Cut into two pieces and remove the stone	4 - 6
Strawberry and Blackberry	Wash and hull	8 - 12
Cooked fruits	Adding 10 % of sugar in the container	12
Plum, cherry	Wash and hull the stems	8 - 12

Dairy Products	Preparation	Maximum Storing time (months)	Storing Conditions
Packet (Homogenize) Milk	In its own packet	2 - 3	Pure Milk – In its own packet
Cheese-excluding white cheese	In slices	6 - 8	Original package may be used for short storing period. It should be wrapped in foil for longer periods.
Butter, margarine	In its package	6	

	Maximum Storing time (months)	Thawing time in room temperature (hours)	Thawing time in oven (minutes)
Bread	4 - 6	2 - 3	4-5 (220-225 °C)
Biscuits	3 - 6	1 - 1,5	5-8 (190-200 °C)
Pastry	1 - 3	2 - 3	5-10 (200-225 °C)
Pie	1 - 1,5	3 - 4	5-8 (190-200 °C)
Phyllo dough	2 - 3	1 - 1,5	5-8 (190-200 °C)
Pizza	2 - 3	2 - 4	15-20 (200 °C)

CARE AND MAINTENANCE

- Make sure to unplug the fridge before starting to clean it.
- Do not wash your fridge by pouring water.
- You can wipe the inner and outer sides of your appliance with a soft cloth or a sponge using warm and soapy water.
- Remove the parts individually and clean with soapy water. Do not wash in washing machine.
- Never use flammable, explosive or corrosive material like thinner, gas, acid for cleaning.
- The condenser (the back part with black wings) should be cleaned using a vacuum cleaner or a dry brush at least once a year. This will help your freezer to operate more efficiently and will enable you to save energy.

Cleaning evaporation bowl


- Your fridge defrosts automatically. Water produced by defrosting flows to evaporating container passing through water collecting groove, and vaporizes here by itself.

Replacing LED lights used for illumination

For replacing LED lights used for illumination, do contact an authorized service.


INSTALLATION

- We do not take the responsibility of the damages that occur due to ungrounded usage.
- Place your fridge in a place that it would not be exposed to direct sunlight.
- Install the distance adjustment plastic (the part with black vanes at the rear) by turning it 90° as shown in the figure to prevent the condenser from touching the wall.
- Refrigerator should be placed against a wall with a free distance not exceeding 75 mm.
- Your appliance should be at least 50 cm away from stoves, ovens and heater cores, and should be at least 5 cm away from electrical ovens.
- It should never be used outdoors or left under the rain.
- When your fridge is placed next to a deep freezer, there should be at least 2 cm between them to prevent humidity on the outer surface.
- Do not place anything on your fridge, and install your fridge in a suitable place so that at least 15 cm is available on the upper side.
- The adjustable front legs should be stabilized in an appropriate height to allow your fridge operate in a stable and proper way. You can adjust the legs by turning them clockwise (or in the opposite direction). This should be done before placing food in the fridge.
- Before using your fridge, wipe all parts with warm water added with a tea spoonful of sodium bicarbonate, and then rinse with clean water and dry. Place all parts after cleaning.
- No carpets, rugs, etc. which may obstruct air circulation should be laid under the refrigerator.

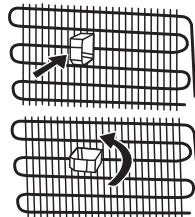


Shipment and repositioning

- Original package and foam may be kept for re-transportation (optionally).
- You should fasten your fridge with thick package, bands or strong cords and follow the instructions for transportation on the package for re-transportation.
- Remove movable parts (shelves, accessories, vegetable bins etc.) or fix them into the fridge against shocks using bands during re-positioning and transportation.
- An ambient sensor, main board and hinge covers are available on your refrigerator. During cleaning, make sure no fluid enters this area.

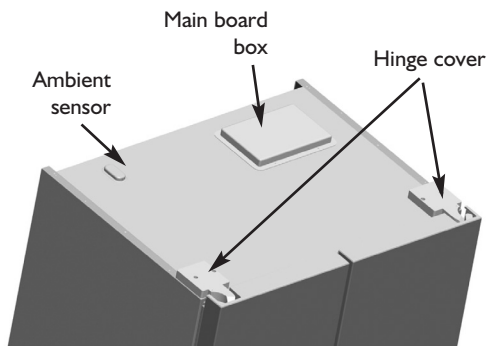



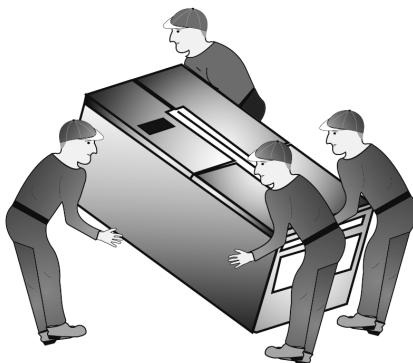


Carry your refrigerator with 4 people as indicated in the figure.



TROUBLESHOOTING GUIDE

Check Warnings;

Your fridge warns you if the temperatures for cooler and freezer are in improper levels or when a problem occurs in the appliance. You can see these warnings on the indicator display.

ERROR DISPLAY	ERROR TYPE	REMARK	DO's
 <p>and audible warning</p>	Error warning	One or more equipment of the product has been deactivated or there is cooling problem.	Contact a service as soon as possible.
	Freezer department is not cold enough	May arise due to longperiod energy cut-off or failure of cooling equipment.	<ol style="list-style-type: none"> 1. In case of melted product in compartment, do not refill and consume up as soon as possible. 2. Until temperature of compartment returns to normal (warning disappears), operate in a lower temperature or in Super Freeze Mode. 3. Do not place fresh food in compartment unless this warning disappears.
	Freezer department is not cold enough	Cooler has lost its ideal temperature.	<ol style="list-style-type: none"> 1. Until temperature of compartment returns to normal (warning disappears), operate in a lower temperature or in Super Cool Mode. 2. Do not open door until this error disappears.
	Cooler compartment is overcool.	Our product in cooler compartment are in risk of freezing.	<ol style="list-style-type: none"> 1. If Super Cool is active, cancel it. 2. Operate under lower setting value.
	Mains voltage has decreased under 170V.	<p>This is not an error; it is intended for warning and precaution.</p> <p>When mains voltage restores to normal value, the warning will disappear.</p>	—

Check Warnings;**If your fridge is not operating;**

- Is there any electrical faults?
- Is your appliance plugged?
- Is the fuse of the receptacle that the plug is plugged or the main fuse blown?
- Is there any fault in the socket? Examine this by plugging your fridge into a socket outlet which you are sure that is working.

If your fridge is operating too loudly**Normal Noises;****Cracking (Ice cracking) Noise:**

- During automatic defrosting.
- When the appliance is cooled or warmed (due to expansion of appliance material).

Short cracking: Heard when the thermostat switches the compressor on/off.

Valve sound: Ticking sound is normal when your refrigerator runs. This sound is released from a valve behind your refrigerator.

Vacuuming sound: After your refrigerator's doors are opened and closed, a short sound may be heard due to pressure difference. That is normal exactly.

Normal motor noise: This noise means that the compressor operates normally. Compressor may cause more noise for a short time when it is activated.

Bubbling noise and splash: This noise is caused by the flow of the refrigerant in the tubes of the system.

Water flow noise: Normal flow noise of water flowing to the evaporation container during defrosting. This noise can be heard during defrosting.

Air blow noise: Normal fan noise. This noise can be heard in No-Frost fridge during normal operation of the system due to the circulation of air.

If humidity builds up inside the fridge;

- Are all food packed properly? Are the containers dried before placing them in the fridge?
- Are the fridge doors opened frequently? Humidity of the room gets in the fridge when the doors are opened. Humidity build up will be faster when you open the doors more frequently, especially if the humidity of the room is high.

If the doors are not opened and closed properly;

- Do the food packages prevent closing of the door?
- Are the door compartments, shelves and drawers placed properly?
- Are door joints broken or torn?
- Is your fridge on a level surface?

IMPORTANT NOTES:

- After sudden power breakdowns or after unplugging the appliance, Thermal protector will cut off the power of compressor temporarily because the gas in the cooling system is not stabilized yet. Your fridge will start after 4 or 5 minutes, there is nothing to worry about.
- If you will not use your fridge for a long time (e.g. in summer holidays) unplug it. After defrosting, clean your fridge and leave the door open to prevent humidity and smell.
- If the problem persists after you have followed all the instructions above, please consult to the nearest Authorized Service.
- The appliance you bought is designed for home type use and can be used only at home and for the stated purposes. It is not suitable for commercial or common use. If the consumer use the appliance in a way that does not comply with these features, we emphasize that the producer and the dealer shall not be responsible for any repair and failure within the guarantee period.

AFTER-SALES SERVICE

Before contacting After Sales Service:

1. See if you can solve the problem yourself with the help of the "Troubleshooting guide".
2. Switch the appliance on again to see if the problem persists.
If it does, switch off and wait for about an hour before switching on.
3. If the problem persists after this course of action, contact After-sales Service.

Specify:

- the nature of the problem,
- the model,
- the Service number (the number after the word SERVICE on the rating plate on the inside of the appliance),

- your full address,
- your telephone number and area code.

SERVICE 0000 000 00000



Note:

The direction of door opening can be changed.

If this operation is performed by After-sales Service it is not covered by the warranty.

ELECTRICAL CONNECTION

1) For Great Britain only

Warning - this appliance must be earthed

Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:


1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

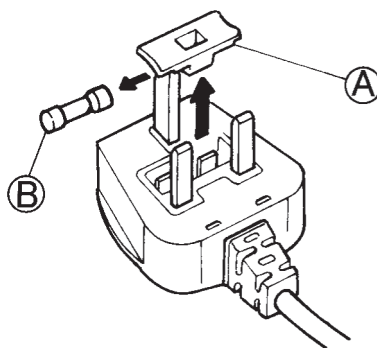

2) For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

3) Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations.