



THANK YOU FOR BUYING A WHIRLPOOL PRODUCT
In order to receive a more complete assistance, please register your product on www.whirlpool.eu/register



Before using the appliance carefully read the Safety Instruction.


PRODUCT DESCRIPTION

FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply. Connect the appliance to the power supply it starts the operation automatically. The ideal storage temperatures for the food are preset in the factory.

After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available). If the audible signal sounds, it means that the temperature alarm has intervened: press the button to switch off the acoustic alarms.

CONTROL PANEL

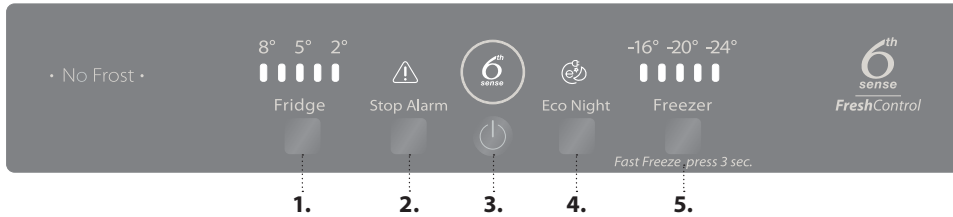

1. Refrigerator compartment temperature
2. Turning off the sound alarm
3. On/stand-by
4. "Eco Night" button
5. Freezer compartment temperature - Fast freeze

 
6TH SENSE FRESH CONTROL

The appliance is automatically able to quickly reach the optimal internal preservation temperature. The function enables to control also the humidity of the appliance. In order for it to function correctly, the fan must also be turned on. It is possible to turn the function on/off (see Fan description).

FAN*

The Fan improves temperature distribution inside the product, allowing better preservation of stored food and reduction of excess humidity. The fan is switched on by default and can be activate/deactivate by pressing the button on the base (as shown in the figure). If the ambient temperature exceeds 27°C, or if drops of water are present on the glass shelves, it is essential that the fan is on to ensure the proper preservation of the food. Deactivation of the fan allows energy consumption to be optimised.

Note: the fan restarts automatically after a power cut or after turning off the appliance. Do not obstruct the air intake area with food items.



ANTIBACTERIAL FILTER*

Remove it from the box placed in the Fruit and vegetable drawer and insert into the cover of fan. The replacement procedure is included in the filter box.

TURNING OFF THE SOUND ALARM

To turn off the sound alarm, briefly press the "Stop Alarm" button.

ON/STAND-BY

 
Press the button for 3 seconds to turn the appliance off. Press the button again briefly to reactivate the appliance.

Note: this does not disconnect the appliance from the power supply.

REFRIGERATOR COMPARTMENT TEMPERATURE

It is possible to set a different temperature with the "Fridge" button.


There are five possible controls.



FREEZER COMPARTMENT TEMPERATURE

A different temperature can be set using the "Freezer" button.

 Five adjustments can be made.




FAST FREEZE

Press the "Freezer" button for 3 seconds 24 hours before putting large quantities of food in the freezing zone. When the function is active, the sequence shown in the figure will appear on the display.

The function turns off automatically after 48 hours, or manually by pressing the "Freezer" button again.

 Note: avoid a direct contact between the fresh food and the food that is already frozen. To optimise the freezing speed, drawers can be removed and the food can be placed directly on the bottom of the compartment.



FREEZER COMPARTMENT

No Frost freezers provide chilled air circulation around the storage areas, and prevent the formation of ice, thereby completely eliminating the need for defrosting.

Frozen items don't stick to the walls, labeling stays legible and storage space remains neat and clear.

The freezing zone's drawer/compartment is shown in the picture above.



ECO NIGHT FUNCTION

The Eco night function enables the appliance's energy consumption to be concentrated in the hours that correspond to the cheapest electricity tariff (generally at night), when electricity is freely available and costs less compared to daytime (only in countries that utilize a multi-tariff system based on time of day - check your energy tariff with your local electricity utility company). To activate the function, press the Eco night button at the time the cheap tariff begins (depending on your specific tariff). For example, if the cheap rate begins at 8 pm, press the button at that time. When the Eco night LED is ON, the function is active. Once the function has been activated, the appliance automatically adapts energy consumption based on the time selected, i.e. consuming less energy during the day than at night.

Important: To operate properly, the function must be active during both night and day. The function remains active until deactivated (or it deactivates in the event of a blackout or appliance switch-off). To deactivate the function, press the button again. When the Eco night LED is OFF, the function is not active.


Note: the appliance's declared energy consumption refers to operation with the Eco night function deactivated.

* Available only on certain models

"0° ZONE" COMPARTMENT*

The "0° ZONE" compartment is specifically designed to maintain a low temperature and the correct humidity to preserve fresh food for longer (for example, meat, fish, fruits and winter vegetables).


Humidity control technology coupled with Active0 provides the best food preservation when the food is not completely packed.

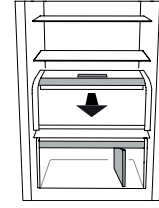

TURNING ON AND TURNING OFF THE COMPARTMENT

The internal temperature of the compartment is approximately 0° when the compartment is turned on.

To turn on the compartment, press the button (1) for more than one second until the symbol (2) lights up. The lit symbol (2) means that the compartment is working. Press the button (1) again for more than one second to turn off the compartment. The temperature inside depends on the general temperature of the refrigerator.

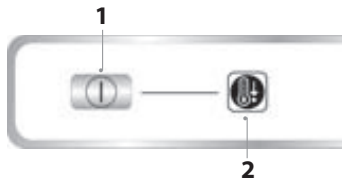

For the correct functioning of the "0° ZONE" compartment, it is necessary that:

- the appliance is turned on;
- the fridge temperature is between +2°C and +6°C;
- the "0° ZONE" compartment is turned on
- Vacation Mode and Stand by are not selected

Note:

- if the symbol does not light up when you turn on the compartment, check that the drawer is properly inserted; if the problem persists contact the authorised Technical Assistance Service;
- when the "0° ZONE" compartment is inserted in the appliance you may hear a faint noise, which you should consider as normal;

Important: be careful when positioning food and containers that are small in size on the upper shelf of the "0° ZONE" compartment in order to prevent them accidentally falling between the shelf and the back wall of the refrigerator compartment.

REMOVING THE "0° ZONE" COMPARTMENT

Carry out the following steps:

1. To make it easier to remove the compartment, we recommend that you empty (and possibly remove) the lower door shelves.
2. Remove the compartment by rotating it upwards.
3. Remove the white plastic shelf under the compartment.

Note: it is not possible to remove the upper shelf and side supports.


To use the "0° ZONE" compartment again, carefully reposition the white plastic shelf under the compartment before inserting the drawer and turning the function back on.

To have a larger refrigerator volume and to reduce energy consumption, it is recommended to remove the "0° ZONE" compartment.


 
 



Clean the compartment and its components occasionally using a cloth and a solution of warm water (taking care not to submerge the white plastic shelf under the drawer) and neutral cleaning agents specifically for cleaning the inside of the refrigerator. Do not use abrasive cleaning agents.

Before cleaning the compartment (also externally) it is necessary to remove the drawer to disconnect the electrical supply.

 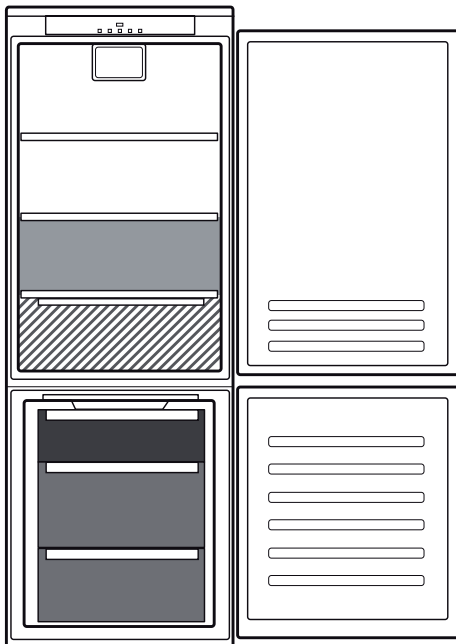HOW TO STORE FOOD AND BEVERAGE








Legend

- | | |
|---|---|
|  | TEMPERATE ZONE
Suggested for storage of tropical fruit, cans, drink, eggs, sauces, pickles, butter, jam |
|  | COOL ZONE
Suggested for storage of cheese, milk, daily food, delicatessen, yoghurt |
|  | COOLEST AREA
Suggested for storage of cold cuts, desserts, meat and fish |
|  | FRUIT & VEGETABLE DRAWER |
|  | FREEZER DRAWERS |
|  | FREEZING ZONE DRAWER
(Max cool zone)
Suggested to freeze fresh/cooked food |

* Available only on certain models

TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The control panel is switched off, the appliance does not work.	The appliance could be in On/Standby mode. There may be an appliance power supply problem.	Activate the appliance with the On/Standby button. Make sure: <ul style="list-style-type: none"> • there is not a power outage • the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered) • the household electrical system protection devices are efficient • the power cable is not broken.
The inside light does not work.	The light may need replacing.	Models with lamp: disconnect the appliance from the power supply, check the lamp and, if necessary, replace it with a new one (see the section "Lamp or LED replacement").
	The appliance could be in On/Standby mode.	Models with LED lights: contact the authorised Service Centre. Activate the appliance with the On/Standby button.
The temperature inside the compartments is not low enough.	There could be various causes (see "Cures").	Make sure: <ul style="list-style-type: none"> • the doors close properly • the appliance is not installed near a heat source • the set temperature is adequate • the circulation of air through the vents at the bottom of the appliance is not obstructed.
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrost water drain hole (see the section "Appliance Maintenance and Cleaning").
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect. It prevents condensation from forming.	No remedy is necessary.
The red light  flashes and an acoustic alarm sounds.	Door open alarm Activated when a door remains open for a long period of time.	Close the doors of the product to deactivate the acoustic alarm. If the acoustic alarm does not go off it is a power failure alarm (see the section Power failure alarm).
The red light  comes on, an acoustic alarm sounds and the refrigerator compartment temperature indicators flash as shown in the figure: 	Malfunction alarm The alarm indicates a fault in a technical component.	Call the authorised Service Centre. Press the "Stop Alarm" button to deactivate the acoustic signal.
The red light flashes  and an acoustic alarm sounds even with the door closed. The freezer compartment temperature indicators may flash.	Blackout alarm Activated when the power is cut off for an extended period of time, causing the freezer compartment temperature to rise.	Press the stop alarm button to deactivate the acoustic signal. If the freezer compartment has not yet reached the optimum food storage temperature, the freezer compartment temperature alarm may be activated (see freezer compartment temperature alarm). Check the food before consuming it.
The red light comes on (without flashing)  , an acoustic alarm sounds and the freezer compartment temperature indicators flash.	Freezer compartment temperature alarm The temperature alarm indicates that the temperature of the compartment is not at its optimum level. This may happen: when it is first used, after defrosting and/or cleaning, if large amounts of food are placed inside the freezer or when the freezer door has not been shut properly.	Press the Stop Alarm button to deactivate the acoustic signal. When the optimal temperature conditions have been reached, the red light switches off automatically. If the temperature alarm persists, contact the Authorised Service Centre.

* Available only on certain models



Policies, standard documentation and additional product information can be found by:

- Visiting our website docs.whirlpool.eu
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

The model information can be retrieved using the QR-Code indicated on the energy label. The label also includes the model identifier that can be used to consult the <https://eprel.ec.europa.eu> database portal.



Whirlpool



400011195247