 
 


 





 












 




The diagram shows the control panel of a Whirlpool washing machine. The central feature is a large circular dial (E) with various wash programs and temperatures. Above the dial is a horizontal bar (G) with five segments: Prewash, Wash, Rinse, Rinse hold, and Spin/Drain. To the left of the dial are three buttons: 'Spin speed reduction X100 rpm' (D), 'Rinse & Spin' (C), and 'Rinse hold' (B). To the right of the dial are three buttons: 'Door open' (A), 'Start/Pause' (H), and 'Spin/Drain' (F). The dial itself has several settings: 'Drain' (95°), 'Short spin' (60°), 'Spin' (40°), 'Rinse & Spin' (30°), 'Cotton' (60°), 'Synthetics' (60°), 'Wool/Hand' (40°), 'Delicates' (30°), 'Quick' (30°), and '30° Quick' (30°). The Whirlpool logo is on the left side of the panel.




- E. Programme selector
- F. "Start/Pause" button 
- G. Programme sequence indicator
- H. "Reset" button 

Programme	Care Labels	Max. Load kg	Type of wash / Notes <i>- respect the manufacturer's recommendations on the care label</i>	Detergents and Additives			Special options		Max. Spin Speed rpm
				Pre-wash 	Main Wash 	Softener 	Spin speed reduction X00 rpm	Rinse hold	
 Cotton with prewash 95 °C		6.0	Normally to heavily soiled and robust white cotton laundry. In case of heavy soiling or stains, you can add an oxygen-based bleach additive which can be used at 95°C. <i>This programme eliminates bacteria, ensuring sanitization of your laundry.</i>	Yes	Yes ¹⁾	*	*	*	Max.
Cotton 30 - 40 - 60 °C	  	6.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	–	Yes	*	*	*	Max.
 Synthetics with prewash 60 °C		3.0	Heavily soiled laundry made of artificial fibres (like polyester, polyacryle, viscose etc.) or their blends with cotton.	Yes	Yes ¹⁾	*	*	*	Max.
Synthetics 30 - 40 - 60 °C	   	3.0	Normally soiled garments made of artificial fibres (like polyester, polyacryl, viscose etc.) or their blends with cotton.	–	Yes	*	*	*	Max.
Delicates 30 °C	 	1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	–	Yes	*	*	*	1000 ²⁾
Quick 30' 30 °C		3.0	Shortly worn clothing made of cotton, polyester, polyamide and blends with cotton. <i>Brief programme to refresh your laundry.</i>	–	Yes	*	*	*	Max.
Wool/Hand Cold - 40 °C	 	1.0	Woollens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk (keep to care label!), linen, wool and viscose marked as handwashable.	–	Yes	*	*	*	600 ²⁾
 Cotton  	 	6.0	Normally soiled cotton laundry. At 40°C and 60°C standard cotton programme and most favourable programme in terms of combined water and energy consumption for washing cotton laundry. - Reference programme for the Energy Label.	–	Yes	*	*	*	Max.
<i>Rinse & Spin</i>	–	6.0	<i>Same as the last rinse and the final spin in the “Cotton” programme.</i>	–	–	*	*	*	Max.
<i>Spin</i>	–	6.0	<i>In this programme spinning is intensive. Same as the spin cycle in the “Cotton” programme.</i>	–	–	–	*	–	Max.
<i>Short Spin</i>	–	1.0	<i>In this programme spinning is gentle. Same as the spin cycle in the “Wool” programme.</i>	–	–	–	*	–	Max.
<i>Drain</i>	–	–	<i>Drain only - no spinning. Alternative method of terminating programme after “Rinse hold”</i>	–	–	–	–	–	–

2) For improved garment care spin speed is restricted in these programmes.


CONSUMPTION DATA

Power consumption in off-mode 0.16 W / in left-on mode 0.16 W

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. programme duration (hours : minutes) ☺	 %
Cotton with prewash	95	6.0	69 ****	2.10	2:18	59
Cotton	60	6.0	49	1.02	2:30	
Cotton	40	6.0	51	0.92	2:45	
Synthetics	60	3.0	50**	1.00	2:15	40
Synthetics	40	3.0	46	0.70	2:15	
Delicates	30	1.5	50	0.50	0:46	
Quick 30'	30	3.0	40	0.30	0:30	
Wool/Hand	40	1.0	45	0.60	0:40	
Wool/Hand	cold	1.0	45	0.10	0:35	
☺ Cotton <60° *	60	6.0	49	0.78	4:00	53
☺ Cotton <60° *	60	3.0	37	0.69	2:20 ***	
☺ Cotton <40° *	40	3.0	37	0.58	2:30 ***	

Consumption values were measured in normalized conditions, in compliance with IEC/EN 60456. In the home, they may vary depending on the individual water supply pressure and temperature, the load and the type of wash. The consumption data indicated are based on an inlet water temperature of approx. 15°C through the cold fill valve as well as the hot fill valve (if available). If your washing machine has a hot fill valve, connection of this valve to hot water supply will lower the energy consumption by reduced heating times, depending on the individual hot fill inlet water temperature. Water and energy consumptions refer to the default setting of the programmes, with temperature and load as indicated in the table; selecting any options or changing the spin speed will also change the consumption data.

☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

 Approximate remaining moisture content (%). After programme end, in default programme setting.

* Reference programmes for Energy Label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature.

** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

*** Automatic adaptation of programme duration after detection of wash load

**** Cool down water and prewash water

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Load the laundry, close the door and add detergents as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

Turn the **programme selector** to the desired programme and temperature. The indication lamp next to **"Start/Pause"** button blinks. Your washing machine is designed to save energy. After the end of a programme, or when a programme is selected but not yet started, the washing machine will therefore switch off automatically after about a quarter of an hour. To switch the washing machine on again, turn the programme selector to "O" and afterwards to the desired programme again.

SELECT ANY DESIRED OPTION

Push the button of any option desired - the respective indication lamp lights up. If the combination of programme and additional option(s) is not possible, the indication lights switch off automatically.

"Spin speed reduction" button

- Reduces the predetermined automatic maximum spin speed to treat your laundry more gently.

"Rinse hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- Particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

- The programme stops to "Rinse hold" at the time the "Rinse hold" indicator in the programme flow bar is on. The indication lamp next to the **"Start/Pause"** button blinks.

Terminate the "Rinse hold" option :

- Press the **"Start/Pause"** button ; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector to the "Drain" programme and press the **"Start/Pause"** button.

PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The indication lamp next to the **"Start/Pause"** button lights up. The programme flow bar shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.


"DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show the the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset) a running programme before the end".

FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

"Water tap closed": no or not sufficient inlet water.

 **"Service"**: failure or malfunction of an electrical component.

"Clean pump": waste water is not pumped out.

PROGRAMME END

The "Door open" indicator lights up. After about a quarter of an hour, the washing machine will switch off completely to save energy.

- Turn the programme selector to the "O" position.
- Close the water tap.
- Open the door and unload the machine.
- Leave the door ajar to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

- Press the **"Start/Pause"** button to pause the programme. The light blinks.
- Select the new programme (with temperature), and any options if you want.
- Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end.

- Press and hold the **"Reset"** button for a few seconds. Any existing water is drained out. It may last some time until the door can be opened.