



**THANK YOU FOR BUYING A WHIRLPOOL PRODUCT**  
In order to receive a more complete assistance, please register your product on [www.whirlpool.eu/register](http://www.whirlpool.eu/register)



**Before using the appliance carefully read the Safety Instruction.**

## PRODUCT DESCRIPTION

### FIRST TIME USE

#### AIR VENT (FOR THE SUCTION VERSIONS)

Connect the hood and discharge holes on the walls with a diameter equivalent to the air outlet (connection flange).  
Using the tubes and discharge holes on walls with smaller dimensions will cause a diminution of the suction performance and a drastic increase in noise.  
Any responsibility in the matter is therefore declined.  
! Use a duct of the minimum indispensable length.  
! Use a duct with as few elbows as possible (maximum elbow angle: 90°).  
! Avoid drastic changes in the duct cross-section.  
! The company declines any responsibility whenever these regulations are not respected.

#### FILTERING OR DUCTING?

! Your cooker hood is ready to be used in suction version.  
To use the hood in filtering version the special ACCESSORY KIT must be installed.  
Check if the ACCESSORY KIT is furnished or must be bought separately.  
Note: If furnished, in certain cases, the additional activated carbon filtering

system may be installed on the hood. Information about the conversion of the hood from suction version to filtering version is present in the Manual "Safety Instructions & Installation".



#### DUCTING VERSION

In this case the fumes are conveyed outside of the building by means of a special pipe connected with the connection ring located on top of the hood.

**Attention!** The exhausting pipe is not supplied and must be purchased apart. Diameter of the exhausting pipe must be equal to that of the connection ring.

**Attention!** If the hood is supplied with active charcoal filter, then it must be removed.



#### FILTER VERSION

The aspirated air will be degreased and deodorised before being fed back into the room.

In order to use the hood in this version, you have to install a system of additional filtering based on activated charcoal.

### CONTROL PANEL



SL1



SL2



- T1.** ON/OFF "Night Light"
- T2.** Hob lights ON/OFF – Select the colour temperature
- T3.** Operation "ZEN Mode"
- T4.** Motor ON/OFF
- T5.** "POWER BOOST 1" function
- T6.** "POWER BOOST 2" function
- T7.** Automatic Mode "Cook Sense"
- T8.** Filter saturation indicator
- T9.** ON/OFF operating mode "Daily Air Sense"
- T10.** ON/OFF operating mode "Intensive Air Sense"

#### T1. ON/OFF "NIGHT LIGHT"

Press to switch the soft background lighting on or off.

#### T2. HOB LIGHTS ON/OFF – SELECT THE COLOUR TEMPERATURE

Press to switch the hob lights on or off.

- With the lights on, use your finger to swipe right or left over the **SL1** LED strip to increase or decrease the intensity of the light.

#### To set the colour temperature of the lighting

- Press (and hold) again,
- using your finger to swipe right or left over the **SL1** LED strip to set the intensity of the light colder or warmer.

If you do not change the colour for five seconds, **SL1** will flash at the colour setting you have selected and an audible signal will sound to indicate that the system has saved this configuration.

Please note: The light will come on at the last intensity you set before switching the appliance off.

#### T3. OPERATION "ZEN MODE"

Press to activate or deactivate the "ZEN" extraction mode.  
This function makes it possible to activate an extraction speed with the perfect balance between quietness and extraction efficiency.

#### T4. MOTOR ON/OFF

Press to switch the **extraction motor** on or off.

- With the motor on, use your finger to swipe right or left over the **SL2** LED strip to increase or decrease the extraction speed.

#### T5. "POWER BOOST 1" FUNCTION

With the extraction motor on, press T5 to activate the "**POWER BOOST 1**" **intensive extraction** speed (time-controlled).

Please note: the hood will go back to running at the speed it was previously using after five minutes.

#### T6. "POWER BOOST 2" FUNCTION"

With the extraction motor on, press T6 to activate the "**POWER BOOST 2**" **intensive extraction** speed (time-controlled).

Please note: the hood will go back to running at the speed it was previously using after five minutes.

#### T7. AUTOMATIC MODE "COOK SENSE"

The hood will increase the extraction speed to 1 automatically if the sensor in the hood detects that the ambient conditions require this. If the ambient conditions do not change – and the hood is already using extraction speed 1 – the hood will switch off after five minutes.

Please note: to make sure this function is used correctly, please **configure the parameters for automatic mode** first as described in the relevant section.

Please note: when using automatic mode, if you change any other functions that control the speed, the "Cook Sense" function will switch off.

## T8. FILTER SATURATION INDICATORS

At regular intervals, the hood signals the need to perform filter maintenance.

Please note: The indicators will only work when the hood is on.

**T8 button lit:** Carry out maintenance on the grease filter.

**T8 button flashing:** carry out maintenance of the charcoal filter.

### Resetting the filter saturation indicators:

Please note: This must be done with the hood switched on.

Press and hold the **T8** button.

### Activating the carbon filter saturation indicator

Please note: This must be done with the extraction motor switched off.

This indicator is usually deactivated – press and hold the **T3** and **T10** buttons simultaneously to activate the function: The buttons will light up to indicate activation.

To deactivate the function, press and hold the same buttons (**T3** and **T10**) again: The buttons will flash briefly and then switch off to indicate deactivation.

## T9. ON/OFF OPERATING MODE “DAILY AIR SENSE”

The hood will increase the extraction speed to **1** automatically if the sensor in the hood detects that the ambient conditions require this. If the extraction speed does not change owing to the ambient conditions detected, the hood will switch off after two hours. The hood will switch off in any case after five hours in use, regardless of the operating mode.

Please note: to make sure this function is used correctly, please **configure the parameters for automatic mode** first as described in the relevant section.

## T10. ON/OFF OPERATING MODE “INTENSIVE AIR SENSE”

The hood will increase the extraction speed to **5** automatically if the sensor in the hood detects that the ambient conditions require this. If the extraction speed does not change owing to the ambient conditions detected, the hood will switch off after two hours. The hood will switch off in any case after five hours in use, regardless of the operating mode.

Please note: to make sure this function is used correctly, please **configure the parameters for automatic mode** first as described in the relevant section.

## TECHNICAL DATA

Height (cm)	Width (cm)	Depth (cm)	Ø of exhaust tube (cm)
110 - 129.5	89.8	32	15

## CLEANING AND MAINTENANCE

### CLEANING

- **Do not use steam-cleaning equipment.**
- **Disconnect the appliance from the mains.**

**Important:** do not use corrosive or abrasive detergents. If any such products unintentionally come into contact with the appliance, clean the appliance immediately with a damp cloth. Do not use alcohol.

- Clean the surfaces with a damp cloth. If it is very dirty, add a few drops of washing-up detergent to the water. Finish off with a dry cloth.

**Important:** do not use abrasive sponges or metallic scrapers or scourers. Over time, these can ruin the enamel surfaces.

- Use detergents specifically designed for cleaning the appliance and follow the manufacturer's instructions.

**Important:** clean the filters at least once a month to remove oil and grease residue.

### MAINTENANCE OF THE GREASE FILTERS

This must be cleaned once a month (or when the filter saturation indication system - if envisaged on the model in possession - indicates this necessity) using non aggressive detergents, either by hand or in the dishwasher, which must be set to a low temperature and a short cycle.

## CONFIGURING THE PARAMETERS FOR AUTOMATIC MODE

To make sure that automatic mode is used correctly, you will need to calibrate the hood and select the hob type.

### Calibrating the hood

Please note: this must be done with the appliance on standby, i.e. one minute after switching off the motor.

Press and hold the **T4** button for five seconds.

Extraction speed **1** will come on and the **T4** button will flash to indicate that hood calibration has started (this will take approximately 15 minutes).

Please note: To stop the calibration process, press and hold the **T4** button for five seconds. Calibration will then be invalidated and will therefore need to be repeated.

Please note: Calibration will be carried out automatically when the power supply to the product is switched on for the first time. **T4** will flash. Wait 15 minutes for calibration to complete.

### Selecting the hob type

Please note: this must be done with the appliance on standby, i.e. one minute after switching off the motor.

Press and hold the **T9** and **T10** buttons for five seconds.


The **T9** and **T10** buttons will light up.

If using gas to power the hob, press the **T9** button – the button will flash to indicate that this has been selected.

If using electricity to power the hob, press the **T10** button – the button will flash to indicate that this has been selected.

Once pressed, the button will flash for three seconds to indicate that your selection has been saved.

When washed in a dishwasher, the grease filter may discolour slightly, but this does not affect its filtering capacity. Pull out the handle to remove the filter. Once the filter has been washed and left to dry, proceed in reverse order to refit the filter.

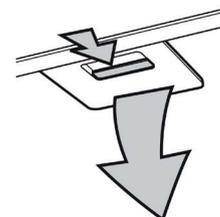


## MAINTENANCE OF THE CHARCOAL FILTER (FOR FILTRATION MODELS ONLY)

This filter retains the unpleasant odours produced during cooking. Saturation of the carbon filter occurs after a relatively long use, however this depends on the type of cooking and how regularly the grease filter is cleaned. Regardless, it is necessary to replace the cartridge every 4 months. It CANNOT be washed or recycled.

### Fitting or replacing the carbon filter

1. Disconnect the hood from the mains.
2. Remove the grease filters.
3. Fit 2 charcoal filters (one each side of the conveyour), bajonet attachment.
4. Reinstall the grease filter in place.

Proceed in reverse order to remove.

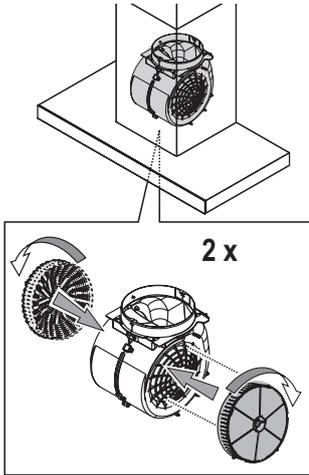

## REPLACING THE LAMPS

The hood is equipped with an LED lighting system. LEDs ensure excellent illumination, have a service life up to 10 times longer than traditional bulbs, and offer up to 90% energy savings.

Note: For replacement LED, please contact the Technical After-sales Service Centre.


## TROUBLESHOOTING

Problem	Solutions
The appliance does not work.	<ul style="list-style-type: none"><li>• Check the mains voltage and whether the appliance is connected to the power supply;</li><li>• Check that a speed has been selected;</li><li>• Switch the appliance off and on again to see if the fault persists.</li></ul>
The hood is not extracting air sufficiently.	<ul style="list-style-type: none"><li>• Check that the air extraction speed is set to the desired level;</li><li>• Check that the filters are clean;</li><li>• Check the air vents for any obstructions.</li></ul>
The hood has turned off during normal functioning.	<ul style="list-style-type: none"><li>• Check that the power has not been disconnected;</li><li>• Check that the omnipolar disconnection device has not tripped.</li></ul>



You can download the Safety Instructions, User Manual, Product Fiche and Energy data by:

- Visiting our website [docs.whirlpool.eu](https://docs.whirlpool.eu)
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

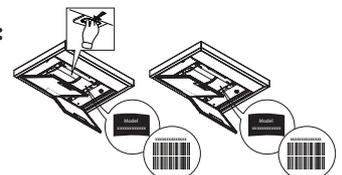

Whirlpool



400011206675