



THANK YOU FOR BUYING AN ARISTON PRODUCT
In order to receive a more complete assistance, please register your product on www.aristonchannel.com



Before using the appliance carefully read the Safety Instruction.


PRODUCT DESCRIPTION

FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply. Connect the appliance to the power supply it starts the operation automatically. The ideal storage temperatures for the food are preset in the factory.

After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available). If the audible signal sounds, it means that the temperature alarm has intervened: press the button to switch off the acoustic alarms.


CONTROL PANEL

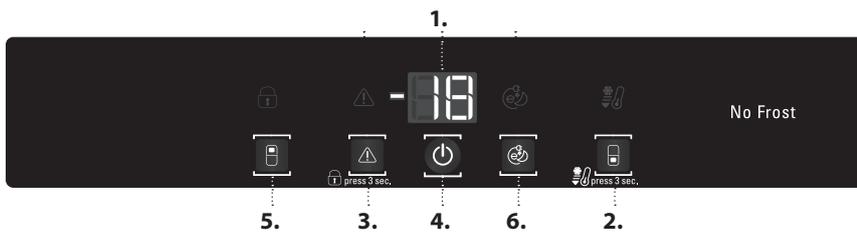

1. Temperature Display
2. Freezer temperature - Fast freeze
3. Turning off the sound alarm - Child Lock
4. On/stand-by
5. Refrigerator temperature
6. EcoNight

FAN*

You can turn the Fan on/off by pressing the button on the base (as shown in the figure). If the ambient temperature exceeds 27°C, or if drops of water are present on the glass shelves, it is essential that the fan is on to ensure the proper preservation of the food. Deactivation of the fan allows energy consumption to be optimised.

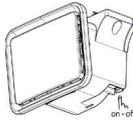

ANTIBACTERIAL FILTER*

Remove it from the box placed in the Fruit and vegetable drawer and insert into the cover of fan. The replacement procedure is included in the filter box.

ON/STAND-BY

Press the button for 3 seconds to turn the appliance off. In Stand-by mode, two dashes light up on the display and the light in the refrigerator compartment does not turn on.

Note: this does not disconnect the appliance from the power supply.

TEMPERATURE DISPLAY

The display may alternately show the refrigerator compartment temperature (between 2°C and 8°C) or the temperature of the freezer compartment (between -16°C and -24°C).

ECO NIGHT FUNCTION

The Eco night function enables the appliance's energy consumption to be concentrated in the hours that correspond to the cheapest electricity tariff (generally at night), when electricity is freely available and costs less compared to daytime (only in countries that utilize a multi-tariff system based on time of day - check your energy tariff with your local electricity utility company). To activate the function, press the button at the time the cheap tariff begins (depending on your specific tariff). For example, if the cheap rate begins at 8 pm, press the button at that time. When the Eco night LED is ON, the function is active. Once the function has been activated, the appliance automatically adapts energy consumption based on the time selected, i.e. consuming less energy during the day than at night.

Important: To operate properly, the function must be active during both night and day. The function remains active until deactivated (or it deactivates in the event of a blackout or appliance switch-off). To deactivate the function, press the button again. When the Eco night LED is OFF, the function is not active.

Note: the appliance's declared energy consumption refers to operation with the Eco night function deactivated.



TURNING OFF THE SOUND ALARM

To turn off the sound alarm, briefly press the button.



"CHILD LOCK"

The "Child Lock" can be activated/deactivated by keeping the button pressed for 3 seconds, until a confirmation sound is heard (the icon lights up).

If you press any button while the "Child Lock" is active, you will hear a sound and the "Child Lock" icon will flash.



REFRIGERATOR COMPARTMENT TEMPERATURE

It is possible to set a different temperature with the button.



FREEZER COMPARTMENT TEMPERATURE

It is possible to set a different temperature with the button.



FAST FREEZE

Press the button for 3 seconds 24 hours before putting large quantities of food to freeze in the freezer compartment. When the function is turned on the icon lights up . The function turns off automatically after 48 hours, or manually by pressing the button again for 3 seconds.


Note: avoid a direct contact between the fresh food and the food that is already frozen. To optimise the freezing speed, drawers can be removed and the food can be placed directly on the bottom of the compartment.

* Available only on certain models

"0° ZONE" COMPARTMENT*

The "0° ZONE" compartment is specifically designed to maintain a low temperature and the correct humidity to preserve fresh food for longer (for example, meat, fish, fruits and winter vegetables).


Humidity control technology coupled with Active0 provides the best food preservation when the food is not completely packed.

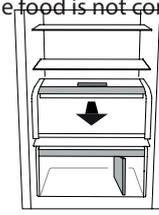

TURNING ON AND TURNING OFF THE COMPARTMENT

The internal temperature of the compartment is approximately 0° when the compartment is turned on.

To turn on the compartment, press the button (1) for more than one second until the symbol (2) lights up. The lit symbol (2) means that the compartment is working. Press the button (1) again for more than one second to turn off the compartment. The temperature inside depends on the general temperature of the refrigerator.

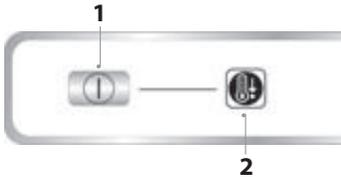

For the correct functioning of the "0° ZONE" compartment, it is necessary that:

- the appliance is turned on;

REMOVING THE "0° ZONE" COMPARTMENT

Carry out the following steps:

7. To make it easier to remove the compartment, we recommend that you empty (and possibly remove) the lower door shelves.
8. Remove the compartment by rotating it upwards.
9. Remove the white plastic shelf under the compartment.

Note: it is not possible to remove the upper shelf and side supports.

To use the "0° ZONE" compartment again, carefully reposition the white plastic shelf under the compartment before inserting the drawer and turning the function back on.

"FOOD CARE ZONE"*

"Food Care Zone" drawer is specifically designed to maintain a low temperature to preserve fresh food for longer time (for example, fresh pasta, sour cream, pesto/salsa, homemade preparation, pastry cream, pudding, cream cheese, cold cuts, desserts, meat and fish). The internal temperature of the drawer is between +3 °C and -2 °C.

- the fridge temperature is between +2°C and +6°C;
- the "0° ZONE" compartment is turned on
- Vacation Mode and Stand by are not selected

Note:

- if the symbol does not light up when you turn on the compartment, check that the drawer is properly inserted; if the problem persists contact the authorised Technical Assistance Service;
- when the "0° ZONE" compartment is inserted in the appliance you may hear a faint noise, which you should consider as normal;

Important: be careful when positioning food and containers that are small in size on the upper shelf of the "0° ZONE" compartment in order to prevent them accidentally falling between the shelf and the back wall of the refrigerator compartment.

To have a larger refrigerator volume and to reduce energy consumption, it is recommended to remove the "0° ZONE" compartment.

Clean the compartment and its components occasionally using a cloth and a solution of warm water (taking care not to submerge the white plastic shelf under the drawer) and neutral cleaning agents specifically for cleaning the inside of the refrigerator. Do not use abrasive cleaning agents.


Before cleaning the compartment (also externally) it is necessary to remove the drawer to disconnect the electrical supply.

For the correct functioning of the "Food Care Zone" drawer, it is necessary that:



- the appliance is turned on
- one of the following special functions is not selected: Standby, Cooling-Off, Vacation (in this case, remove the food contained in it).

* Available only on certain models

HOW TO STORE FOOD AND BEVERAGE

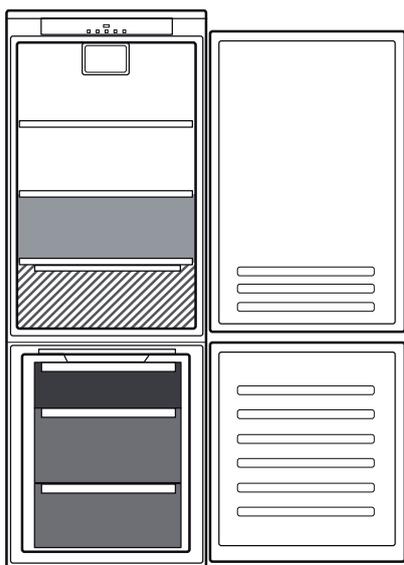

Legend

  	TEMPERATURE ZONE Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam
	COOL ZONE Suggested for the storage of cheese, milk, daily food, delicatessen, yogurt
	COOLEST AREA Suggested for storage of cold cuts, desserts, meat and fish
	FRUIT & VEGETABLE DRAWER
	FREEZER DRAWERS
	FREEZING ZONE DRAWER (Max cool zone) Suggested to freeze fresh/cooked food

TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The control panel is switched off, the appliance does not work.	The appliance may be in On/Stand-by mode. There may be an appliance power supply problem.	Turn the appliance on pressing the On/Stand-by button. Check that: <ul style="list-style-type: none"> there is not a power outage; the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered); the household electrical system protection devices are efficient; the power cable is not damaged.
The inside light does not work.	The light may need to be replaced.	Models with LED lights: contact the authorised Technical Assistance Service.
	The appliance may be in On/Stand-by mode.	Turn the appliance on pressing the On/Stand-by button.
The temperature inside the compartments is not low enough.	There could be various causes (see "Solutions").	Check that: <ul style="list-style-type: none"> the doors close properly; the appliance is not installed near a heat source; the set temperature is adequate; the circulation of air through the ventilation of the appliance is ensured.
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrosting water drain (see section "Cleaning and Maintenance").
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect. It prevents condensation from forming.	No solution is necessary.
The red  icon is flashing and a sound signal is activated	Door open alarm It is activated when the refrigerator and/or freezer compartments door remains open for a prolonged period of time.	To turn the sound signal off, close the open door of the product.

* Available only on certain models

What to do if...	Possible reasons	Solutions
The red  icon is flashing, a sound signal is activated and the  icon is activated.	<p>Blackout alarm This activates when there is a prolonged interruption to the power supply which has caused an increase in temperature in the freezer compartment.</p> <p>Note: until the blackout alarm is deactivated, you cannot set a different temperature for the product.</p>	<p>Before turning off the sound signal, it is recommended that you pay attention to the temperature shown on the temperature display, corresponding to the highest temperature reached in the freezer compartment during the power cut. To turn the sound signal off, briefly press the "Turn off sound alarm" button.</p> <p>After pressing the button, the temperature display will again show the temperature set. If the freezer compartment has not yet reached the optimal temperature for the preservation of the food, the freezer compartment temperature alarm may activate (see freezer compartment temperature alarm). Check the condition of the food before consuming it.</p>
The red  icon is lit up (without flashing), a sound signal is activated and the freezer temperature display is flashing.	<p>Freezer compartment temperature alarm The freezer compartment temperature alarm indicates that the compartment is not at the optimum temperature. This may occur: when using for the first time, after defrosting and/ or cleaning, when freezing large quantities of food or when the door to the freezer does not close completely.</p>	<p>To turn off the sound signal, briefly press the "Turn off sound alarm" button (the temperature display will stop flashing). When the optimum temperature conditions have been reached, the red icon will automatically turn off. If the freezer compartment temperature alarm continues, contact the Authorised Technical Assistance Service.</p>
The red  icon will light up, a sound signal is activated and the letter "F" is flashing on the display.	<p>Malfunction alarm The alarm indicates the malfunction of a technical component.</p>	<p>Call the authorized Technical Assistance Service. To turn the sound signal off, briefly press the "Turn off sound alarm" button.</p>

* Available only on certain models



You can download the Safety Instructions, User Manual, Product Fiche and Energy data by:

- Visiting our website www.aristonchannel.com
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

