


THANK YOU FOR BUYING AN INDESIT PRODUCT

In order to receive a more complete assistance, please register your product on www.indesit.com/register



Before using the appliance carefully read the Safety Instruction.

 
PRODUCT DESCRIPTION

FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply. Connect the appliance to the power supply it starts the operation automatically. The ideal storage temperatures for the food are preset in the factory.


 
After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available). If the audible signal sounds, it means that the temperature alarm has intervened: press the button to switch off the acoustic alarms.

CONTROL PANEL

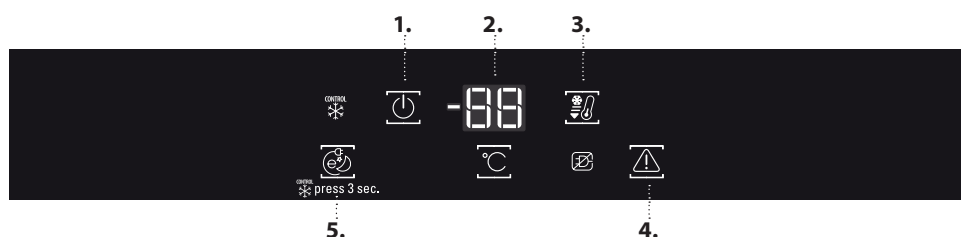

1. On/Stand-by
2. Temperature Display
3. Fast Freeze
4. Turning off the sound alarm/Black out alarm
5. Eco Night function/Freeze Control

FAN*

The Fan improves temperature distribution inside the product, allowing better preservation of stored food and reduction of excess humidity. The fan is switched on by default and can be activate/deactivate manually. The fan operating mode is adjusted based on product condition. You can turn the fan on/off by pressing the  and "On/Stand-by"  buttons at the same time for 3 seconds. The lit 6th Sense FreshControl symbol indicates that the fan is on and therefore the 6th Sense FreshControl function is on. If the ambient temperature exceeds 27°C, or if drops of water are present on the glass shelves, it is essential that the fan is on to ensure the proper preservation of the food. Deactivation of the fan allows energy consumption to be optimised.

Note: the fan restarts automatically after a power cut or after turning off the appliance. Do not obstruct the air intake area with food items.

ANTIBACTERIAL FILTER*

Remove it from the box placed in the Fruit and vegetable drawer and insert into the cover of fan. The replacement procedure is included in the filter box.



ON/STAND-BY

Press the button for 3 seconds to turn the appliance off. In Stand-by mode the light in the refrigerator compartment does not turn on. Press the button again briefly to reactivate the appliance.


Note: this does not disconnect the appliance from the power supply.

TEMPERATURE DISPLAY

To avoid an increase of food waste, refer to recommended setting and Storage Time in User manual online.


 


TURNING OFF THE SOUND ALARM

To turn off the sound alarm, briefly press the  button.



BLACK OUT ALARM

This alarm is triggered in the event of a prolonged power outage that has caused the temperature inside the freezer compartment to rise. The red indicator light flashes  and an acoustic signal is triggered, which will remain active until the door is closed. The freezer compartment temperature indicators may flash. To turn the sound signal off, press the "Turn off alarm" button . If the freezer compartment has not yet reached the temperature for the optimal preservation of the food items, the temperature alarm may be triggered (see temperature alarm). Check the food before consuming it.

FREEZER COMPARTMENT TEMPERATURE


It is possible to set a different temperature with the "Freezer" button.

Recommended setting:

Freezer compartment: -18°C



FAST FREEZE

Press the "Freezer" button for 3 seconds 24 hours before putting large quantities of food to freeze in the freezer compartment. When the function is turned on the icon lights up . The function turns off automatically after 48 hours, or manually by pressing the "Freezer" button again for 3 seconds.

Note: avoid a direct contact between the fresh food and the food that is already frozen. To optimise the freezing speed, drawers can be removed and the food can be placed directly on the bottom of the compartment.

* Available only on certain models



ECO NIGHT FUNCTION (ECO NIGHT)

Eco Night function allows one to concentrate the energy consumption of the product during off-peak time (usually coinciding with night time), when energy is available in large quantity and it costs less than during the day (only in specific countries –using multiple-rate system based on off-peak times- check your rate plan with your utility company). To activate the function, press the button Eco Night at the reduced rate start time (depending on the specific rates plan). For example, if the reduced rate applies starting at 10:00 p.m., press the button that corresponds to that time. When the LED is ON, the function is active. After you activate the function, the product automatically starts to adapt the energy consumption to the time (i.e. Consuming more energy during the night than during the day).

Important: In order to work properly, the function must be enabled both during the night and during the day. The function will remain enabled until deactivated (it will also be deactivated in the event of a blackout, or whenever the appliance is turned off). To deactivate the function, press the button again. When the LED is OFF, the function is not active.


Note: the power consumption of the appliance is declared with the Eco night function disabled.

“0° ZONE” COMPARTMENT*

 
The “0° ZONE” compartment is specifically designed to maintain a low temperature and the correct humidity to preserve fresh food for longer (for example, meat, fish, fruits and winter vegetables).



FREEZE CONTROL

“Freeze Control” is an advanced technology that reduces temperature fluctuations in the whole freezer compartment to minimum, thanks to an innovative air system. Freeze burns are reduced up to 50% and food preserves its original quality and color. To activate/deactivate the “Freeze Control” function press the Freeze Control Button . The function works properly in a defined range of temperature: between -22°C and -24°C. When the function is engaged and the current temperature in the freezer is set to the warmer set point than -22°C, the temperature is automatically set to -22°C to match the working range. If the function is engaged and the user modify the freezer temperature out of the working range, the function is automatically switched off. In case of “Fast freeze” is engaged, the function “Freeze control” is inhibited until the “Fast Freeze” function switched off.


Humidity control technology coupled with Active0 provides the best food preservation when the food is not completely packed.

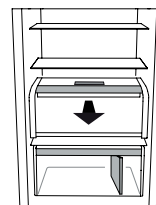

TURNING ON AND TURNING OFF THE COMPARTMENT

The internal temperature of the compartment is approximately 0° when the compartment is turned on.

 To turn on the compartment, press the button (1) for more than one second until the symbol (2) lights up. The lit symbol (2) means that the compartment is working. Press the button (1) again for more than one second to turn off the compartment. The temperature inside depends on the general temperature of the refrigerator.

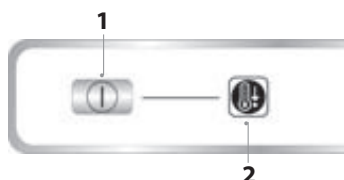

For the correct functioning of the “0° ZONE” compartment, it is necessary that:

- the appliance is turned on;
- the fridge temperature is between +2°C and +6°C;
- the “0° ZONE” compartment is turned on
- Vacation Mode and Stand by are not selected

Note:

- if the symbol does not light up when you turn on the compartment, check that the drawer is properly inserted; if the problem persists contact the authorised Technical Assistance Service;
- when the “0° ZONE” compartment is inserted in the appliance you may hear a faint noise, which you should consider as normal;

Important: be careful when positioning food and containers that are small in size on the upper shelf of the “0° ZONE” compartment in order to prevent them accidentally falling between the shelf and the back wall of the refrigerator compartment.

REMOVING THE “0° ZONE” COMPARTMENT

Carry out the following steps:

1. To make it easier to remove the compartment, we recommend that you empty (and possibly remove) the lower door shelves.
2. Remove the compartment by rotating it upwards.
3. Remove the white plastic shelf under the compartment.

Note: it is not possible to remove the upper shelf and side supports.

To use the “0° ZONE” compartment again, carefully reposition the white plastic shelf under the compartment before inserting the drawer and turning the function back on.

 
To have a larger refrigerator volume and to reduce energy consumption, it is recommended to remove the “0° ZONE” compartment.

Clean the compartment and its components occasionally using a cloth and a solution of warm water (taking care not to submerge the white plastic shelf under the drawer) and neutral cleaning agents specifically for cleaning the inside of the refrigerator. Do not use abrasive cleaning agents.



Before cleaning the compartment (also externally) it is necessary to remove the drawer to disconnect the electrical supply.

* Available only on certain models

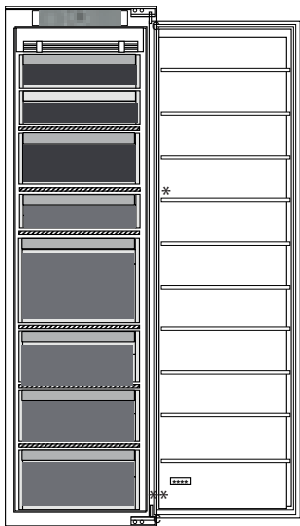


HOW TO STORE FRESH FOOD



Legend


-  **FREEZER DRAWERS**
-  **FREEZING ZONE DRAWER**
(Max cool zone)
Suggested to freeze fresh/cooked food

TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The control panel is switched off, the appliance does not work.	The appliance may be in On/Stand-by mode. There may be an appliance power supply problem.	Turn the appliance on pressing the On/Stand-by button. Check that: <ul style="list-style-type: none">• there is not a power outage;• the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered);• the household electrical system protection devices are efficient;• the power cable is not damaged.
The inside light does not work.	The light may need to be replaced.	Models with LED lights: contact the authorised Technical Assistance Service.
	The appliance may be in On/Stand-by mode.	Turn the appliance on pressing the On/Stand-by button.
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect. It prevents condensation from forming.	No solution is necessary.
The red  icon is flashing and a sound signal is activated.	Door open alarm It is activated when the refrigerator and/or freezer compartments door remains open for a prolonged period of time.	To turn the sound signal off, close the open door of the product.
The red  icon is flashing, a sound signal is activated and the  icon is activated.	Blackout alarm This activates when there is a prolonged interruption to the power supply which has caused an increase in temperature in the freezer compartment. Note: until the blackout alarm is deactivated, you cannot set a different temperature for the product.	Before turning off the sound signal, it is recommended that you pay attention to the temperature shown on the temperature display, corresponding to the highest temperature reached in the freezer compartment during the power cut. To turn the sound signal off, briefly press the “Turn off sound alarm” button. After pressing the button, the temperature display will again show the temperature set. If the freezer compartment has not yet reached the optimal temperature for the preservation of the food, the freezer compartment temperature alarm may activate (see freezer compartment temperature alarm). Check the condition of the food before consuming it.

* Available only on certain models


What to do if...**Possible reasons****Solutions**

The red  icon is lit up (without flashing), a sound signal is activated and the freezer temperature display is flashing.

Freezer compartment temperature alarm

The freezer compartment temperature alarm indicates that the compartment is not at the optimum temperature. This may occur: when using for the first time, after defrosting and/ or cleaning, when freezing large quantities of food or when the door to the freezer does not close completely.

To turn off the sound signal, briefly press the “Turn off sound alarm” button (the temperature display will stop flashing). When the optimum temperature conditions have been reached, the red icon will automatically turn off. If the freezer compartment temperature alarm continues, contact the Authorised Technical Assistance Service.

The red  icon will light up, a sound signal is activated and the letter “F” is flashing on the display.

Malfunction alarm

The alarm indicates the malfunction of a technical component.

Call the authorized Technical Assistance Service. To turn the sound signal off, briefly press the “Turn off sound alarm” button.

* Available only on certain models



Policies, standard documentation and additional product information can be found by:

- Visiting our website **docs.indesit.eu**
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

The model information can be retrieved using the QR-Code indicated on the energy label. The label also includes the model identifier that can be used to consult the <https://eprel.ec.europa.eu> database portal.



400011500601