


**Read the Instructions for Use carefully before using the appliance.**

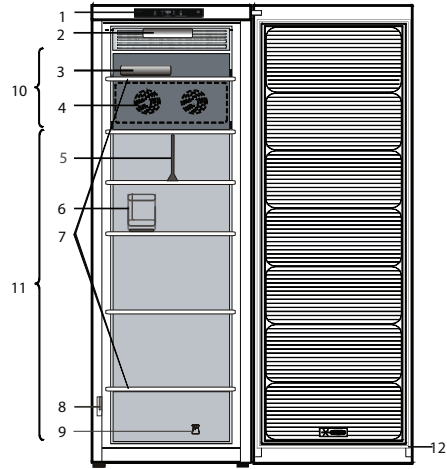

1. Control panel
2. LED's lighting
3. Ice packs\* or Ice tray\*
4. Shock Freeze compartment
5. Drawer divider\*
6. Bottle rack\*
7. Glass shelves
8. Rating plate with commercial name
9. Door reversibility kit
10. Area for freezing fresh food or to store frozen food
11. Area for storing frozen foods
12. Door seal

\* Available on selected models

## HOW TO START THE APPLIANCE

After plugging the appliance to the mains, it starts the operation automatically. After starting the appliance, wait at least 4-6 hours before placing food into the appliance. When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the freezer compartment settings light-up.

## HOW TO REVERSE THE DOOR SWING

- see enclosed Instructions for Use (Version\_2)  
Is recommended to reverse door swing by two persons. There is not foreseen door reversibility for:  
- models with integrated handle  
- models with glass panel on the door.

**Specifications, technical data and images may vary from model to model**

**ON/STANDBY indicator**

**FAST FREEZE indicator**

**ON/STANDBY button**

To put the product in Stand-by, press and hold for 3 seconds. All the icons turn off except On/Standby indicator . To reactivate the appliance press once (briefly) this button.

**SHOCK FREEZE / PARTY MODE button**

**Shock Freeze function**

Press to activate/deactivate the Shock Freeze function (see the Instructions for Use). The function switches off automatically after about 4-5 hours. Shock Freeze and Fast Freezing functions can't be both active at the same time.

**PARTY MODE function**


To activate / deactivate the Party Mode function, press the Shock Freeze button for 3 seconds. In case of Party Mode alarm to deactivated press the Stop Alarm button. Use this function to chill drinks inside the freezer compartment.

**Important:** do not leave the bottle inside the freezer compartment longer than the function is active (30 minutes).

**PARTY MODE indicator**

**SHOCK FREEZE indicator**

**TEMPERATURE DISPLAY**

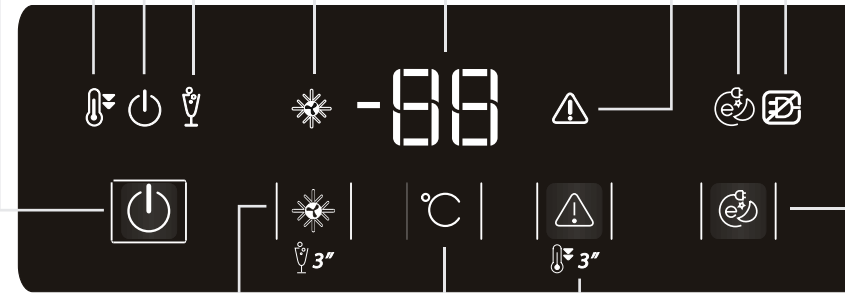

**TEMPERATURE button**

**Temperature Setting**

The appliance is normally factory-set for operation at the recommended temperature of -18°C. The internal temperature can be adjusted between -16°C and -24°C, proceeding as follows:  
• Press the temperature setting button (°C). The storage temperature can be changed by -1°C with each pressure of the button: the value changes cyclically between -16°C and -24°C.

**ALARM indicator (see the below Alarms Table)**

**ECO NIGHT indicator**

**BLACK OUT ALARM**

Long Black-out Alarm indicator. (see the Instructions for Use)

**ECO NIGHT (NIGHT TIME RATE) button**

Press to activate/deactivate the Eco Night function. The Eco Night function enables appliance energy consumption to be concentrated in the reduced rate hours, generally at night (see the Instructions for Use).

**STOP ALARM button**

Press in case of alarm.

**FAST FREEZE button**

**Fast Freeze**

- Press for 3 seconds to activate the Fast Freeze function (see the Instructions for Use)The function switches off automatically after about 50 hours. Shock Freeze and Fast Freezing functions can't be both active at the same time.

## ALARMS TABLE

ALARM TYPE	Signal	Cause	Cure
Door Open alarm	The acoustical alarm is activated and the Alarm Indicator  blinks.	The door has remained open for more than 2 minutes.	Close the door or press the Stop Alarm to mute the acoustical alarm.
Temperature alarm	The Temperature display blinks (°C) and the Alarm Indicator  remains on.	The inside temperature is not adequate.	Press the Stop Alarm button ; the acoustical alarm stops, the Temperature Display (°C) and the Alarm Indicator  remain on until a temperature < -10°C is reached.
Party Mode alarm	The Party Mode Indicator  blinks and the acoustical alarm is activated.	30 min. elapsed since Party Mode function has been activated. It is time to take out the bottle from the freezer (see Instructions for Use for more details).	Press the Party Mode button or alternatively Stop Alarm button to deactivate the Party Mode alarm - and remove the bottle from the freezer.
Long Black-Out alarm	The Black Out Alarm icon  remains on, the Alarm indicator  blinks and the Temperature display (°C) blinks, showing the maximum temperature reached during blackout.	Prolonged power failure, able to cause the inside temperature to increase to 0°C.	Press the Stop Alarm button ; the acoustical alarm stops, the Temperature Display (°C) and the Alarm Indicator  remain on until a temperature < -10°C is reached.
Malfunction	The letter "F" blinks on the display (°C).	Product malfunction.	Contact the After-sales Service.



www.whirlpool.eu/myfridge

00800-400 88 400  
free-gratuit

DE GB FR NL ES PT IT GR SE NO DK FI PL CZ SK HU RU BG RO UA KZ AE

5019 320 00126