



- A. Electronic control unit
- B. Freezer compartment (if the refrigerator has one)
- C. LED indicators (depending on model)
- D. Fan with filter (if present), see specific instructions for filter
- E. Shelves
- F. Level covering the fruit and vegetable drawer
- G. Fruit and vegetable drawers
- H. Rating plate (placed on the side of the fruit and vegetable drawer)
- I. and L. Door shelves
- M. Bottle holder (if provided)
- N. Bottle shelf

- Least cold zone
- Medium zone
- Coldest zone
- Fruit & vegetable zone

Note: All of the drawers, door shelves and shelves can be removed.

The ideal storage temperatures for the food are pre-set in the factory.

Read the instructions carefully before using the appliance. Features, technical data and images may vary according to the model.

6th Sense Fresh Control Function
Enables the function to rapidly reach optimal storage conditions in terms of internal temperature and humidity. In order for it to function correctly, the fan must also be turned on.

On/Stand-by
Press the button for 3 seconds to turn the appliance off. In Stand-by mode, the icon will light up and the light in the refrigerator compartment does not turn on. To turn the product on again, a brief press on the button is sufficient. **Note:** this procedure does not disconnect the appliance from the electricity supply.

Vacation (holiday mode)
You can use this function in the event of your prolonged absence. Press the "Vacation" button for 3 seconds to turn the function on. The display will show the temperature of the refrigerator compartment (12°C) and the icon will light up. After activating the function, remove the food from the appliance and keep the door closed - the appliance will maintain a suitable temperature to prevent odours from forming. To turn off the function, press briefly the button or act on the °C button .

Temperature display
The display shows the refrigerator compartment temperature (between 2°C and 7°C).



Appliance temperature
It is possible to set a different temperature with the °C button.

Fast Freeze/Cool Function (Fast Cooling)
To quickly cool the refrigerator compartment, or six hours before putting a large quantity of food to be frozen in the freezer compartment (if there is one), turn on the "Fast Cooling" function by pressing the for 3 seconds. When the function is turned on, the icon will be displayed. The function turns off automatically after 6 hours, or manually by pressing the button for 3 seconds. **Note:** do not put foods that are to be frozen in contact with others that are already frozen.

Key lock
The key lock can be activated/deactivated by keeping the button pressed for 3 seconds, until a confirmation sound is heard (the icon lights up immediately and into few seconds disappear). If you press any button while the key lock is active, you will hear a sound and the icon will flash.

Turning off the sound alarm
To turn off the sound alarm, briefly press the button.

Fan
The fan is pre-set to ON. You can turn the fan on/off by pressing the button and button at the same time for 3 seconds. The lit icon indicates that the fan is on and therefore the ProFresh function is on. If the ambient temperature exceeds 27°C, or if drops of water are present on the glass shelves, it is essential that the fan is on to ensure the proper preservation of the food. Deactivation of the fan allows energy consumption to be optimised. **Note:** the fan restarts automatically after a power cut or after turning off the appliance.

What to do if...	Possible reasons:	Solutions:
The control panel is switched off, the appliance does not work.	The appliance may be in On/Stand-by mode. There may be an appliance power supply problem.	Turn the appliance on pressing the On/Stand-by button. Check that: <ul style="list-style-type: none"> - there is not a power outage - the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered) - the household electrical system protection devices are efficient - the power cable is not broken.
The internal light does not work.	The light may need replacing. The appliance may be in On/Stand-by mode	<ul style="list-style-type: none"> - Models with LED lights: contact the authorised Technical Assistance Service. - Turn the appliance on pressing the On/Stand-by button
The temperature inside the compartments is not cold enough.	There could be various causes (see "Solutions")	Check that: <ul style="list-style-type: none"> - the door close properly - the appliance is not installed near a heat source - the set temperature is adequate - the circulation of air through the ventilation grilles on the base of the appliance is not obstructed.
There is water on the bottom of the refrigerator compartment.	The defrost water drain is obstructed.	Clean the defrosting water drain (see section "Maintaining and cleaning the appliance")
The red icon is flashing and a sound signal is activated	Door open alarm It is activated when the door remains open for a prolonged period of time.	To turn the sound signal off, close the door of the product.
The red icon will light up, a sound signal is activated and the letter "F" is flashing on the display.	Malfunction alarm The alarm indicates the malfunction of a technical component.	Call the authorized Technical Assistance Service. To turn the sound signal off, briefly press the "Turn off sound alarm" button

Note: some noises, such as gurgles and hissing, caused by the refrigeration system, are normal