



THANK YOU FOR BUYING A HOTPOINT PRODUCT
In order to receive a more complete assistance, please register your product on www.hotpoint.eu/register




Before using the appliance carefully read the Safety Instruction.

FIRST TIME USE

After installation, wait at least two hours before connecting the appliance to the power supply. Once connected, it will start working automatically. The ideal temperature settings are preset from the factory.

After turning the appliance on, wait 4-6 hours for it to reach the correct food storage temperature.

CONTROL PANEL

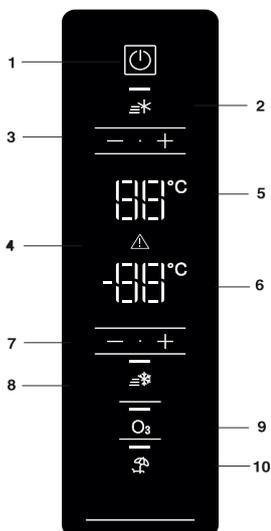

1. On/off
2. Super cool
3. Fridge temperature setting
4. Alarm
5. Refrigerator temperature display
6. Freezer temperature display
7. Freezer temperature setting
8. Super freeze
9. Active oxygen / ECOPlus
10. Holiday

ON/OFF

To switch on/switch off the product press on/off on the display.

SUPER COOL FUNCTION

You can enable or disable the Super Cool feature (quick cooling of both fresh and just cooked food) by pressing the Super Cool key on the display. The Super Cool led turns on when activated. The function is automatically disabled after 12 hours, or can be manually disabled by pressing the Super Cool button.

FRIDGE TEMPERATURE SETTING

Used to modify the temperature setting of the refrigerator. Confirmation corresponding to the selected temperature appears on the display. Recommended setting for the refrigerator compartment is +4°C.

ALARM

An alarm situation has been detected in the product (see alarm table).

REFRIGERATOR TEMPERATURE DISPLAY

Shows the set temperature for the refrigerator compartment.

FREEZER TEMPERATURE DISPLAY

Shows the set temperature for the freezer compartment.

FREEZER TEMPERATURE SETTING

Used to modify the temperature setting of the freezer. Confirmation corresponding to the selected temperature appears on the display. Recommended setting for the freezer compartment is -18°C.

SUPER FREEZE FUNCTION

This function is recommended for freezing fresh food. Fresh food should be frozen as quickly as possible, for the best possible preservation and for keeping its nutritional value. Press the Super Freeze key when you need to freeze fresh food, the Super Freeze indicator will come on. We recommend you press the Super Freeze key 24 hours before putting the food in, in order to prepare the freezer compartment for the best possible freezing conditions. We recommend you use the bottom drawer to maximize the freezing capacity. The Super Freeze function is automatically deactivated after 48 hours, or you can disable it manually by pressing the Super Freeze key.

ACTIVE OXYGEN

Activate or deactivate the Active Oxygen function by pressing the Active Oxygen key on the display. The light of the Active Oxygen on the display is on when activated. This device releases ozone molecules inside the refrigerator. Ozone is a natural substance which reduces their proliferation of microorganisms while limiting unpleasant odors. There may be a slight distinctive smell inside the refrigerator. (The very same smell can sometimes be detected during a storm, due to the ozone produced as the charge in the lightning bolts is released, this is completely normal). The amount produced by the device is defined within the safe range to use the product.

Note: The Active Oxygen key can enable ECOPlus function.

ECOPLUS

You can use this function to decrease energy consumption of the product by blanking the control panel when no interaction is needed. To activate the ECOPlus function press and hold the Active Oxygen key for 8 seconds. After 5 seconds from activation all the digits and LED light switch off, except for the Active Oxygen light that keeps blinking. You can press any key to wake up the display and make your adjustments. 5 seconds after no interaction, the display returns to ECOPlus mode. Deactivate the ECOPlus function using ON/OFF key or press any other function key.

HOLIDAY

You can use this function in the event of your prolonged absence. Activate or deactivate the Holiday function by pressing the Holiday key on the display. The light of the Holiday on the display is on when activated. The temperature values +12°C and -18°C appear on the refrigerator and freezer displays respectively. After activating the function, remove the food from the refrigerator compartment and keep both doors closed. The refrigerator will maintain a suitable temperature. The freezer, however, will stay turned on.


LED LIGHT

This product contains a light source of energy efficiency class F. If the LED light system does not work, please contact the Service to replace it.

Important: The refrigerator compartment light switches on when the refrigerator door is opened. If the door is kept open for more than 8 minutes the light will be automatically switched off.

* Available only on certain models

HOW TO STORE FRESH FOOD AND BEVERAGES

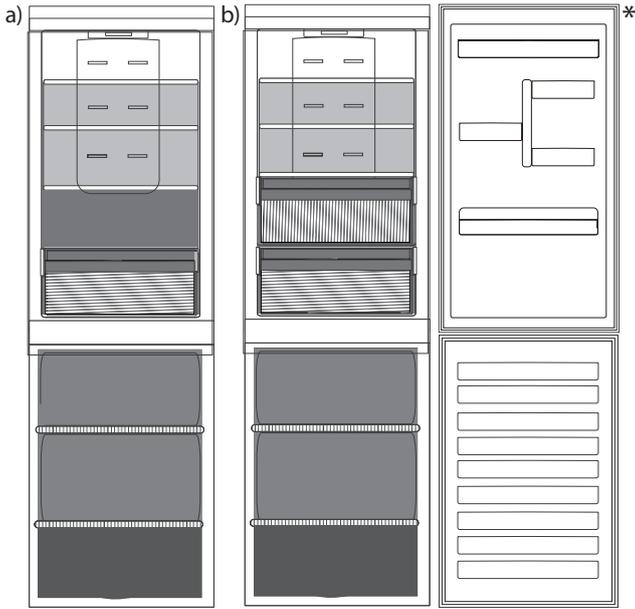

* The number and type of door balconies depends on the model

REFRIGERATION COMPARTMENT


Refrigerator compartment defrosting is completely automatic. Droplets of water on the rear wall inside the refrigerator compartment indicate that the automatic defrost phase is in progress. The defrost water is automatically run into a drain hole and collected in a container, where it evaporates.

Fresh Zone 0°C drawer *

The Fresh Zone 0°C it is a drawer (b) ideal to store meat and fish. By decreasing/increasing the fridge temperature, you impact the Fresh Zone 0°C compartment temperature as well. Keep in mind that this compartment is a mechanical feature operating all the time and it cannot be switched off.




Humidity Control*

Turn the knob to the left if you are storing vegetables (for which a more humid environment is recommended), rotate the knob to the right if you are storing fruit (for which a less humid environment is recommended), turn the knob to the middle if you are storing a mixture of fruit and vegetables.

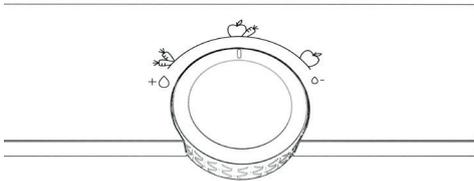

* Available only on certain models

   
Legend

	TEMPERATE ZONE Suggested for storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam
	COOL ZONE Suggested for the storage of cheese, milk, daily food, delicatessen, yogurt
	COOLEST AREA a) Suggested for storage of cold cuts, desserts, meat and fish
	b) Suggested for storage of meat and fish. The drawer available only on certain models
	FRUIT & VEGETABLE DRAWER
	FREEZER DRAWERS (One drawer in models lower than 1,7m)
	FREEZING ZONE DRAWER (Max cool zone) Suggested to freeze fresh / cooked food


Foldable shelf*

This shelf can be used in three different ways:


1. Full-depth, to use the entire surface.

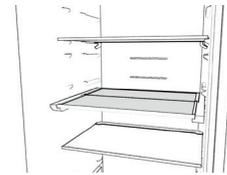

2. Half-depth, to use the rear part and at the same time create space for taller items (like bottles and jugs) on the shelf below. To adjust the shelf to half-depth, slightly raise the front part then pull it in.

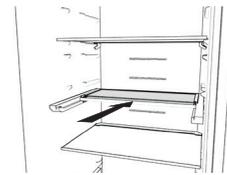

3. Flipped up if you need to make space for tall or bulky items on the shelf below. To flip the shelf up, first adjust it to the halfway position from half-depth. Flip the shelf down to go back to using it in half-depth and full-depth.

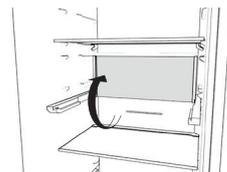

FREEZER COMPARTMENT

Total No Frost freezers provide chilled air circulation around the storage areas, and prevent the formation of ice, thereby completely eliminating the need for defrosting. Frozen items don't stick to the walls, labeling stays legible and storage space remains neat and clear. The freezer compartment allows for the storage of frozen food and the freezing of fresh food. The quantity of fresh food that can be frozen in a specific time period is indicated on the rating plate. Arrange the fresh food in the freezing area inside the freezer compartment, leaving enough space around it to allow air to circulate freely. Avoid allowing fresh food to come into direct contact with frozen food. Load limits are determined by baskets, flaps, drawers, shelves etc..

Make sure that these components can still close easily after loading. The freezing zone's drawer/compartments is shown in the picture above. To optimize freezing speed and get more storage space, the freezer compartment can be used without the freezer drawers and the food can be placed directly on the bottom of the compartment. To avoid food waste, please refer to the recommended setting and storage found in the online user manual.

Ice cubes

Fill 2/3 of the ice tray with water and place it back in the freezer compartment. Do not use sharp or pointed objects to remove the ice.

ACCESSORIES*

EGG TRAY




ICE TRAY



BOTTLE RACK



FOLDABLE SHELF

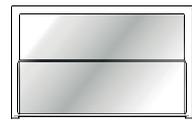

GENERAL INFORMATION

The drawers, baskets, and shelves should be kept in their current position unless otherwise specified in this quick guide. The light system inside the refrigerator compartment uses LED lights, which provide better lighting and use less energy than traditional bulbs.

Doors and lids of the refrigerator should be removed before disposal, to avoid children or animals getting trapped inside.

TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The appliance is not working.	There may be an appliance power supply problem.	<ul style="list-style-type: none"> Check if power cable plugged into a live socket with the proper voltage. Check if the protection devices and fuses of the electrical system in your home
There is water in the defrost pan.	This is normal in hot, damp weather. The pan can even be half full.	<ul style="list-style-type: none"> Make sure the appliance is level so that the water does not overflow.
The edges of the appliance cabinet, which come in contact with the door seal, are warm to the touch.	This is not a defect. This is normal in hot weather and when the compressor is running.	
The light does not work.	The light may need replacing. The appliance may be in On/ Stand-by model.	<ul style="list-style-type: none"> Make sure if the protection devices and fuses of the electrical system in your home work well. Check if the power cable is plugged into a live socket with the proper voltage In case the LEDs are broken the user must call the Service for exchange of the same type available only at our Aftersales Service Centers or authorized dealers.
The motor seems to run too much.	Motor running time depends on different things: number of door openings, amount of food stored, temperature of the room, setting of the temperature controls.	<ul style="list-style-type: none"> Make sure that the appliance controls are correctly set. Check if there is not a large amount of food been added to the appliance. Check that the door is not opened too often. Check that the door close properly.
The appliance temperature is too high.	There could be various causes (see "Solutions").	<ul style="list-style-type: none"> Make sure that the condenser (back the appliance) is free of dust and fluff. Make sure that the door properly closed. Make sure that the door seals properly fitted. On hot days or if the room is warm, the motor naturally runs longer. If the appliance door has been left open for a while or if large amounts of food have been stored, the motor will run longer in order to cool down the interior of the appliance.
The doors do not open and close properly.	There could be various causes (see "Solutions").	<ul style="list-style-type: none"> Check that food packages are not blocking the door. Check that the internal parts or automatic ice maker are not out of position. Check that the door seals are not dirty or sticky. Ensure the appliance is level.

ALARM TABLE

Alarm type	Signal	Cause	Cure
Door open alarm.	The acoustical alarm is activated. Alarm icon on the display blinks fast and the internal lamp blinks slowly.	The refrigerator door has remained open for more than two minutes.	The buzzer will stop sounding when you shut the door.
Temperature alarm.	The acoustical alarm is activated. Alarm icon on the display blinks fast. "A1" is displayed instead of the freezer temperature.	The doors do not close properly or the seals are damaged. The doors are open too frequently. The refrigerator or the freezer have been over-filled. The temperature inside the freezer is too high. The freezer will maintain a temperature of around 0°C so that the food will not refreeze, allowing you to eat it within 24 hours or to refreeze it after it has been cooked.	To switch off the buzzer, open and close the appliance door or press the + and – freezer temperature adjustment buttons once. Press these buttons a second time to switch off the Alarm icon on the display and set the value on the Freezer display.
Temperature alarm.	The acoustical alarm is activated. Alarm icon on the display blinks fast. "A2" is displayed instead of the freezer temperature.	The doors do not close properly or the seals are damaged. The doors are open too frequently. The refrigerator or the freezer have been over-filled. The temperature of the freezer is dangerously high: the food inside must not be eaten.	To switch off the buzzer, open and close the appliance door or press the + and – freezer temperature adjustment buttons once. Press these buttons a second time to switch off the Alarm icon on the display and set the value on the Freezer display.

* Available only on certain models



Policies, standard documentation, ordering of spare parts and additional product information can be found by:

- Visiting our website docs.hotpoint.eu and parts-selfservice.whirlpool.com
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

The model information can be retrieved using the QR-Code indicated on the energy label. The label also includes the model identifier that can be used to consult the <https://eprel.ec.europa.eu> database portal.



Hotpoint



400011565961