


**Read the Instructions for Use carefully before using the appliance.**

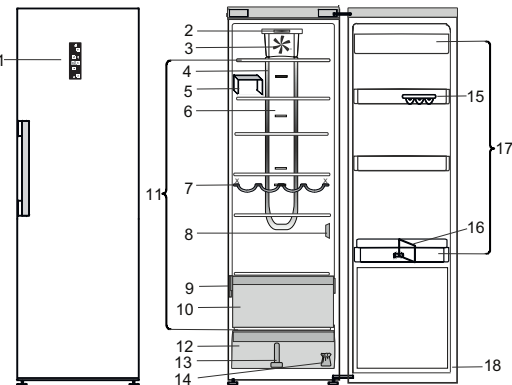

1. Control panel
2. Main LED 's lighting\*
3. Fan
4. Optional lighting in Multi-flow\*
5. Shelf divider\*
6. Multi-flow cold air area\*
7. Bottle rack \*
8. Sensor cover
9. Rating plate with commercial name
10. Cooler compartment(best for meat and fish)\*
11. Area shelves
12. Fruits and vegetables crisper
13. Crisper divider\*
14. Door reversibility kit\*
15. Egg tray\*
16. Bottle separator\*
17. Door trays
18. Door seal

\* Available on selected models

**HOW TO START THE APPLIANCE**

After plugging the appliance to the mains, it starts the operation automatically. After starting the appliance, wait at least 4-6 hours before placing food into the appliance. When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the fridge compartment settings light-up.

**HOW TO REVERSE THE DOOR SWING**

- see enclosed Instructions for Use (Version\_1)  
Is recommended to reverse door swing by two persons. There is not foreseen door reversibility for:  
- models with integrated handle  
- models with glass panel on the door.

**Specifications, technical data and images may vary from model.**

**SMART DISPLAY**

This optional function can be used to save energy. To activate /deactivate the Smart Display, press and hold Fast Cool and Vacation buttons at the same time for 3 seconds until an audible signal sounds. To temporary reactivate the display, press any button. Remember that this function does not disconnect the appliance from the power supply, but only reduce the power consumed by external display (see the Instructions for Use).

**Note:** When the "6th Sense Fresh Control" is deactivated and the Smart display will be activated: all LEDs on the display will turn off.

**ON/STANDBY**

To put the product in Stand-by, press and hold the button for 3 seconds. All the icons turn off except On/Standby indicator . To reactivate the appliance press once (briefly) this button. (see the Instructions for Use)

**TEMPERATURE DISPLAY**

**TEMPERATURE button**


Press the temperature button to change the temperature: the value changes cyclically between 8°C ad 2°C.

**Note:** Displayed set points correspond to the average temperature throughout the whole refrigerator.

**FAN**

The Fan improves temperature distribution inside the product, allowing better preservation of stored food. By default, the fan is switched on. **To switch off the FAN** press and hold Fast Cool and ON/STANDBY buttons at the same time for 3 seconds until an audible signal sounds and "6th Sense Fresh Control" icon will turn off as confirmation that the fan has been switched off. **To switch on the FAN** repeat the same procedure. As a confirmation audible signal sounds and the icon turns on.

**Note:** Reasons why switch off the fan look for "ENERGY-SAVING TIPS" in the Instructions for Use.

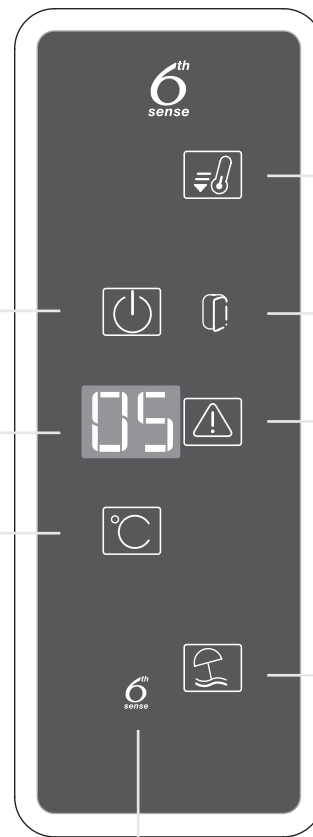

**FAST COOL button**

Using Fast Cool function it is possible to increase the cooling capacity in the refrigerator compartment. The use of this function is recommended when placing a very high quantity of food in the refrigerator compartment. Press the Fast Cool button to activate Fast Cool function. When activated, the Fast Cool indicator turns on. The function is automatically disabled after 6 hours, or can be manually disabled by pressing Fast Cool button again.

**DOOR OPEN ALARM indicator**

(see the below alarms table)

**ALARM indicator**

(see the below Alarms Table)

**STOP ALARM button**

Press in case of alarm to mute the acoustic alarm.

**VACATION button**

This function can be activated to reduce the energy consumption of the appliance during a prolonged period of time. Before activating the feature, all perishable food should be removed from the refrigeration compartment and make sure that the door is closed properly, since the refrigerator will maintain a suitable temperature to prevent the formation of unpleasant odors (+12°C). **To activate/ deactivate** press the Vacation mode button for 3 seconds. When the function is enabled, the related symbol will light up and the temperature of the refrigerator compartment will be set to a higher setpoint (the temperature display will show the new temperature setpoint of +12°C). Changing the temperature setpoint will automatically deactivate the function.

**6TH SENSE FRESH CONTROL**

This function automatically works to ensure the optimal conditions to preserve the stored food. To deactivate the "6th Sense Fresh Control", press and hold Fast Cool and ON/STANDBY buttons at the same time for 3 seconds until an audible signal sounds and "6th Sense Fresh Control" icon turns off as confirmation that the feature has been deactivated. To reactivate this function repeat the same procedure.

**Note:** Deactivation of the function switch-off the FAN in the fridge.

**ALARMS TABLE**

ALARM TYPE	Signal	Cause	Cure
Door open alarm	The acoustical alarm is activated. The Alarm Indicator  blinks and the Door Open Alarm indicator  still visible until the door is closed (even if other alarms have been reset)	The door has remained open for more than 2 minutes.	Close the door or press the Stop Alarm to mute the acoustical alarm.
Malfunction.	The letter "F" blinks on the display (°C).	Product malfunction.	Contact the After-sales Service.