

INSTALLATION, QUICK START



  
**Whirlpool**  
SENSING THE DIFFERENCE



THIS INSTRUCTION shall also be available on website:  
[docs.whirlpool.eu](https://docs.whirlpool.eu)

## YOUR SAFETY AND THAT OF OTHERS IS VERY IMPORTANT

This manual and the appliance itself provide important safety warnings, to be read and observed at all times.

This is the danger symbol, pertaining to safety, which alerts users to potential risks to themselves and others.



All safety warnings are preceded by the danger symbol and the following terms:



### DANGER

**Indicates a hazardous situation which, if not avoided, will cause serious injury.**



### WARNING

**Indicates a hazardous situation which, if not avoided, could cause serious injury.**

All safety warnings give specific details of the potential risk present and indicate how to reduce risk of injury, damage and electric shock resulting from improper use of the appliance. Carefully observe the following instructions:

- Keep these instructions close at hand for future reference.
- Use protective gloves to perform all unpacking and installation operations.
- The appliance must be handled and installed by two or more persons.
- The appliance must be disconnected from the power supply before carrying out any installation work.
- Installation and maintenance must be carried out by a qualified technician, in compliance with the manufacturer's instructions and local safety regulations. Do not repair or replace any part of the appliance unless specifically stated in the user manual.
- Power cable replacement must be carried out by a qualified electrician. Contact an authorised service centre.

- Regulations require that the appliance is earthed.
- The power cable must be long enough for connecting the Appliance, once fitted in its housing, to the main power supply.
- For installation to comply with current safety regulations, an omnipolar switch with minimum contact gap of 3 mm must be used.
- Do not use extension leads, multiple socket adapters.
- Do not connect the appliance to a socket which can be operated by remote control or timer.
- Do not pull the power supply cable.
- The electrical components must not be accessible to the user after installation.
- Do not touch the appliance with any wet part of the body and do not operate it when barefoot.
- This appliance is designed solely for use as a domestic appliance for cooking food. No other type of use is permitted (e.g.: heating rooms or outdoor use).  
The Manufacturer declines any liability for injury to persons or animals or damage to property if these advices and precautions are not respected.
- This appliance is intended to be used built-in. Do not use it freestanding or in a cabinet with door.
- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- Very young (0-3 years) and young children (3-8 years) shall be kept away unless continuously supervised.
- Children from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance only if they are supervised or have been given instructions on safe appliance use and if they understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- During and after use, do not touch the heating elements or interior surfaces of the appliance: risk of burns. Do not allow the appliance to come into contact with cloths or other flammable materials until all the components have cooled down completely.

- At the end of cooking, exercise caution when opening the appliance door, letting the hot air or steam exit gradually before accessing the appliance. Do not obstruct the vent apertures.
- Use oven gloves to remove pans and accessories, taking care not to touch the heating elements.
- Do not place flammable materials in or near the appliance: a fire may break out if the appliance is inadvertently switched on.
- Do not use the microwave oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.
- Do not use the microwave oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.
- Do not leave the appliance unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.
- Use containers suitable for use in a microwave oven only.
- Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.
- Do not use microwave oven for deep-frying, because the oil temperature cannot be controlled.
- After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. Ensure the lid and the teat is removed before heating.
- If alcoholic beverages are used when cooking foods (e.g. rum, cognac, wine), remember that alcohol evaporates at high temperatures. As a result, there is a risk that vapors released by the alcohol may catch fire upon coming into contact with the electrical heating element.
- Overheated oils and fats catch fire easily. Always remain vigilant when cooking foods rich in fat, oil or alcohol (e.g. rum, cognac, wine).
- Do not use microwave oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.

- If material inside/outside the appliance should ignite or smoke is observed, keep appliance door closed and turn the appliance off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.
- Do not over-cook food. Fire could result.
- Cleaning is the only maintenance normally required. Failure to maintain the appliance in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Never use steam cleaning equipment.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the appliance door glass since they can scratch the surface, which may result in shattering of the glass.
- Do not use corrosive chemicals or vapors in this appliance. This type of appliance is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.
- Do not remove any cover. The door seals and the door seal areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by an authorized service technician.
- Service only to be carried out by an authorized service technician. It is hazardous for anyone other than an authorized person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy.

**DISPOSAL OF PACKAGING MATERIALS**

The packaging material is 100% recyclable and is marked with the recycle symbol () .

The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

**ENERGY SAVING TIPS**

- Only pre-heat the microwave oven if specified in the cooking table or recipe.
- Use dark lacquered or enameled baking moulds as they absorb heat far better.
- Switch the appliance off 10/15 minutes before the set cooking time. Food requiring prolonged cooking will continue to cook even once the appliance is switched off.

**SCRAPPING THE PRODUCT**

- This appliance is marked in conformity with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE).
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

## SCRAPPING OF HOUSEHOLD APPLIANCES

- This appliance is manufactured with recyclable or reusable materials. Scrap the appliance in accordance with local regulations on waste disposal. Before scrapping, cut off the power cords so that the appliances cannot be connected to the mains.
- For further information on the treatment, recovery and recycling of household electrical appliances, contact a competent local authority, the collection service for household waste or the store where the appliance is purchased.

## INSTALLATION

**AFTER UNPACKING THE APPLIANCE**, make sure that it has not been damaged during transport and that the appliance door closes properly.

**IN THE EVENT OF PROBLEMS**, contact the dealer or the nearest After-sales Service.

**TO PREVENT ANY DAMAGE**, only remove the appliance from its polystyrene foam base at the time of installation.

**CHILDREN SHOULD NOT PERFORM INSTALLATION OPERATIONS.** Keep children away during installation of the appliance. Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, during and after the installation of the appliance.

### MOUNTING THE APPLIANCE

**FOLLOW THE SUPPLIED SEPARATE MOUNTING INSTRUCTIONS** when installing the appliance.

### PRIOR TO CONNECTING

**CHECK THAT THE VOLTAGE** on the rating plate corresponds to the voltage in the home.

**DO NOT REMOVE** the microwave inlet protection plates located on the side of the microwave oven cavity wall. They prevent grease & food particles from entering the microwave inlet channels.

**ENSURE THE MICROWAVE** oven cavity is empty before mounting.

**ENSURE THAT THE APPLIANCE IS NOT DAMAGED.** Check that the microwave oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the microwave oven and clean the interior with a soft, damp cloth.

**DO NOT OPERATE** this appliance if it has a damaged mains cord, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

**IF THE POWER SUPPLY CORD** is too short, have a qualified electrician or serviceman install an outlet near the appliance.

**THE POWER SUPPLY CORD** must be long enough for connecting the appliance, once fitting in its housing, to the main power supply.

**FOR INSTALLATION** to comply with current safety regulations, an omnipolar switch with minimum contact gap of 3 mm must be utilized.

### AFTER CONNECTING

**THE APPLIANCE** can be operated only if the microwave oven door is firmly closed.

**THE EARTHING OF THIS APPLIANCE IS COMPULSORY.** The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

**THE MANUFACTURERS** are not liable for any problems caused by the user's failure to observe these instructions.

**AFTER INSTALLATION**, the bottom of the appliance must no longer be accessible. For correct appliance operation, do not obstruct the minimum gap between the worktop and the upper edge of the oven.

## RECOMMENDED USE AND TIPS

### HOW TO READ THE COOKING TABLE

**THE TABLE INDICATES THE BEST FUNCTIONS** to use for any given food. Cooking times, where indicated, start from the moment when food is placed in the microwave oven cavity, excluding pre-heating (where required).

**COOKING SETTINGS AND TIMES** are purely for guidance and will depend on the amount of

food and type of accessory used. Always cook food for the minimum cooking time given and check that it is cooked through.

**TO OBTAIN THE BEST RESULTS**, carefully follow the advice given in the cooking table regarding the choice of accessories (if supplied) to be used (if present).

### CLING FILM AND BAGS

**REMOVE WIRE TWIST-TIES** from paper or plastic bags before placing the bag in the microwave oven cavity.

**CLING FILM SHOULD BE SCORED** or pricked with a fork to relieve the pressure and to prevent bursting because steam builds up during cooking.

### COOKING FOOD

**SINCE MICROWAVES** penetrate the food to a limited depth, if there are a number of pieces to cook at once, arrange the pieces in a circle to create more outside pieces.

**SMALL PIECES** cook more quickly than large pieces.

**CUT FOOD** into pieces of equal size for uniform cooking.

**MOISTURE EVAPORATES** during microwave cooking.

**A MICROWAVE-PROOF COVER** on the container helps reduce moisture loss.

**MOST FOODS WILL CONTINUE** to cook after microwave has finished cooking it. Therefore, always allow for standing time to complete the cooking.

**STIRRING IS USUALLY NECESSARY** during microwave cooking. When stirring, bring the cooked portions on the outside edges towards the centre and the less-cooked centre portions towards the outside.

**PLACE THIN SLICES OF MEAT** on top of each other or interlace them. Thicker slices such as meat loaf and sausages have to be placed close to each other.

### LIQUIDS

**LIQUIDS MAY OVERHEAT** beyond boiling point without visibly bubbling. This could cause hot liquids to suddenly boil over.

**TO PREVENT THIS POSSIBILITY:**

- 1 Avoid using straight-sided containers with narrow necks.
- 2 Stir the liquid before placing the container in the microwave oven cavity and leave the teaspoon in the container.
- 3 After heating, stir again before carefully removing the container from the microwave oven.

### BABY FOOD

**AFTER HEATING BABY FOOD** or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving.

**THIS WILL ENSURE** that the heat is evenly distributed and avoid the risk of scalding or burns.

**ENSURE** that the lid and the teat are removed before heating.

### FROZEN FOOD

**FOR BEST RESULTS**, we recommend defrosting directly on the glass turntable. If needed, it is possible to use a light-plastic container that is suitable for microwave.

**BOILED FOOD**, stews and meat sauces defrost better if stirred during the defrosting time.

**SEPARATE PIECES** as they begin to defrost. Individual slices defrost more easily.



## ACCESSORIES



EN

### GENERAL

**THERE ARE** a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

**ENSURE THAT THE UTENSILS YOU USE** are oven proof and allow microwaves to pass through them before cooking.



**WHEN YOU PUT FOOD AND ACCESSORIES** in the microwave oven, ensure that they do not come in contact with the interior of the oven.

**This is especially important with accessories made of metal or metal parts.**

**IF ACCESSORIES CONTAINING METAL** comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

**ALWAYS ENSURE** that the turntable is able to turn freely before starting the oven.

### TURNTABLE SUPPORT

**USE THE TURNTABLE SUPPORT** under the Glass turntable. Never put any other utensils on the turntable support.



☞ Fit the turntable support in the oven.

### GLASS TURNTABLE

**USE THE GLASS TURNTABLE** with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.



☞ Place the Glass turntable on the turntable support.



## START PROTECTION / KEY LOCK



**THIS AUTOMATIC SAFETY FUNCTION IS ACTIVATED ONE MINUTE AFTER** the oven has returned to "stand by mode". (The oven is in "stand by" when the 24-hour clock is displayed or if the clock has not been set, when the display is blank).



**THE DOOR MUST BE OPENED AND CLOSED** e.g. putting food into it, before the safety lock is released. Else the display will show "DOOR".

DOOR

## PAUSE OR STOP COOKING

### TO PAUSE COOKING:

**THE COOKING CAN BE PAUSED** to check, turn or stir the food by opening the door. The setting will be maintained for 10 minutes.



### IF YOU DON'T WANT TO CONTINUE COOKING:

**REMOVE THE FOOD**, close the door and press the STOP button.



### TO CONTINUE COOKING:

**CLOSE THE DOOR** and press the Start button ONCE. The cooking is resumed from where it was paused.



**PRESSING THE START BUTTON TWICE** will increase the time by 30 seconds.

**A BEEP WILL SIGNAL** once or twice a minute for 10 minutes when the cooking is finished. Press the STOP button or open the door to cancel the signal.



**NOTE:** The oven will only hold the settings for 60 seconds if the door is opened and then closed after the cooking is finished.



## COOLING DOWN





**WHEN A FUNCTION IS FINISHED**, the oven may carry out a cooling procedure. This is normal. After this procedure the oven switches off automatically.

**THE COOLING PROCEDURE** can be interrupted without any harm to the oven by opening the door.

## DOOR OPENING

**PRESS THE BUTTON TO OPEN THE DOOR.**

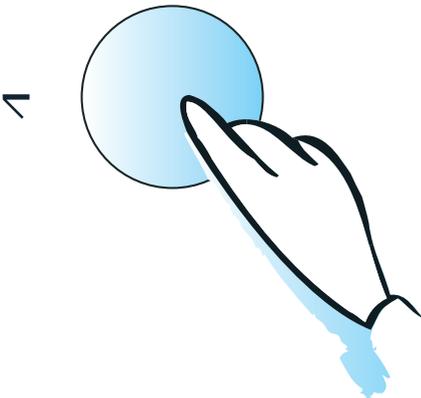


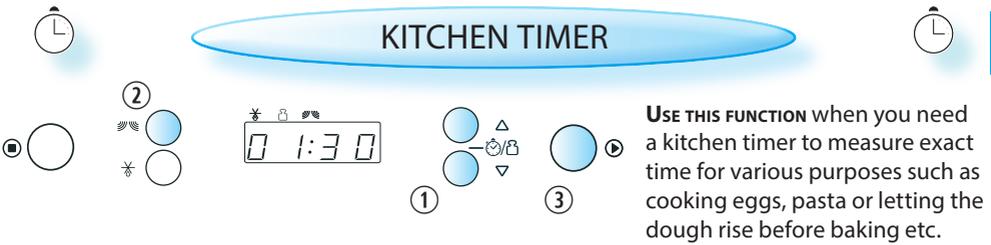

**USE THIS FUNCTION** when you need a kitchen timer to measure exact time for various purposes such as cooking eggs, pasta or letting the dough rise before baking etc.

- 1 **PRESS THE +/- BUTTONS** to set the time to measure.
- 2 **PRESS THE POWER BUTTON** repeatedly to set the power to 0 W.
- 3 **PRESS THE START BUTTON.**

 **AN ACOUSTIC SIGNAL** will be heard when the timer has finished to count down. 

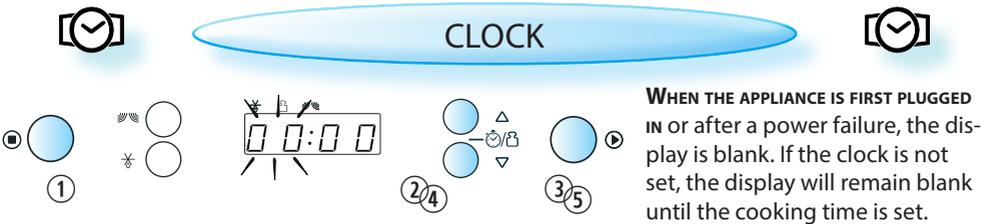

**WHEN THE APPLIANCE IS FIRST PLUGGED IN** or after a power failure, the display is blank. If the clock is not set, the display will remain blank until the cooking time is set.

- 1 **PRESS THE STOP BUTTON** (3 seconds) until the left-hand digit (hour's) flicker.
- 2 **PRESS THE +/- BUTTONS** to set the hours.
- 3 **PRESS THE START BUTTON.** (The two right hand digits (minutes) flicker).
- 4 **PRESS THE +/- BUTTONS** to set the minutes.
- 5 **PRESS THE START BUTTON AGAIN.**

**THE CLOCK IS SET** and in operation.

**NOTE:**

**KEEP THE DOOR OPEN WHILE SETTING THE CLOCK.** This gives you 10 minutes to complete the setting of the Clock. Otherwise, each step must be accomplished within 60 seconds.

## COOK & REHEAT WITH MICROWAVES



**USE THIS FUNCTION** for normal cooking and reheating, such as vegetables, fish, potatoes and meat.

- 1 **PRESS THE +/- BUTTONS** to set the time.
- 2 **PRESS THE POWER BUTTON** repeatedly to set the power.
- 3 **PRESS THE START BUTTON.**

### ONCE THE COOKING PROCESS HAS BEEN STARTED:

The time can easily be increased in 30-second steps by pressing the Start button. *Each press* increases the time with 30 seconds. You may also alter the time by pressing the +/- buttons to increase or decrease the time.

**PRESSING THE POWER BUTTON** may also change the power level. The first press will show you the current power level. Press the power button repeatedly to change power level.

### POWER LEVEL

MICROWAVES ONLY	
POWER	SUGGESTED USE:
<b>750 W</b>	<b>REHEATING OF BEVERAGES</b> , water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power. Cooking of fish, meat, vegetables etc.
<b>500 W</b>	<b>MORE CAREFUL COOKING</b> e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
<b>350 W</b>	<b>SIMMERING STEWS</b> , melting butter.
<b>160 W</b>	<b>DEFROSTING.</b> Softening butter, cheeses and ice cream.
<b>0 W</b>	<b>SETTING</b> the standing time (when using the timer only).



## JET START



EN



**THIS FUNCTION IS USED** for quick reheating of food with a high water content such as clear soups, coffee or tea.

**1 PRESS THE START BUTTON.**

**THIS FUNCTION AUTOMATICALLY STARTS** with maximum microwave power level and the cooking time set to 30 seconds. *Each additional press* increases the time with 30 seconds. You may also alter the time by pressing the +/- buttons to increase or decrease the time after the function has started.



## MANUAL DEFROST



**FOLLOW THE PROCEDURE** for "cook & reheat with microwaves" and choose power level 160 W when defrosting manually.

**CHECK AND INSPECT THE FOOD REGULARLY.** Experience will give you the times needed for various amounts.

**FROZEN FOOD IN PLASTIC BAGS,** plastic films or cardboard packages can be placed directly in the oven as long as the package has no metal parts (e.g. metal twist ties).

**TURN LARGE JOINTS** halfway through the defrosting process.

**THE SHAPE OF THE PACKAGE** alters the defrosting time. Shallow packets defrost more quickly than a deep block.




**BOILED FOOD, STEWS AND MEAT SAUCES** defrost better if stirred during defrosting time.

**WHEN DEFROSTING** it is better to underthaw the food slightly and allow the process to finish during standing time.

**SEPARATE PIECES** as they begin to defrost. Individual slices defrost more easily.

**STANDING TIME AFTER DEFROSTING ALWAYS IMPROVES** the result since the temperature will then be evenly distributed throughout the food.

**SHIELD AREAS OF FOOD** with small pieces of aluminum foil if they start to become warm (e.g. chicken legs and wing tips).

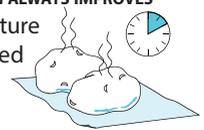



## JET DEFROST



**USE THIS FUNCTION** only if the net weight is between 100 g- 2 Kg.  
**ALWAYS PLACE THE FOOD** on the glass turntable.

- 1 **PRESS THE JET DEFROST BUTTON.**
- 2 **PRESS THE + / - BUTTONS** to set the weight of the food.
- 3 **PRESS THE START BUTTON.**

**MIDWAY THROUGH THE DEFROSTING PROCESS** the oven stops and prompts you to *TURN FOOD*.

- ❄️ Open the door.
- ❄️ Turn the food.
- ❄️ Close the door and restart by pressing the Start button.

**NOTE:** The oven continues automatically after 2 min. if the food hasn't been turned. The defrosting time will be longer in this case.

### WEIGHT:

**THIS FUNCTION NEEDS TO KNOW** the net weight of the food. The oven will then automatically calculate the needed time to finish the procedure.

 


**IF THE WEIGHT IS LESSER OR GREATER THAN RECOMMENDED WEIGHT:** Follow the procedure for "Cook & Re-heat with microwaves" and choose 160 W when defrosting.

### FROZEN FOODS:

**IF THE FOOD IS WARMER** than deep-freeze temperature (-18°C), choose lower weight of the food.

**IF THE FOOD IS COLDER** than deep-freeze temperature (-18°C), choose higher weight of the food.




FOOD	HINTS
 <p><b>MEAT</b> (100g - 2.0Kg)</p>	<p>Minced meat, cutlets, steaks or roasts. <b>TURN FOOD</b> when oven prompts.</p>
 <p><b>POULTRY</b> (100g - 2.0Kg)</p>	<p>Chicken whole, pieces or fillets. <b>TURN FOOD</b> when oven prompts.</p>
 <p><b>FISH</b> (100g - 2.0Kg)</p>	<p>Whole, steaks or fillets. <b>TURN FOOD</b> when oven prompts.</p>

**FOR FOOD NOT LISTED IN THIS TABLE** and if the weight is lesser or greater than recommended weight, you should follow the procedure for "Cook and reheat with microwaves" and choose 160 W when defrosting.

**CLEANING IS THE ONLY MAINTENANCE** normally required.

**FAILURE TO MAINTAIN THE OVEN** in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

 **DO NOT USE METAL SCOURING PADS, ABRASIVE CLEANSERS, steel-wool pads, gritty wash-cloths, etc. which can damage the control panel, and the interior and exterior oven surfaces. Use a sponge with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel. Do NOT SPRAY directly on the oven.**

 

**AT REGULAR INTERVALS**, especially if spill overs have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.



**THIS OVEN IS DESIGNED** to operate with the turntable in place.

 **Do not operate the microwave oven** when the turntable has been removed for cleaning.

**USE A MILD DETERGENT**, water and a soft cloth to clean the interior surfaces, front and rear of the door and the door opening.

 **DO NOT ALLOW GREASE** or food particles to build up around the door.


**FOR STUBBORN STAINS**, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

 **DO NOT USE STEAM CLEANING APPLIANCES** when cleaning your microwave oven.

**ADDING SOME LEMON JUICE** to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odors inside the oven.

DISHWASHER SAFE:

**TURNTABLE SUPPORT.**

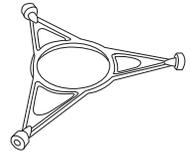

**GLASS TURNTABLE.**



## TROUBLE SHOOTING GUIDE

**IF THE OVEN DOES NOT WORK**, do not make a service call until you have made the following checks:

- ❧ The Turntable and turntable support is in place.
- ❧ The Plug is properly inserted in the wall socket.
- ❧ The Door is properly closed.
- ❧ Check your Fuses and ensure that there is power available.
- ❧ Check that the oven has ample ventilation.
- ❧ Wait for 10 minutes, then try to operate the oven once more.
- ❧ Open and then close the door before you try again.

**THIS IS TO AVOID** unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and type number of the oven (see Service label). Consult your warranty booklet for further advice.



**IF THE MAINS CORD NEEDS REPLACING** it should be replaced by the original mains cord, which is available via our service organization. The mains cord may only be replaced by a trained service technician.



**SERVICE ONLY TO BE CARRIED OUT BY A TRAINED SERVICE TECHNICIAN.**  
It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy.

**DO NOT REMOVE ANY COVER.**



## DATA FOR TEST HEATING PERFORMANCE

### IN ACCORDANCE WITH IEC 60705.

THE INTERNATIONAL ELECTROTECHNICAL COMMISSION has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

TEST	AMOUNT	APPROX. TIME	POWER LEVEL	CONTAINER
12.3.1	750 G	10 MIN	750 W	PYREX 3.220
12.3.2	475 G	5 ½ MIN	750 W	PYREX 3.827
12.3.3	900 G	15 MIN	750 W	PYREX 3.838
13.3	500 G	2 MIN 40 SEC	JET DEFROST	



400010888433