

DAILY REFERENCE GUIDE



THANK YOU FOR PURCHASING AN HOTPOINT PRODUCT

To receive more comprehensive help and support, please register your product at www.hotpoint.eu/register



 
You can download the Safety Instructions and the Use and Care Guide by visiting our website docs.hotpoint.eu and following the instructions on the back of this booklet.



Before using the appliance carefully read the Health and Safety guide.

PRODUCT DESCRIPTION


APPLIANCE

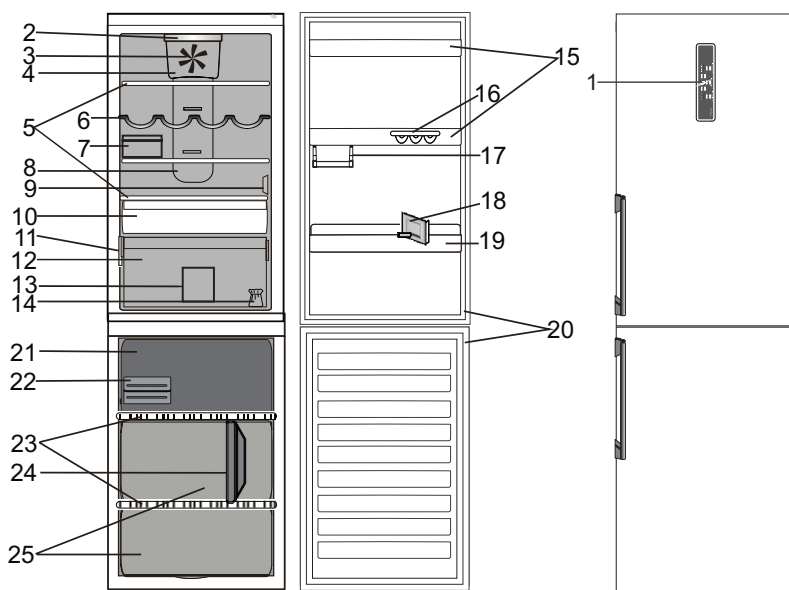

1. Control panel
- Refrigerator compartment**
2. LED lighting
3. Fan
4. Fan cover and antibacterial filter area
5. Shelves
6. Bottle rack
7. Cheese box + Lid
8. Multi-flow cold air area
9. Sensor cover
10. Cooler compartment (best for meat and fish)
11. Rating plate with commercial name
12. Fruits and vegetables crisper
13. Fridge drawer divider

14. Door reversibility kit
15. Door trays
16. Egg tray
17. Small items half balcony
18. Bottle separator
19. Bottle balcony
20. Door seal
- Freezer compartment**
20. Door seals
21. Upper drawer: coolest zone best for freezing fresh food
22. Quick Ice / Eutetics
23. Shelves
24. Freezer drawer divider
25. Freezer drawers

 
CONTROL PANEL

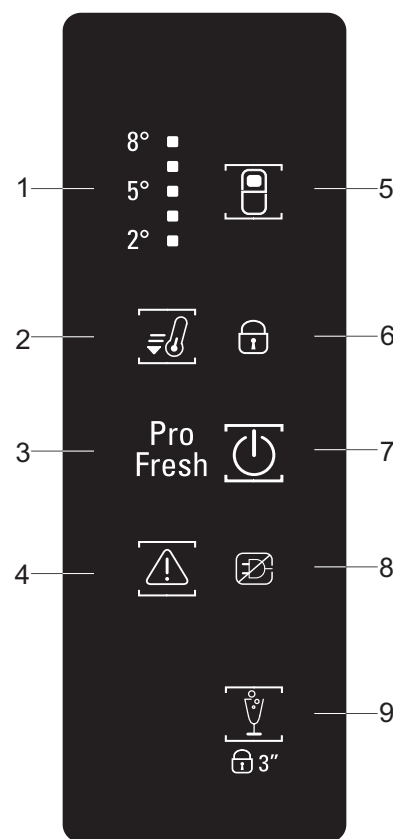


1. FRIDGE TEMPERATURE LEDs
2. FAST COOL button
3. PROFRESH indicator
4. STOP ALARM button / ALARM indicator
5. FRIDGE TEMPERATURE button
6. KEY LOCK indicator
7. ON/STAND-BY button
8. BLACK OUT ALARM indicator
9. PARTY MODE button / KEY LOCK button

ACCESSORIES

 
EGG TRAY

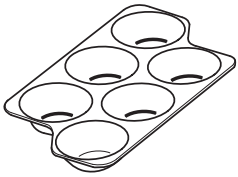


CHEESE BOX

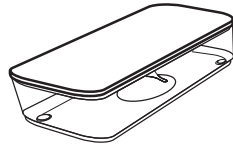 


BOTTLE RACK

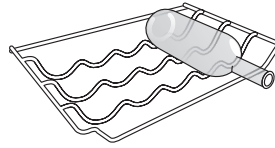 


BOTTLE SEPARATOR

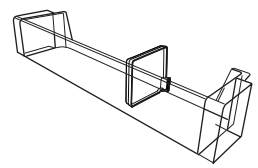 


FREEZER DRAWER DIVIDER

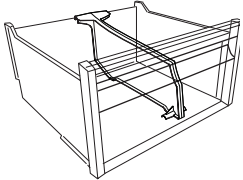 


FRIDGE DRAWER DIVIDER

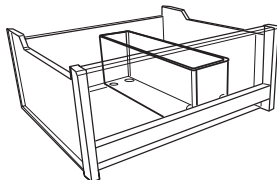 

QUICK ICE COMPARTMENT

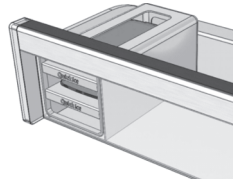 

EUTETICS/QUICK ICE TRAYS

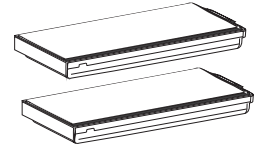 

FIRST TIME USE

HOW TO START THE APPLIANCE

 
After plugging the appliance to the mains, it starts the operation automatically.
After starting the appliance, wait at least 4-6 hours before placing food into the fridge and into the freezer compartment.

When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the fridge compartment settings light-up.

QUICK ICE


HOW TO MAKE ICE CUBES

Put the empty ice cube trays into the freezer 24 hours before using the Quick Ice feature to cool them down. To achieve the best performance of the Quick Ice trays it is recommended to keep them permanently in the freezer and maintain temperature setting at -18°C or colder.
Remove a Quick Ice tray by pulling it towards you.

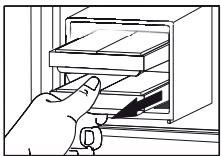

Remove the cover and fill the tray with potable water (maximum level = $\frac{2}{3}$ of the overall capacity of the tray).

 Insert the cover back into the tray and insert it back into the dedicated slots in the top freezer drawer. Take care not to spill water.

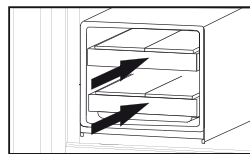

Wait at least 30 minutes until the ice cubes are formed (this time can be slightly longer if the trays are used immediately after the first use).

DAILY USE

See Use and Care Guide for more details on functions / see last page for information on how to obtain the Use and Care Guide

FUNCTIONS

ON/STANDBY FUNCTION

To put the product in Stand-by, **press and hold the On/Stand By button for 3 seconds**. All the indicators turn off except On/Standby indicator.

Press again to reactivate the appliance.

SMART DISPLAY

This optional function can be used to save energy. To activate the Smart Display, press Fridge Temperature and Party Mode buttons at the same time for 3 seconds until an audible signal sounds. To deactivate this function repeat the same procedure. Remember that this function does not disconnect the appliance from the power supply, but only reduce the power consumed by external display.

TEMPERATURE SETTING

To adjust the Fridge Temperature, press the Fridge Temperature button. The Fridge Temperature can be adjusted between +2°C and +8°C, as shown by the Fridge Temperature LEDs.

PARTY MODE

Press to activate/deactivate the Party Mode function. Use this function to chill drinks inside the freezer compartment.

Important: do not leave the bottle inside the freezer compartment longer than the function is active (30 minutes)

KEY LOCK

To lock/unlock the keys of the Control Panel, press the Party Mode button for 3 seconds: the Key Lock indicator will be displayed for a short time and an acoustical signal will be played.

PRO FRESH

This function automatically works to ensure the optimal conditions to preserve the stored food. If there are any variations, Pro Fresh immediately restores the ideal conditions. Results are outstanding: freshness preserved at best throughout the fridge cavity up to 4 times longer.

FAST COOL FUNCTION

Using Fast Cool function it is possible to increase the cooling in the refrigerator compartment. The use of this function is recommended when placing a very high quantity of food in the refrigerator compartment. Press the Fast Cool button to activate Fast Cool function. When activated, the Fast Cool indicator will turn on. The function is automatically disabled after 6 hours, or can be manually disabled by pressing Fridge °C button.

REFRIGERATOR LIGHT

The light system inside the refrigerator compartment uses LEDs light, allowing a better lightning as well as a very low energy consumption.

If the LED light system does not work, please contact the Service to replace it.

 
Important: The refrigerator compartment light switches on when the refrigerator door is opened. If the door is kept open for more than 10 minutes the light will be automatically switched off.

FAN + ANTIBACTERIAL FILTER

The Fan improves temperature distribution inside the refrigerator compartment, allowing better preservation of stored food. If the appliance has the Fan it can be equipped with the antibacterial filter.

Remove it from the box placed in the crisper drawer and insert into the fan cover - as in the picture.


The replacement procedure is included in the filter box.

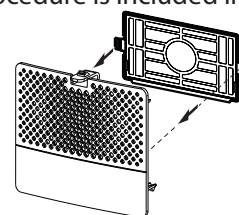

ALARM TABLE

ALARM TYPE	Signal	Cause	Cure
Door open alarm	The acoustical alarm is activated and the Alarm Indicator blinks.	The Fridge or Freezer door has remained open for more than 2 minutes.	Close the door or press the Stop Alarm to mute the acoustical alarm.
Temperature alarm	The acoustical alarm is activated and the Alarm Indicator remains on.	Inside the Freezer the temperature is not adequate	Press the Stop Alarm button ; the acoustical alarm stops, the Alarm Indicator remains on until a temperature < -10°C is reached.
Party Mode alarm	The Party Mode Indicator blinks and the acoustical alarm is activated.	30 min. elapsed since Party Mode function has been activated. It is time to take out the bottle from the freezer (see Use and Care Guide for more details).	Press the Party Mode button to stop the alarm.
Long black-out alarm	The Black Out Alarm icon remains on, the Alarm indicator blinks.	Prolonged power failure, able to cause the inside temperature to increase to 0°C.	Press the Stop Alarm button ; the acoustical alarm stops.
Malfunction	3 central LEDs in the Fridge Temperature LEDs blinks on the display.	Product malfunction.	Contact the After-sales Service.

 HOW TO STORE FOOD AND BEVERAGE

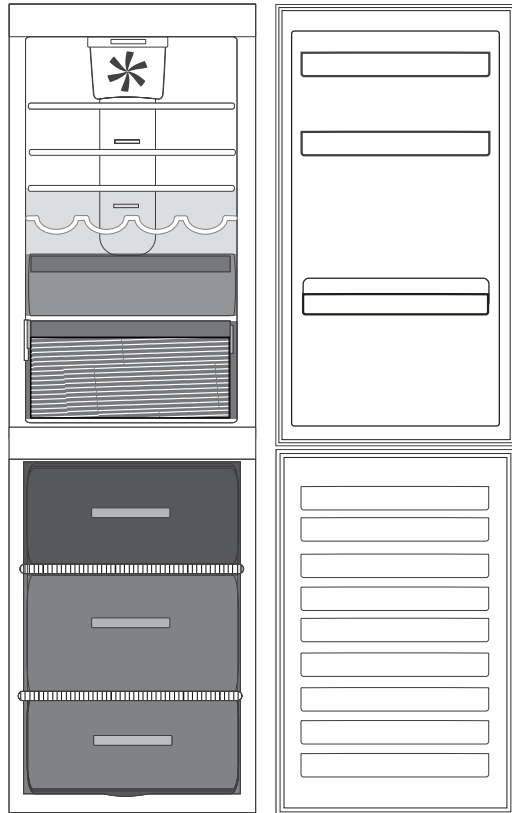

Legend



 
TEMPERATE ZONE

Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam




COOL ZONE

Suggested for storage of cheese, milk, dairy food, delicatessen, yogurt



COOLEST ZONE

 Suggested for the storage of cold cuts, desserts



FRUIT & VEGETABLE DRAWER



FREEZING ZONE DRAWER

(MAX COOL ZONE) Suggested to freeze fresh/cooked food.



NORMAL FREEZER DRAWERS

Note: The Grey tone of the legend doesn't match with the color of drawers

FRIDGE COMPARTMENT

Use recyclable plastic, metal, aluminum and glass containers and cling film to wrap foods.

Always use closed containers for liquids and for food that may give off or be tainted by odor or flavor transfer or cover them.

If you have a little quantity of food to store in the refrigerator, we recommend to use the shelves above the crisper for fruits and vegetables since this is the coolest area of the compartment.

Foods which give off a large amount ethylene gas and those that are sensitive to this gas, such as fruit, vegetables and salad, should always be separated or wrapped so as not to reduce the storage life; for example do not store tomatoes together with kiwi fruits or cabbage.

To avoid bottles falling over, you can use the bottle holder (available on selected models).

Do not store food too close together to enable sufficient air circulation.


FREEZER COMPARTMENT

The freezer is the ideal storage location for store frozen food, make ice cubes and freeze fresh food in the freezer compartment.


The maximum number of kilograms of fresh food that can be frozen within a 24-hour period is indicated on the rating plate (...kg/24h).

If you have a little quantity of food to store in the freezer, we recommend to use the coldest areas of your freezer compartment, corresponding to the upper area.

PRODUCT FICHE

 [www](http://www.docs.hotpoint.eu) The product fiche with energy data of this appliance can be downloaded from Hotpoint website docs.hotpoint.eu

HOW TO OBTAIN THE USE AND CARE GUIDE

 
>  [www](http://www.docs.hotpoint.eu) Download the Use and Care Guide from our website docs.hotpoint.eu (you can use this QR Code), specifying the product's commercial code.



> Alternatively, contact our Client After-sales Service.

CONTACTING OUR AFTER-SALES SERVICE

You can find our contact details in the warranty manual. When contacting our Client After-sales Service, please state the codes provided on your product's identification plate.

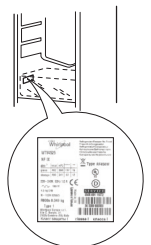

400011088448

Printed in Italy