

KitchenAid®

VOEDSELBLAD
INSTRUCTIES

FOOD TRAY
INSTRUCTIONS

PLATEAU POUR ALIMENTS
MODE D'EMPLOI

EINFÜLLTABLETT
BEDIENUNGSANLEITUNG

VASSOIO PER ALIMENTI
ISTRUZIONI PER L'USO

BANDEJA DE ALIMENTOS
INSTRUCCIONES

MATARBORD
INSTRUKTIONER

MATEBRETT
BRUKSANVISNING

RUOKASUPPILO
KÄYTTÖHJEET

INGREDIENSBAKKE
INSTRUKTIONER

TABULEIRO DE COMIDA
INSTRUÇÕES

STÆKKUNARBAKKI
LEIÐBEININGAR

ΔΟΧΕΙΟ ΤΡΟΦΙΜΩΝ
ΟΔΗΓΙΕΣ

English



Model 5FT Food Tray

Designed exclusively
for use with KitchenAid®
Stand Mixers.

Photograph for demonstration purposes.
Model 5FT does not include food grinder.

RETOUCH to add
beater shaft ring

Table of Contents

Stand Mixer Attachment Safety.....	1
Important Safeguards	1
Food Tray Attachment.....	2
To Attach Food Tray Attachment.....	2
To Use Food Tray Attachment	2
To Clean Food Tray Attachment	2
KitchenAid® Household Stand Mixer Attachment Warranty	3
Service Centers.....	3
Customer Service	3

Stand Mixer Attachment Safety

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:

! DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

! WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put mixer in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts. Keep fingers out of discharge opening.
6. Do not operate the mixer with a damaged cord or plug or after the mixer malfunctions, or is dropped or damaged in any manner. Return the mixer to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock or injury.
8. Do not use the mixer outdoors.
9. Do not let the cord hang over the edge of table or counter.
10. Never feed food by hand. Always use combination food pusher/wrench.
11. Blades are sharp. Handle carefully.
12. This product is designed for household use only.

SAVE THESE INSTRUCTIONS

Food Tray Attachment



To Attach Food Tray Attachment

Before attaching food tray attachment:

1. Turn Stand Mixer speed control to "O" (OFF).
2. Unplug mixer or disconnect power. The Food Tray Attachment is designed to be used with the Food Grinder (model 5FGA) and the Fruit/Vegetable Strainer (model 5FVSFGA) attachments.
3. Attach Food Grinder or Fruit/Vegetable Strainer Attachment to stand mixer.
4. Slide front of Food Tray Attachment forward over back of hopper until it rests firmly in place.

To Use Food Tray Attachment

! WARNING



Rotating Blade Hazard

Always use food pusher.

Keep fingers out of openings.

Keep away from children.

Failure to do so can result in amputations or cuts.

1. Fill Food Tray Attachment with food cut into pieces that will fit in the hopper.
2. Turn mixer to Speed 4 and feed food into hopper using combination food pusher/wrench.

To Clean Food Tray Attachment

Wash in warm sudsy water. If you wish, you may place on top rack of your dishwasher.

KitchenAid® Household Stand Mixer Attachment Warranty

Length of Warranty:	KitchenAid Will Pay For:	KitchenAid Will Not Pay For:
<p>Europe, Australia and New Zealand: Two years Full Warranty from date of purchase.</p> <p>Other: One Year Full Warranty from date of purchase.</p>	<p>Replacement parts and repair labor costs to correct defects in materials or workmanship. Service must be provided by an Authorized KitchenAid Service Center.</p>	<p>A. Repairs when Food Tray is used for operations other than normal household food preparation.</p> <p>B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes.</p>

KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.

Service Centers

All service should be handled locally by an Authorized KitchenAid Service Center. Contact the dealer from whom the attachments were purchased to obtain the name of the nearest Authorized KitchenAid Service Center.

In the U.K.:
Call: 0845 6011 287

In Ireland:
M.X. ELECTRIC
Service Department
25 Alymer Crescent
Kilcock, CO.KILDARE
Call: 1 679 2398/87 2581574
Fax: 1 628 4368

In Australia:
Call: 1 800 990 990

In New Zealand:
Call: 0800 881 200

Customer Service

In U.K. & Ireland: Tollfree number 00800 38104026

Address: KitchenAid Europa, Inc.
PO BOX 19
B-2018 ANTWERP 11
BELGIUM

www.KitchenAid.co.uk
www.KitchenAid.com



FOR THE WAY IT'S MADE.®

® Registered Trademark of KitchenAid, U.S.A.

™ Trademark of KitchenAid, U.S.A.

The shape of the stand mixer is a trademark of KitchenAid, U.S.A.

© 2007. All rights reserved.

Specifications subject to change without notice.