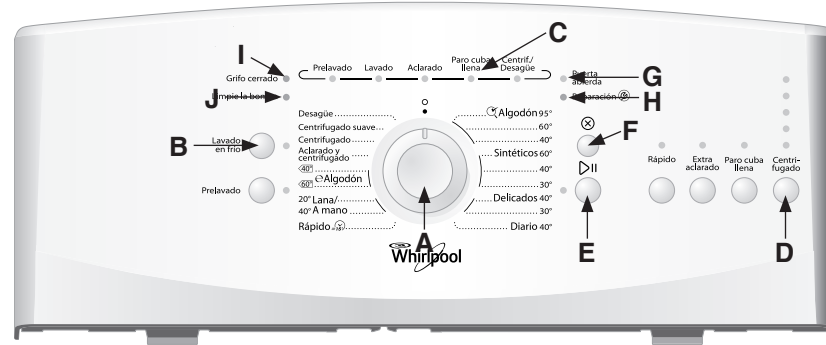


- A.** Programme selector
- B.** “Start delay” button
- C.** Programme sequence indicator
- D.** “Variable spin” button
- E.** “Start/Pause” button
- F.** “Reset” button
- G.** “Lid open” indication

PROGRAMME CHART


This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:

- H.** “Service” indication
- I.** “Water tap closed” indication
- J.** “Clean pump” indication


| Programme | Care Labels | Max. Load kg | Type of wash / Notes <i>- for temperature selection, respect the manufacturer's recommendations on the care label</i> | Detergents and Additives | | | Special options | | | | | Max. Spin Speed rpm | |
|--------------------------------------|--------------------------------------|-----------------|---|--------------------------|-----------|----------|-----------------|-----------|--------|-----------------|-----------------|------------------------|------|
| | | | | Pre-wash | Main wash | Softener | Cold wash | Pre-wash | Rapid | Intensive rinse | Rinse hold | | Spin |
| | | | | Pre-wash | Main wash | Softener | Lavado en frío | Prelavado | Rápido | Extra aclarado | Palo cuba llena | Centrifugado | |
| Cotton 40 - 60 - 95 °C | Algodón 40 - 60 - 95 °C | 6.0 | Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. Selecting “Cotton 95”, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001. | * | Yes | * | * | * | * | * | * | * | max. |
| Synthetics 30 - 40 - 60 °C | Sintéticos 30 - 40 - 60 °C | 3.0 | Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon). | * | Yes | * | * | * | * | * | * | * | max. |
| Delicates 30 - 40 °C | Delicados 30 - 40 °C | 1.5 | Curtains and delicate clothing, dresses, skirts, shirts and blouses. | * | Yes | * | * | * | - | - | * | * | max. |
| Daily load 40 °C | Diario 40 °C | 3.0 | Slightly to normally soiled textiles made of cotton and/or synthetics. | - | Yes | * | * | - | - | * | * | * | max. |
| Speed 30 °C | Rápido 30 °C | 3.0 | Refreshed briefly worn outer clothing made of cotton, artificial fibers and blends with cotton. Use lowest recommended detergent amount. | - | Yes | * | * | - | - | - | * | * | max. |
| Wool/Handwash Cold - 40 °C | Lana/A mano frío - 40 °C | 1.0 | Woolens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk (keep to care label!), linen, wool and viscose marked as handwashable. | - | Yes | * | - | - | - | - | * | * | max. |
| Cotton 40° 60° | Algodón 40° 60° | 6.0 | Normally soiled cotton laundry. At 40°C and 60°C standard cotton programme and most favourable programme in terms of combined water and energy consumption for washing cotton laundry. <i>- Reference programme for the Energy Label.</i> | - | Yes | * | - | - | - | * | * | * | max. |
| Rinse & Spin | Aclarado y centrifugado | 6.0 | <i>Same as the last rinse and the final spin in the “Cotton” programme.</i> | - | - | * | - | - | - | * | * | * | max. |
| Spin | Centrifugado | 6.0 | <i>In this programme spinning is intensive. Same as the spin cycle in the “Cotton” programme.</i> | - | - | - | - | - | - | - | - | * | max. |
| Short spin | Centrifugado suave | 1.0 | <i>In this programme spinning is gentle. Same as the spin cycle in the “Wool” programme.</i> | - | - | - | - | - | - | - | - | * | max. |
| Drain | Desagüe | - | <i>Drain only - no spinning. Alternative method of terminating programme after “Rinse hold”.</i> | - | - | - | - | - | - | - | - | - | - |

* = optional / Yes = dosing required

 - the sensor technology adapts water, energy and programme duration to your wash load.


CONSUMPTION DATA

Power consumption in off-mode 0.11 W / in left-on mode 0.11 W

| Programme | Temperature (°C) | Load (kg) | Water (l) | Energy without "Rapid" (kWh) | Approx. Programme Duration ☺ (hours : minutes) | |  % |
|-----------------------------------|------------------|-----------|-----------|------------------------------|--|--------------|---|
| | | | | | without "Rapid" | with "Rapid" | |
| Cotton | 95 | 6.0 | 53* | 1.91 | 2:05 | 1:55 | 64 |
| Cotton | 60 | 6.0 | 48 | 1.14 | 2:30 | 1:45 | |
| Cotton | 40 | 6.0 | 48 | 0.75 | 2:15 | 1:30 | |
| Synthetics | 60 | 3.0 | 50* | 0.90 | 2:05 | 1:14 | 47 |
| Synthetics | 40 | 3.0 | 40 | 0.50 | 1:50 | 0:59 | |
| Delicate | 40 | 1.5 | 50 | 0.55 | 0:45 | - | 68 |
| Delicate | 30 | 1.5 | 50 | 0.50 | 0:41 | - | |
| Daily load | 40 | 3.0 | 40 | 0.45 | 1:00 | - | 62 |
| Speed 15' | 30 | 3.0 | 30 | 0.15 | 0:15 | - | |
| Wool/Handwash | 40 | 1.0 | 40 | 0.55 | 0:35 | - | 62 |
| Wool/Handwash | Cold | 1.0 | 40 | 0.40 | 0:30 | - | |
| eCotton $\langle 60 \rangle^{**}$ | 60 | 6.0 | 48 | 0.90 | 4:00 | - | 62 |
| eCotton $\langle 60 \rangle^{**}$ | 60 | 3.0 | 31 | 0.78 | 2:10 | - | |
| eCotton $\langle 40 \rangle^{**}$ | 40 | 3.0 | 31 | 0.60 | 2:00 | - | |

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

☺ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

 Approximate remaining moisture content (%). After programme end and spinning with maximum selectable spin speed, in default programme setting.

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

** Standard Cotton programme and basis for Energy Label. For reasons of energy saving, the real water temperature may deviate from the declared cycle temperature.

PREPARING THE WASH CYCLE

1. Load the machine, close the drum doors and check that they are properly locked.
2. Add detergent and eventual additives as described on the front page and in your Instructions for use.
3. Close the lid.
4. Turn the **programme selector** to the desired programme and temperature. The indicator for the preset spin speed lights up. If you do not start the programme soon after having made your choice, the washing machine will switch off automatically after about a quarter of an hour. Switch on the washing machine again by turning the programme selector back to „O“ and then to the desired programme.

SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired - the respective indication lights up. When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

“Cold wash” button

- Water is heated only up to 20°C.
- Suitable for delicate laundry items with wash temperature recommendation of max. 30°C on the care label.
- **Selectable only on the lowest temperature step of each programme.**

“Prewash” button

- Only for heavily soiled loads (for example sand, granular dirt). Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

“Rapid” button

- Enables quicker washing by shortening the programme duration.
- Recommendable for small loads or only lightly soiled laundry.

“Intensive rinse” button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

“Rinse hold” button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- If you select “Rinse hold”, do not leave items to soak for too long.
Note: The programme stops to “Rinse hold” at the time the “Rinse hold” light in the programme sequence indicator is on. The indication lamp next to the **“Start/Pause”** button blinks.

Terminate the “Rinse hold” option:

- Press the **“Start/Pause”** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn and hold the **“Reset”** button for a few seconds to start the Drain programme.

“Spin” button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed “0” is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

PROGRAMME START

Open the tap and press the **“Start/Pause”** button. The indication lamp next to the **“Start/Pause”** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. When the programme phrase is finished, the corresponding indication goes out.

- **Note:** If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted.

“LID OPEN” INDICATION

Before starting and after end of a programme, the lamp lights to show the the lid can be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to “Cancel a running programme before the end”

FAILURE INDICATIONS

In case of any failures or irregularities, consult the “Troubleshooting Guide” in your Instructions for Use.

Water tap closed -

no or not sufficient inlet water.

Service -

failure or malfunction of an electrical component.

Clean pump -

waste water is not pumped out.

PROGRAMME END

- The “Lid open” indicator lights up. After about a quarter of an hour, the washing machine will switch off completely to save energy.
1. Turn the programme selector to the “O” position.
 2. Close the water tap.
 3. Open lid and drum and unload the machine.
 4. Leave the lid open for some time to allow the interior of the machine to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **“Start/Pause”** button to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **“Start/Pause”** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL A RUNNING PROGRAMME BEFORE THE END

The **“Reset”** button cancels a programme before the end. Press the **“Reset”** button for at least 3 seconds. Any existing water is drained out before the door can be opened.