


# **Product sheet**

**KitchenAid**




# Quick Guide

Carefully read the user handbook provided before using the appliance.

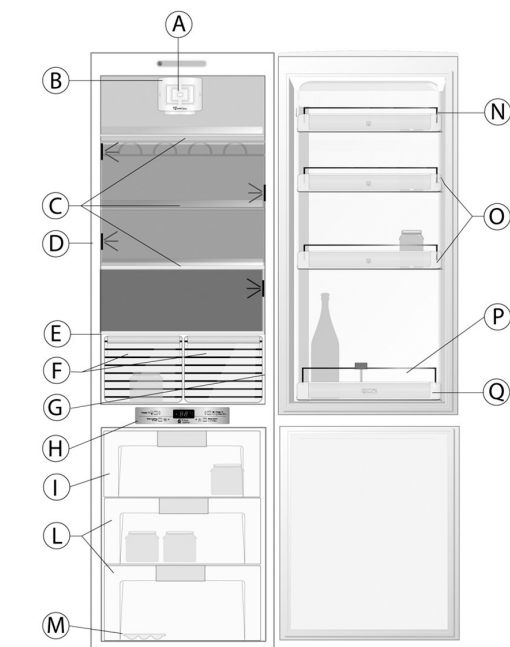

## Refrigerator Compartment

 - A.** Fan and antibacterial and antiodour filter (depending on the model)
- B.** Lamp or LED light (depending on the model)
- C.** Shelves
- D.** LED lights (depending on the model)
- E.** Crisper drawer cover
- F.** Crisper(s)
- G.** Rating plate (located at side of crisper)
- H.** Control panel
- N.** Dairy compartment
- O.** Door trays
- P.** Bottle holder (if provided)
- Q.** Bottle bin



## Freezer Compartment

- I.** Top drawer (freezing area)
- L.** Middle and bottom drawers (storage area for frozen and deep frozen food)
- M.** Ice cube tray (if provided)

**Note:** All shelves, door trays and racks are removable.

The ideal temperatures for preserving foods are already factory-set.

**The characteristics, technical data and images may vary according to the model.**



## Control panel

### On/Standby

Press for 3 seconds to switch off the appliance. In Standby mode, the two hyphens and the light in the refrigerator compartment come on. To switch the product back on, simply press the button briefly again.

**Note:** This operation does not disconnect the appliance from the power supply.

### Refrigerator compartment temperature

A different temperature can be set using the "Fridge" button.


### Freezer compartment temperature

A different temperature can be set using the "Freezer" button.

### Temperature display

The display can alternately show the refrigerator compartment temperature (between 2°C and 8°C) or the freezer compartment temperature (between -16°C and -24°C).

### Fast Freeze

Press the "Freezer" button for 3 seconds 24 hours before placing large amounts of food in the freezer compartment. When the function is activated, the icon  lights up. This function is automatically deactivated after 48 hours, or manually by pressing the "Freezer" button again.

**Note:** The food to be frozen must not be touching already frozen food.

### Deactivating acoustic alarms

#### (Stop Alarm)

To deactivate the acoustic signals, press the "Stop Alarm" button briefly.

#### Key Lock

The key lock can be activated/deactivated by keeping the "key lock" button pressed for 3 seconds, until a confirmation sound is heard (the icon lights up).

If you press any button while the key lock is active, you will hear a sound and the "Key Lock" icon will start to flash.

### Opt Tariff function


The Opt Tariff function enables appliance energy consumption to be concentrated in the reduced rate hours (generally at night), when electricity is readily available and is cheaper than during the daytime (only in countries that utilise a time based multi-rate system - check energy rates with the local electricity company). To activate the function, press the Opt Tariff button at the time the reduced rate begins (depending on your specific tariff plan). For example, if the reduced rate begins at 8 pm, press the button at that time. When the Opt Tariff LED is on, the function is active. Once the function is activated, the appliance automatically adapts energy consumption according to the time selected, i.e. consuming less energy during the day than at night.

**IMPORTANT:** To operate properly, the function must be on during the night and day. The function remains on until deactivated (or it is deactivated in case of a power failure or appliance switch-off). To deactivate the function, press the button again. When the Opt Tariff LED is off, the function is not active.

**Note:** The declared appliance energy consumption refers to operation with the Opt Tariff function deactivated.

### Fan



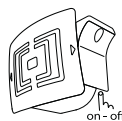

The fan is preset as ACTIVE. The fan can be deactivated by pressing the button on the base (as shown in the figure). If the room temperature exceeds 27°C or if there are water droplets on the glass shelves, the fan must be on in order to ensure the correct preservation of food. Deactivation of the fan enables energy consumption to be optimised.



### Sensor Fresh Control function

This function is used to quickly reach optimum preservation conditions regarding temperature and humidity inside the appliance. The fan must also be on for it to work properly.

What to do if...	Possible causes	Cures
The control panel is switched off, the appliance does not work.	The appliance could be in On/Standby mode. There may be an appliance power supply problem.	Activate the appliance with the On/Standby button Make sure: - there is not a power outage - the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered) - the household electrical system protection devices are efficient - the power cable is not broken.
The inside light does not work.	The light may need replacing.	Models with lamp: disconnect the appliance from the power supply, check the lamp and, if necessary, replace it with a new one (see the section "Lamp or LED replacement"). Models with LED lights: contact the authorised Service Centre.
	The appliance could be in On/Standby mode	Activate the appliance with the On/Standby button
The temperature inside the compartments is not low enough.	There could be various causes (see "Cures")	Make sure: - the doors close properly - the appliance is not installed near a heat source - the set temperature is adequate - the circulation of air through the vents at the bottom of the appliance is not obstructed
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrost water drain hole (see the section "Appliance Maintenance and Cleaning")

What to do if...	Possible causes	Cures
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect. It prevents condensation from forming.	No cure is necessary.
The red light  flashes and an acoustic signal sounds	<b>Door open alarm</b> It is activated when a door remains open for a long period of time.	Close the doors of the product to deactivate the acoustic signal. If the acoustic signal does not go off, it is a power failure alarm (see the section Power failure alarm).
The red light  flashes and an acoustic signal sounds and remains on even with the door closed.	<b>Power failure alarm</b> It is activated in case of a prolonged power outage causing an increase in the freezer compartment temperature. Note: A different product temperature cannot be set until the power failure alarm is deactivated.	Before deactivating the acoustic signal, it is advisable to pay attention to the temperature shown on the temperature display, corresponding to the highest temperature reached in the freezer compartment during the power failure. Press the "Stop Alarm" button briefly to deactivate the acoustic signal. After pressing the button, the temperature display shows the set temperatures again. If the freezer compartment has not yet reached the optimum food preservation temperature, the freezer compartment temperature alarm could be activated (see freezer compartment temperature alarm). Check the food before consuming it.
The red light  comes on (without flashing), an acoustic signal sounds and the freezer compartment temperature display flashes.	<b>Freezer compartment temperature alarm</b> The freezer compartment temperature indicates that the compartment temperature is not optimum. This may happen: with first use, after defrosting and/or cleaning, if large amounts of food are placed inside the freezer or when the freezer door has not been closed properly.	Press the "Stop Alarm" button briefly to deactivate the acoustic signal. The red light goes off automatically when optimum temperature conditions are reached. If the freezer compartment temperature alarm stays on, contact the Authorised Service Centre.
The red light  comes on, an acoustic signal sounds and the letter "F" flashes on the display.	<b>Malfunction alarm</b> The alarm indicates a fault in a technical component.	Call the authorised Service Centre. Press the "Stop Alarm" button briefly to deactivate the acoustic signal





FOR THE WAY IT'S MADE.

Printed in Italy

/// 03/15

**400010780184**

