



THANK YOU FOR BUYING A WHIRLPOOL PRODUCT
In order to receive a more complete assistance, please register your product on www.whirlpool.eu/register




Before using the appliance carefully read the Safety Instruction.

FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply. Connect the appliance to the power supply it starts the operation automatically. The ideal storage temperatures for the food are preset in the factory.

After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available). If the audible signal sounds, it means that the temperature alarm has intervened: press the button to switch off the acoustic alarms.

CONTROL PANEL

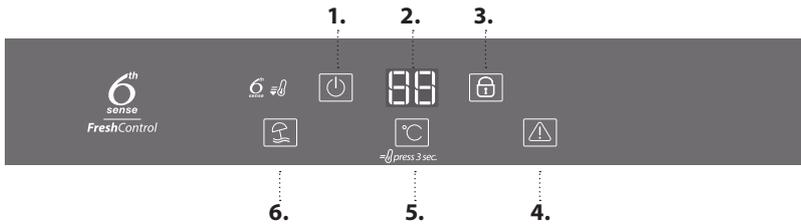

1. On/Stand-by
2. Temperature display
3. Key lock
4. Turning off the sound alarm
5. Appliance temperature
6. Vacation (holiday mode)



ON/STAND-BY

Press the  button for 3 seconds to turn the appliance off. In Stand-by mode, the icon will light up and the light in the refrigerator compartment does not turn on. To turn the product on again, a brief press on the button is sufficient.

Note: this procedure does not disconnect the appliance from the electricity supply.

TEMPERATURE DISPLAY

The display shows the refrigerator compartment temperature (between 2°C and 7°C).

To avoid food waste, please refer to the recommended setting and storage times found in the online user manual.



KEY LOCK

The key lock can be activated/deactivated by keeping the  button pressed for 3 seconds, until a confirmation sound is heard (the icon lights up immediately and in a few seconds disappears). If you press any button while the key lock is active, you will hear a sound and the  icon will flash.



TURNING OFF THE SOUND ALARM

To turn off the sound alarm, briefly press the  button.



APPLIANCE TEMPERATURE

It is possible to set a different temperature with the °C button.

Fast Freeze/Cool Function (Fast Cooling)

To quickly cool the refrigerator compartment, or six hours before putting a large quantity of food to be frozen in the freezer compartment (if there is one), turn on the "Fast Cooling" function by pressing the button  for 3 seconds.

When the function is turned on, the icon will be displayed. The function turns off automatically after 6 hours, or manually by pressing the button  for 3 seconds.

Note: do not put foods that are to be frozen in contact with others that are already frozen.

Recommended setting: - 18°C



VACATION (HOLIDAY MODE)

You can use this function in the event of your prolonged absence.


Press the "Vacation"  button for 3 seconds to turn the function on. The display will show the temperature of the refrigerator compartment (12°C) and the  icon will light up. After activating the function, remove the food from the appliance and keep the door closed - the appliance will maintain a suitable temperature to prevent odours from forming.

To turn off the function, press briefly the button or act on the °C button .

* Available only on certain models



HOW TO STORE FRESH FOOD AND BEVERAGES

** For models with "0° ZONE" COMPARTMENT * the "coolest area" is the one highlighted in the legend

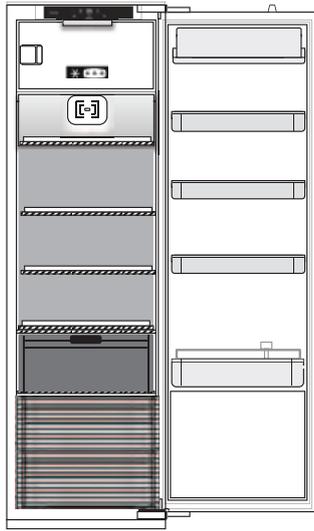

**

Legend

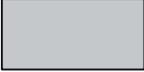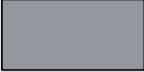
	TEMPERATE ZONE Suggested for storage of tropical fruit, cans, drink, eggs, sauces, pickles, butter, jam
	COOL ZONE Suggested for storage of cheese, milk, daily food, delicatessen, yoghurt
	COOLEST AREA Suggested for storage of cold cuts, desserts, meat and fish
<hr/>	
	FRUIT & VEGETABLE DRAWER

REFRIGERATOR COMPARTMENT

"0° Zone" compartment*

The "0° ZONE" compartment is specifically designed to maintain a low temperature and the correct humidity to preserve fresh food for longer (for example, meat, fish, fruits and winter vegetables).


Humidity control technology coupled with Active0 provides the best food preservation when the food is not completely packed.

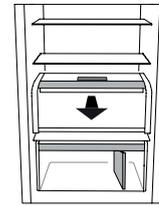

Turning on and turning off the compartment

The internal temperature of the compartment is approximately 0° when the compartment is turned on.

To turn on the compartment, press the button (1) for more than one second until the symbol (2) lights up. The lit symbol (2) means that the compartment is working. Press the button (1) again for more than one second to turn off the compartment. The temperature inside depends on the general temperature of the refrigerator.

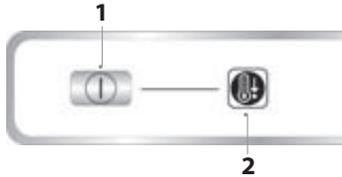

For the correct functioning of the "0° ZONE" compartment, it is necessary that:

- the appliance is turned on;
- the fridge temperature is between +2°C and +6°C;
- the "0° ZONE" compartment is turned on
- Vacation Mode and Stand by are not selected

Note:

- if the symbol does not light up when you turn on the compartment, check that the drawer is properly inserted; if the problem persists contact the authorised Technical Assistance Service;
- when the "0° ZONE" compartment is inserted in the appliance you may hear a faint noise, which you should consider as normal;

Important: be careful when positioning food and containers that are small in size on the upper shelf of the "0° ZONE" compartment in order to prevent them accidentally falling between the shelf and the back wall of the refrigerator compartment.

Removing the "0° zone" compartment

Carry out the following steps:

1. To make it easier to remove the compartment, we recommend that you empty (and possibly remove) the lower door shelves.
2. Remove the compartment by rotating it upwards.
3. Remove the white plastic shelf under the compartment.

Note: it is not possible to remove the upper shelf and side supports.

To use the "0° ZONE" compartment again, carefully reposition the white plastic shelf under the compartment before inserting the drawer and turning the function back on.

To have a larger refrigerator volume and to reduce energy consumption, it is recommended to remove the "0° ZONE" compartment.

Clean the compartment and its components occasionally using a cloth and a solution of warm water (taking care not to submerge the white plastic shelf under the drawer) and neutral cleaning agents specifically for cleaning the inside of the refrigerator. Do not use abrasive cleaning agents.

Before cleaning the compartment (also externally) it is necessary to remove the drawer to disconnect the electrical supply.

Fan*

The fan is pre-set to ON.

You can turn the fan on/off by pressing the  button and  button at the same time for 3 seconds.

The lit  icon indicates that the fan is on and therefore the ProFresh function is on.

If the ambient temperature exceeds 27°C, or if drops of water are present on the glass shelves, it is essential that the fan is on to ensure the proper preservation of the food. Deactivation of the fan allows energy consumption to be optimised.

Note: the fan restarts automatically after a power cut or after turning off the appliance.

* Available only on certain models

Antibacterial filter*

Remove it from the box placed in the Fruit and vegetable drawer and insert into the cover of fan. The replacement procedure is included in the filter box.


Light system (depending on model)



This product contains a light source of energy efficiency class G



This product contains 4 lateral light sources of energy efficiency class F

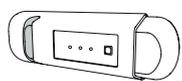

This product contains a light source of energy efficiency class G



This product contains 4 lateral light sources of energy efficiency class F and a top light source of energy class G



This product contains a top light source of energy efficiency class G

FREEZER COMPARTMENT

Freezing fresh food

1. It is advisable to set the temperature colder or turn on the Fast Freeze/ Fast Cool* at least four hours before removing the food from the freezer compartment, to prolong the preservation of the food during the defrosting phase.
2. To defrost, unplug the appliance and remove the drawers. Leave the door open to allow the frost to melt. To prevent the water from escaping during the defrost, it is advised that you place an absorbent cloth on the bottom of the freezer compartment and wring it out regularly.
3. Clean the inside of the freezer compartment and dry it carefully.

4. Turn the appliance back on and put the food back inside. To remove the frost on the STOP FROST* accessory, follow the CLEANING.

Ice cubes*

Fill 2/3 of the ice tray with water and put it back in the freezer compartment. Do not, under any circumstances, use sharp or pointed objects to remove the ice.

The quantity of fresh food that can be frozen in a specific time period is indicated on the rating plate.

Load limits are determined by baskets, flaps, drawers, shelves etc. Make sure that these components can still close easily after loading.

GENERAL INFORMATION

The drawers, baskets and shelves should be kept in their current position unless otherwise specified in this quick guide. The light system inside the refrigerator compartment uses LED lights, allowing for better lighting than with traditional light bulbs, as well as for very low energy consumption.

Doors and lids of the refrigeration appliance should be removed before disposal in the landfill, to avoid children or animals getting trapped inside.

TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The control panel is switched off, the appliance does not work.	The appliance may be in On/Stand-by mode. There may be an appliance power supply problem.	Turn the appliance on pressing the On/Stand-by button. Check that: <ul style="list-style-type: none"> • there is not a power outage; • the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered); • the household electrical system protection devices are efficient; • the power cable is not damaged.
The inside light does not work.	The light may need to be replace.	Models with LED lights: contact the authorised Technical Assistance Service.
	The appliance may be in On/Stand-by mode.	Turn the appliance on pressing the On/Stand-by button.
The temperature inside the compartments is not low enough.	There could be various causes (see "Solutions").	Check that: <ul style="list-style-type: none"> • the doors close properly; • the appliance is not installed near a heat source; • the set temperature is adequate; • the circulation of air through the ventilation of the appliance is ensured.

* Available only on certain models

What to do if...	Possible reasons	Solutions
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrosting water drain (see section "Cleaning and Maintenance").
The front edge of the appliance, at the door strike seal, is hot.	This is not a defect. It prevents condensation from forming.	No solution is necessary.
The red  icon is flashing and a sound signal is activated	Door open alarm It is activated when the refrigerator and/or freezer compartments door remains open for a prolonged period of time.	To turn the sound signal off, close the open door of the product.
The red  icon is flashing, a sound signal is activated and the  icon is activated.	Blackout alarm This activates when there is a prolonged interruption to the power supply which has caused an increase in temperature in the freezer compartment. Note: until the blackout alarm is deactivated, you cannot set a different temperature for the product.	Before turning off the sound signal, it is recommended that you pay attention to the temperature shown on the temperature display, corresponding to the highest temperature reached in the freezer compartment during the power cut. To turn the sound signal off, briefly press the "Turn off sound alarm" button. After pressing the button, the temperature display will again show the temperature set. If the freezer compartment has not yet reached the optimal temperature for the preservation of the food, the freezer compartment temperature alarm may activate (see freezer compartment temperature alarm). Check the condition of the food before consuming it.
The red  icon is lit up (without flashing), a sound signal is activated and the freezer temperature display is flashing.	Freezer compartment temperature alarm The freezer compartment temperature alarm indicates that the compartment is not at the optimum temperature. This may occur: when using for the first time, after defrosting and/ or cleaning, when freezing large quantities of food or when the door to the freezer does not close completely.	To turn off the sound signal, briefly press the "Turn off sound alarm" button (the temperature display will stop flashing). When the optimum temperature conditions have been reached, the red icon will automatically turn off. If the freezer compartment temperature alarm continues, contact the Authorised Technical Assistance Service.
The red  icon will light up, a sound signal is activated and the letter "F" is flashing on the display.	Malfunction alarm The alarm indicates the malfunction of a technical component.	Call the authorized Technical Assistance Service. To turn the sound signal off, briefly press the "Turn off sound alarm" button.

* Available only on certain models

Note: If the chiller declaration is present in the rating plate (see image below), the declaration applies only to standard EN 62552:2013 valid until February 28th, 2021.



Policies, standard documentation and additional product information can be found by:

- Visiting our website docs.whirlpool.eu
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

The model information can be retrieved using the QR-Code indicated on the energy label. The label also includes the model identifier that can be used to consult the <https://eprel.ec.europa.eu> database portal.



Whirlpool



400011424884/B