

5KCM0512E



**KitchenAid**



<b>English</b> .....	5
<b>Deutsch</b> .....	15
<b>Français</b> .....	00
<b>Italiano</b> .....	00
<b>Nederlands</b> .....	00
<b>Español</b> .....	00
<b>Português</b> .....	00
<b>Ελληνικά</b> .....	00
<b>Svenska</b> .....	00
<b>Norsk</b> .....	00
<b>Suomi</b> .....	00
<b>Dansk</b> .....	00
<b>Íslenska</b> .....	00
<b>Русский</b> .....	00
<b>Polski</b> .....	00
<b>Český</b> .....	00
<b>العربية</b> .....	00

 


## TABLE OF CONTENTS

<b>PARTS AND FEATURES</b> .....	6
Parts and accessories.....	6
<b>COFFEE MAKER SAFETY</b> .....	7
Important safeguards .....	7
Electrical equipment waste disposal .....	8
<b>USING THE COFFEE MAKER</b> .....	9
Operating the Precision Press Coffee Maker .....	9
Coffee dosage guide.....	10
<b>CARE AND CLEANING</b> .....	11
Replacing the batteries .....	11
Cleaning the Precision Press Coffee Maker .....	11
<b>TROUBLESHOOTING</b> .....	13
<b>WARRANTY AND SERVICE</b> .....	14

# PARTS AND FEATURES

## PARTS AND ACCESSORIES

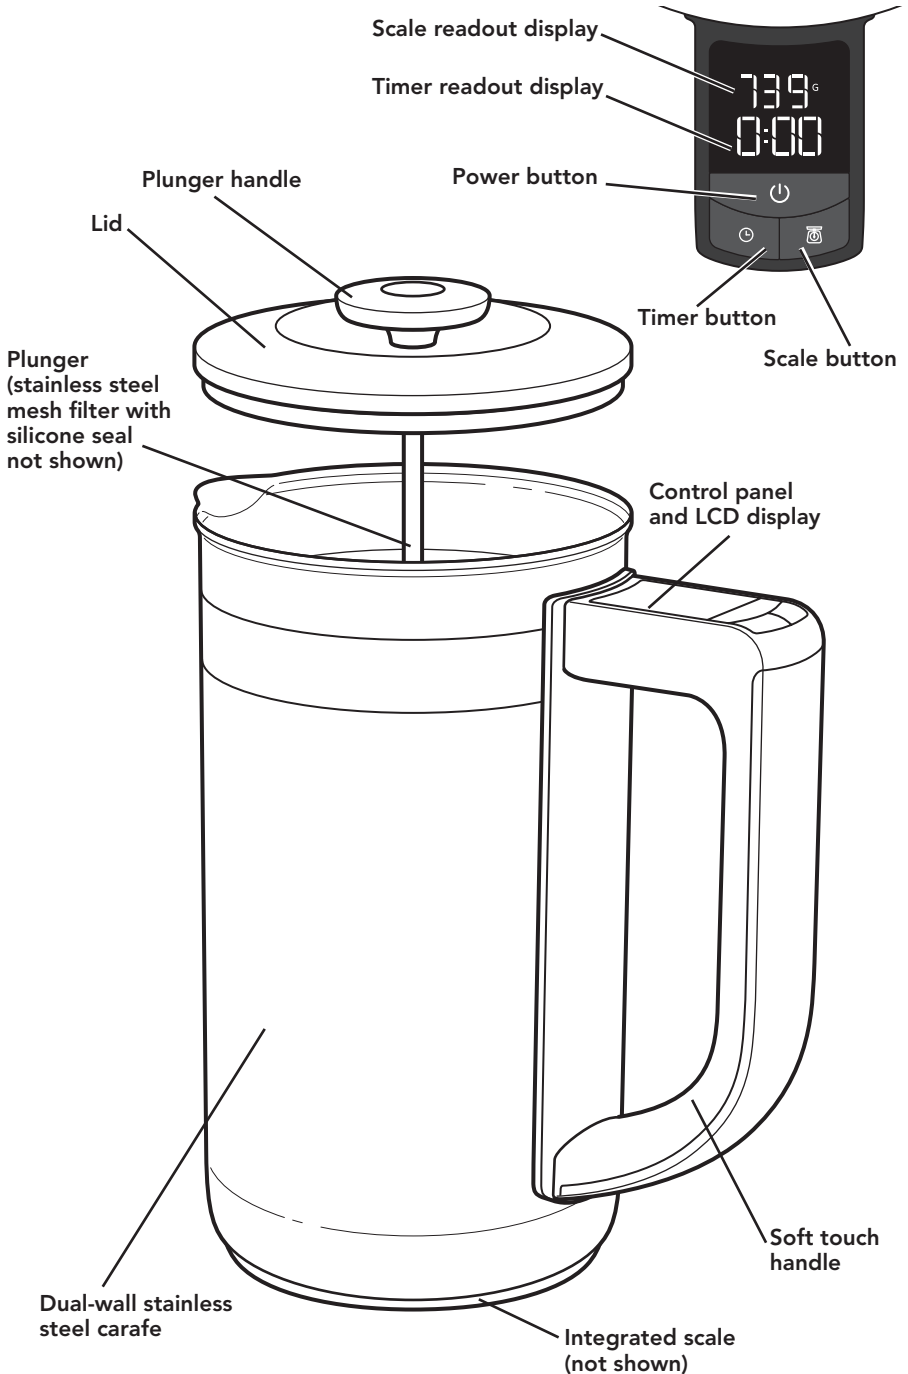

# IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons do not immerse the Coffee Maker in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. Allow to cool before putting on or taking off parts, and before cleaning appliance.
7. Do not operate any appliance after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorised service facility for examination, repair, or adjustment.
8. Do not use outdoors.
9. Do not use near or on a hot gas or electric burner stove, or in a heated oven.
10. Do not use the appliance for other than intended use.
11. Do not use the Coffee Maker without lid properly closed.
12. Do not use the Coffee Maker with loose or weakened handle.
13. Do not clean the Coffee Maker with abrasive cleaners, steel wool, or other abrasive materials.

## **COFFEE MAKER SAFETY**

14. This product is designed for indoor household use only. Not designed for commercial use.
15. Do not overfill the Coffee Maker.
16. Pressing too fast or with more than 7 kg of force can cause burns. Keep face away from top of press.
17. Use only course ground coffee. Fine grind can clog the filter and create high pressure.
18. Place the Coffee Maker on a non-slip surface.

**SAVE THESE INSTRUCTIONS**



# USING THE COFFEE MAKER

 
## OPERATING THE PRECISION PRESS COFFEE MAKER

**IMPORTANT:** Before using the Precision Press Coffee Maker, wash all parts by hand in hot, soapy water. Dry thoroughly. To avoid damage, do not wash in the dishwasher and do not immerse in water.




1

Press the POWER button to turn on the Precision Press Coffee Maker. The LCD display will read --- for a few moments before changing to 0 G and 0:00 minutes when it is ready to use.

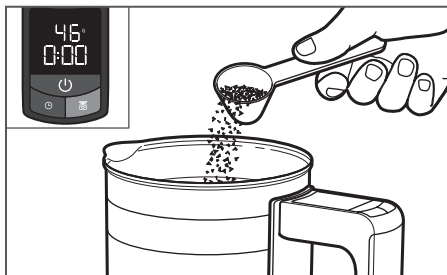

2

 Scoop coarsely ground coffee into the carafe. The scale will weigh the coffee automatically. See the "Coffee dosage guide" for recommended coffee amounts. To switch from grams to ounces, press and hold the SCALE button for 3 seconds. The LCD display will switch from 0 G to 0.0 Oz.

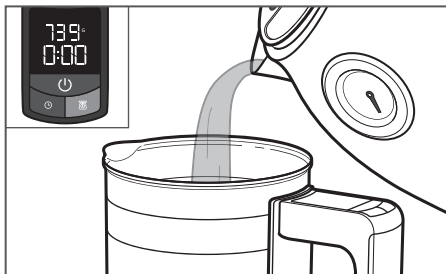

3

Press the SCALE button to tare your measurement. To ensure scale accuracy, slowly pour hot water (91-96°C) into the carafe (allowing sufficient time for scale to adjust). Fill according to your desired number of cups, the scale will automatically measure the water to help you get the right amount. Do not fill past the MAX fill line.




4

Press the TIMER button. Gently stir the coffee back and forth to "break the crust."


**TIP:** This step allows the coffee to "bloom." As the coffee grounds steep in the water, a "crust" of grounds will develop on top of the water. This is a sign that the coffee is brewing properly.

# USING THE COFFEE MAKER

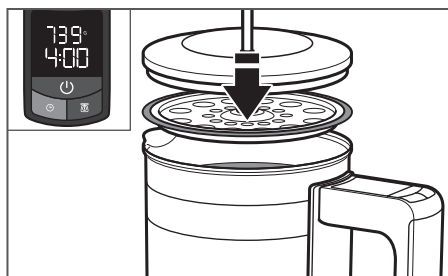 

5

 Place the lid on the carafe. Do not press the plunger. Allow the coffee to steep. A good starting point for steep time is 4 minutes. Steep for more or less time according to taste.

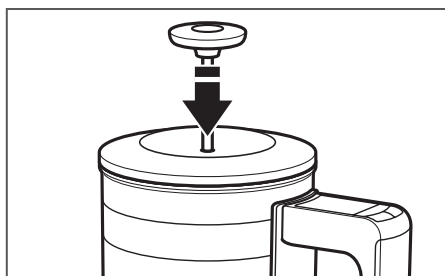

6


Slowly (10-15 seconds) and evenly press the plunger down to separate the grounds from the brewed coffee. When pressing the plunger down, ensure it is vertically positioned for a cleaner brew. Immediately pour your coffee, and enjoy!

**NOTE:** The scale measurement will increase with time and temperature. This is normal.

**TIP:** For best pour, slightly lift the plunger handle before serving.

**TIP:** After brewing is complete and you have served the coffee, pull the plunger up, so that it is not resting in the oily ground coffee. This will assist the clean-up process.

## COFFEE DOSAGE GUIDE

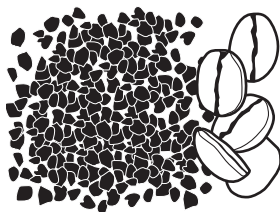 

Example of recommended coarsely ground coffee.


Use the integrated scale in your Precision Press Coffee Maker and the chart below when filling it with coffee grounds and water. Use coarse-ground coffee (see picture to the left).

Cups	Water oz. (weight)	Water grams	Coffee grams	Approx. # of level scoops
2	10	296	18	2
3	15	444	28	3
4	20	591	37	4
5	25	739	46	5


# CARE AND CLEANING
 
## REPLACING THE BATTERIES

The Precision Press Coffee Maker is powered by 2 AAA batteries (included). To replace the batteries, use a Phillips-head screwdriver to access the battery compartment on the bottom of your Coffee Maker.

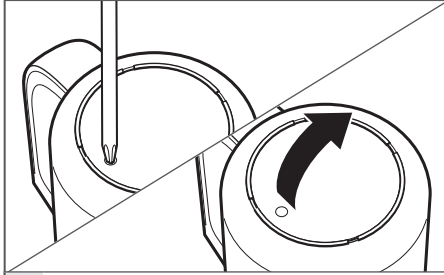

 
- 1** Flip the carafe over, and use a Phillips-head screwdriver to remove the screw on the compartment cover. Lift the compartment cover as shown.

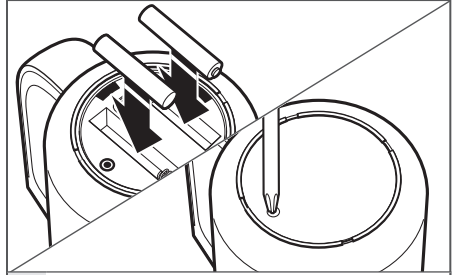


- 2** Replace the 2 AAA batteries in the compartment. Make sure to use the screw when reattaching the compartment cover.

## CLEANING THE PRECISION PRESS COFFEE MAKER

 **IMPORTANT:** It is critical to thoroughly clean the Precision Press Coffee Maker after each use. The taste of your coffee can be impacted if the carafe and plunger assembly is not thoroughly cleaned of all grounds, coffee oil residue, or soap after each use.

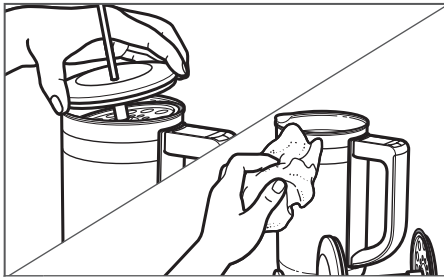


 - 1** Clean all parts of the Precision Press Coffee Maker by hand only. Allow all parts to cool then lift the plunger lid while tilting to free it from the carafe. Wash with a soft, damp cloth. Dry thoroughly with a soft, dry cloth. To avoid damage, do not wash in the dishwasher and do not immerse in water.

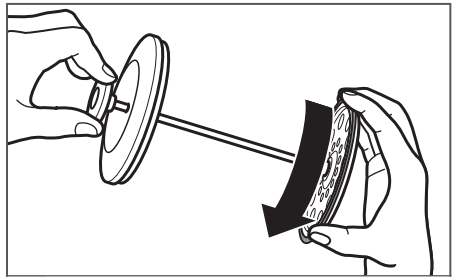


- 2** To prepare the plunger assembly for cleaning, first hold the plunger handle in one hand, and use the other hand to twist the filter disc assembly until it completely separates from the plunger and you can slide the filter disc assembly and lid off.

## CARE AND CLEANING

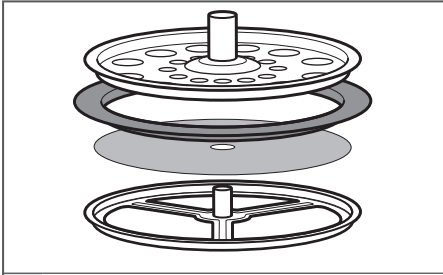 


3

 Next, gently lift the top of the filter assembly to remove the mesh filter disc and the rubber gasket. You will have four separate parts to clean: the filter top, the rubber gasket, the mesh filter disc, and the filter bottom.

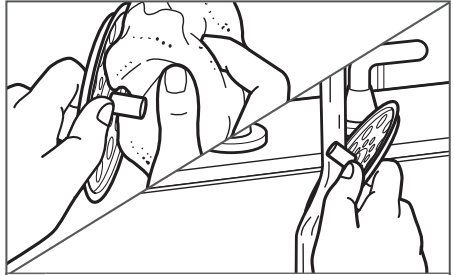

4

 After removing the filter parts from the plunger, wash each thoroughly with a soft, damp cloth. Dry with a soft, dry cloth. Make certain to rinse all soap from the mesh filter disc because any soap or coffee oil residue left on the filter will impact the flavour of your next brew.

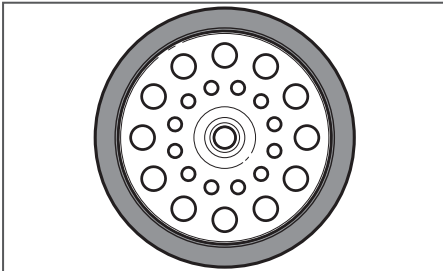

5

To reassemble properly, make certain that the rubber gasket is evenly centered and fully seated in position inside the filter disc assembly.

# TROUBLESHOOTING

**If your Precision Press Coffee Maker should fail to operate as expected, please check the following:**

- If coffee is too bold: Be sure to serve the coffee immediately after your preferred brew time is complete, or the coffee will continue to extract, making it stronger.

Other possible fixes: Grind your coffee at a coarser grind level, and/or steep for less time.

- If coffee is too weak: Either grind your beans to a finer consistency or brew for more time.
- If coffee tastes bitter or unpleasant after use: Taste can be impacted if the Precision Press Coffee Maker isn't thoroughly cleaned. Make certain that all soap, grounds, and oily residue is thoroughly rinsed off all parts after each use. See the "Care and cleaning" section for more information.

- If there's too much resistance when plunging your grind may be too fine.
- If there's too little resistance when plunging your grind may be too coarse.

If the problem is not due to one of the above items, see the "Arranging for service" chapter in the "Warranty and service" section.

Do not return the Precision Press Coffee Maker to the retailer, as they do not provide service.

# WARRANTY AND SERVICE

## KITCHENAID COFFEE MAKER WARRANTY

---

Length of Warranty:	KitchenAid Will Pay For:	KitchenAid Will Not Pay For:
<b>Europe, Middle East and Africa:</b> <b>5KCM0512E</b> <b>Two years full warranty from date of purchase.</b>	<b>The replacement parts and repair labour costs to correct defects in materials or workmanship. Service must be provided by an Authorised KitchenAid Service Centre.</b>	<b>A. Repairs when Coffee Maker is used for operations other than normal household coffee preparation.</b> <b>B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes.</b>

**KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.**

## CUSTOMER SERVICE

---

### **In U.K. and Ireland:**

For any questions, or to find the nearest KitchenAid Authorised Service Centre, please find our contact details below.

**NOTE:** All service should be handled locally by an Authorised KitchenAid Service Centre.

Contact number for U.K. and Northern Ireland:

Tollfree number 0800 988 1266 (calls from mobile phones are charged standard network rate) or call 0194 260 5504.

Contact number for Ireland:

Tollfree number +44 (0) 20 8616 5148

E-mail contact for U.K. and Ireland:

Go to [www.kitchenaid.co.uk](http://www.kitchenaid.co.uk), and click on the link "Contact Us" at the bottom of the page.

Address for U.K. and Ireland:

KitchenAid Europa, Inc.  
PO BOX 19  
B-2018 ANTWERP 11  
BELGIUM

### **In other countries:**

For all product related questions and after sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/Customer Centre.

**For more information, visit our website at:**

**[www.KitchenAid.co.uk](http://www.KitchenAid.co.uk)**  
**[www.KitchenAid.eu](http://www.KitchenAid.eu)**

© 2015. All rights reserved.

Specifications subject to change without notice.



# **KitchenAid**

© 2015. All rights reserved.  
Specifications subject to change without notice.