


Product sheet

KitchenAid

Quick guide

Read the instructions carefully before using the appliance.

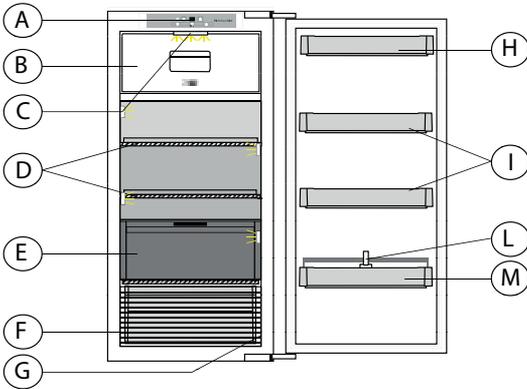

- A. Electronic control unit
- B. Freezer compartment (if the refrigerator has one)
- C. LED indicators (depending on model)
- D. Shelves
- E. Special compartment (Meet & fish or Zero degree) (if provided)
- F. Fruit and vegetable drawer
- G. Rating plate (placed on the side of the fruit and vegetable drawer)
- H-I. Door shelves
- L. Bottle holder (if provided)
- M. Bottle shelf


-  Least cold zone
-  Coldest zone
-  Meet & fish or Zero degree zone
-  Fruit & vegetable zone

Note: All of the drawers, door shelves and shelves can be removed.

The ideal storage temperatures for the food are pre-set in the factory.

Read the instructions carefully before using the appliance.

Features, technical data and images may vary according to the model.

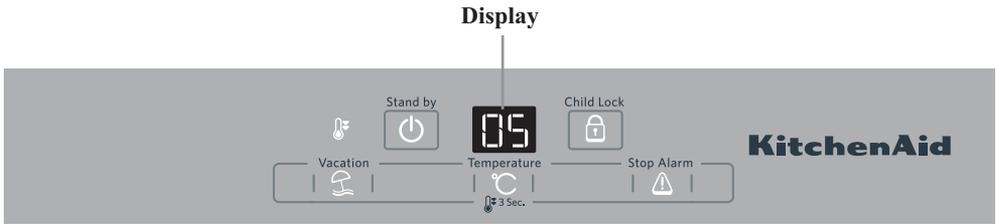

Control panel

On/Stand-by

Press the  button for 3 seconds to turn the appliance off. In Stand-by mode, the icon will light up and the light in the refrigerator compartment does not turn on. To turn the product on again, a brief press on the button is sufficient.

Note: this procedure does not disconnect the appliance from the electricity supply.

Temperature display

The display shows the refrigerator compartment temperature (between 2°C and 7°C).

Child Lock

The Child lock can be activated/deactivated by keeping the “Child lock” button pressed for 3 seconds, until a confirmation sound is heard (the icon lights up immediately and into few seconds disappear).

If you press any button while the Child lock is active, you will hear a sound and the “Child Lock” icon will flash.

Vacation (holiday mode)

You can use this function in the event of your prolonged absence.

Press the “Vacation”  button for 3 seconds to turn the function on. The display will show the temperature of the refrigerator compartment (12°C) and the  icon will light up. After activating the function, remove the food from the appliance and keep the door closed - the appliance will maintain a suitable temperature to prevent odours from forming.

To turn off the function, press briefly the button or act on the °C button .

Appliance temperature

It is possible to set a different temperature with the °C button.

Fast Freeze/Cool Function (Fast Cooling)

To quickly cool the refrigerator compartment, or six hours before putting a large quantity of food to be frozen in the freezer compartment (if there is one), turn on the “Fast Cooling” function by pressing the °C button  for 3 seconds.

When the function is turned on, the icon will be displayed. The function turns off automatically after 6 hours, or manually by pressing the “°C” button for 3 seconds.

Note: do not put foods that are to be frozen in contact with others that are already frozen.

Turning off the sound alarm

To turn off the sound alarm, briefly press the  icon.

MEAT & FISH BOX (depending on model)

The Meat & Fish box was designed specially to keep foods fresher for longer, without altering nutritional values or original freshness.

Do not store fruit or vegetables in this box, as the temperature may drop below 0°C, causing water contained in the food to freeze.

The following factors are vital for the “Meat & Fish Box” to work properly:

- the refrigerator compartment must be switched on
- no special functions must have been selected (Standby, Cooling-Off, Vacation).

If one of these special functions has been selected, the “Meat & Fish Box” must be fresh food inside it removed.

When placing small containers and food products on the top shelf of the “Meat & Fish” compartment, make sure they do not accidentally fall.

What to do if...	Possible reasons:	Solutions:
The control panel is off, the appliance is not working.	The appliance may be in On/Stand-by mode. There may be an appliance power supply problem.	Turn the appliance on pressing the On/Stand-by button. Check that: <ul style="list-style-type: none"> - there is not a power outage - the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered) - the household electrical system protection devices are efficient - the power cable is not broken.
The internal light does not work.	The light may need replacing.	<ul style="list-style-type: none"> - Models with LED lights: contact the authorised Technical Assistance Service. - Turn the appliance on pressing the On/Stand-by button.
	The appliance may be in On/Stand-by mode.	
The temperature inside the compartments is not cold enough.	There could be various causes (see “Solutions”).	Check that: <ul style="list-style-type: none"> - the door close properly - the appliance is not installed near a heat source - the set temperature is adequate - the circulation of air through the ventilation grilles on the base of the appliance is not obstructed.
There is water on the bottom of the refrigerator compartment.	The defrost water drain is obstructed.	Clean the defrosting water drain (see section “Maintaining and cleaning the appliance”).
The red  icon is flashing and a sound signal is activated.	Door open alarm It is activated when the door remains open for a prolonged period of time.	To turn the sound signal off, close the door of the product.
The red  icon will light up, a sound signal is activated and the letter "F" is flashing on the display.	Malfunction alarm The alarm indicates the malfunction of a technical component.	Call the authorized Technical Assistance Service. To turn the sound signal off, briefly press the “Turn off sound alarm” icon.

Note: some noises, such as gurgles and hissing, caused by the refrigeration system, are normal.



FOR THE WAY IT'S MADE.

Printed in Italy
/// 03/15

400010780336

