

KitchenAid

HIGH PERFORMANCE BLENDER

5KSB6061

OWNER'S MANUAL

EN	Owner's Manual	2
DE	Bedienungsanleitung	11
FR	Le manuel d'utilisation	20
IT	Manuale del proprietario	30
NL	Gebruikershandleiding	37
ES	El manual del propietario	45
PT	Manual do proprietário	52
EL	Εγχειρίδιο Κατοχού	60
SV	Användarhandbok	68
NO	Brukerhåndbok	75
FI	Omistajan Opas	82
DA	Brugervejledning	89
IS	Notandahandbók	96
PL	Instrukcja Obsługi	103
CS	Uživatelská Příručka	111
TR	Kullanıcı Kilavuzu	118
UA	Посібник з експлуатації	125
AR	دليل المالك	1

PRODUCT SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

⚠ DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. To protect against risk of electrical shock, do not put Blender in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. European Union Only: This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

PRODUCT SAFETY (CONTINUED)

5. European Union Only: Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
6. Children should be supervised to ensure they do not play with the appliance.
7. Avoid contacting moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from Blade during operation to reduce the risk of injury to persons and/or damage to the Blender.
8. Turn the appliance off (O), then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the Power Cord.
9. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Facility for examination, repair, or electrical or mechanical adjustment.
10. If the Supply Cord is damaged, it must be replaced by KitchenAid, its service agent or similarly qualified persons in order to avoid a hazard.
11. Do not let cord hang over edge of table or counter.
12. Blades are sharp. Care should be taken when handling the sharp cutting Blades, emptying the Jar, and during cleaning.
13. When blending hot liquids or ingredients, Ingredient-Measuring Cup/Cap should remain in place over the Lid opening. Always start on lowest speed and slowly ramp to desired speed when blending hot liquids or ingredients.
14. Keep hands and utensils out of Jar while blending to reduce the risk of severe injury to persons or damage to the Blender. A scraper may be used but must be used only when the Blender is not running.
15. Do not use the appliance outdoors.
16. Never leave the appliance unattended while it is in operation.
17. Be careful if hot liquid is poured into the Blender as it can be ejected out of the appliance due to sudden steaming.

PRODUCT SAFETY (CONTINUED)

18. Flashing light indicates ready to operate - avoid any contact with Blades or moveable parts.
19. Always operate Blender with Lid in place.
20. The use of accessories/attachments not recommended or sold by KitchenAid may cause fire, electrical shock or injury.
21. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
22. Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
23. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

SAVE THESE INSTRUCTIONS

For complete details on product information, instructions and videos, including Guarantee information, visit www.KitchenAid.co.uk or www.KitchenAid.eu. This may save you the cost of a service call. To receive a free printed copy of the information online, call **00 800 381 040 26**.

PRODUCT SAFETY (CONTINUED)

ELECTRICAL REQUIREMENTS

⚠ WARNING



Electrical Shock Hazard

Plug into an earthed outlet.

Do not remove earth prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Voltage: 220-240 V

Frequency: 50-60 Hz

Power: 1800 W


NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way. Do not use an adapter.

Do not use an extension cord. If the Power Cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

BLENDER FUNCTION GUIDE

The Blender features Variable Speed and Pulse functions that allow you to customise your blending for any recipe you make.

You might find that not all recipes are exactly the same, and sometimes a recipe might blend more to your preference on a speed that is not obvious. For example, when making a smoothie, you may prefer the finer texture that a higher speed creates. We encourage you to experiment to find the best speed for your favourite recipes.

SETTING	DESCRIPTION
Pulse	Allows precise control of the duration and frequency of blending. Great for recipes that require a light touch.
Variable Speeds	Manual speeds offer ultimate control of the Blender. Allows for fine-tuned chopping and blending needs to prepare any recipe.
⑩	When speed 10 is selected, the Blender will run continuously on high until the Start/Stop Toggle Switch  is pressed, or after 6 minutes elapse.

PRODUCT ASSEMBLY

PREPARING THE BLENDER FOR USE

WARNING

Electrical Shock Hazard



Plug into an earthed outlet.

Do not remove earth prong.


Do not use an adapter.

Do not use an extension cord.


 
Failure to follow these instructions can result in death, fire, or electrical shock.

Before first use

Before using your Blender for the first time, wipe the Blender Base with a warm, damp cloth, then wipe clean with a damp cloth. Dry with a soft cloth. Wash the Blender Jar, Lid, Tamper, and Ingredient-Measuring Cap in warm, sudsy water (see the “Care and Cleaning” section). Rinse parts and wipe dry.

1. Before using the Blender, be sure the countertop beneath the Blender and surrounding areas are dry and clean. Then, plug the Blender into an earthed outlet.
2. The main power switch is on the back of the Blender Base. Flip the Power switch to the On position. The Status Indicator Light above the Start/Stop Toggle Switch  will begin to flash, indicating that the Blender is in Standby mode. The Blender is now ready to operate.

PRODUCT USAGE

1. Put the items to blend into the Blender Jar. Add liquids first, then soft foods, then leafy greens, and ice or frozen items last.
NOTE: Do not fill Blender Jar past the topmost measurement mark, especially when blending liquids.
2. Make sure that the Lid is fully secured on the Blender Jar. Next, place the Blender Jar on the Base, making sure that it is fully aligned on the Jar Pad.
3. Flip the Start/Stop Toggle Switch  up or down to begin operation of the Blender. The Status Indicator Light will now be solid.
4. Turn the Control Dial to your desired speed. See the “Blender Function Guide” for more information.
5. Use the Tamper accessory as needed for optimal blending performance. Remove the Ingredient-Measuring Cup/Cap only, and leave the Lid in place. Stir or press contents down towards the Blade. When you are finished, replace the Ingredient-Measuring Cup/Cap to the Blender Jar Lid before resuming blending.
6. The Pulse function may also be used on its own as a separate blending function while the Blender is in Standby mode.
7. After blending, flip the Start/Stop Toggle Switch  up or down. Allow the Blender to come to a complete stop before removing the Lid and pouring your blended ingredients.

CARE AND CLEANING

IMPORTANT: Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.

Clean the Blender thoroughly after every use.

NOTE: To avoid damaging the Blender, do not immerse the Blender Base or cord in water. To avoid scratching the Blender, do not use abrasive cleansers or scouring pads.

1. **To clean the Blender Base and Power Cord:** Unplug the Blender before cleaning. Wipe the Base and the Power Cord with a warm, damp cloth, and dry with a soft cloth.
2. Empty the Blender Jar. Fill the Jar with 700 mL of hot water and add 3-4 drops of dishwashing liquid.
3. Place the Jar on the Base. Secure the Lid and Ingredient-Measuring Cup/Cap.
4. Run the Blender for 15-20 seconds on speed 10.
5. Remove the Jar, empty contents and rinse with warm water and dry thoroughly.
6. **Dishwasher-safe, top rack only:** Lid, Tamper, and Ingredient-Measuring Cup/Cap.
7. Blender Jar Pad and Glass Blender Jar can be washed in the bottom rack.

ELECTRICAL EQUIPMENT WASTE DISPOSAL

DISPOSAL OF PACKING MATERIAL

The packing material is recyclable and is marked with the recycle symbol ♻️. The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

RECYCLING THE PRODUCT

- This appliance is marked in compliance with law in the EU and UK covering, Waste Electrical and Electronic Equipment (WEEE).
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol ♻️ on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

DECLARATION OF CONFORMITY

FOR UNITED KINGDOM

This appliance has been designed, constructed and distributed in compliance with the safety requirements of UK Legislation: Electrical Equipment (Safety) Regulations 2016, Electromagnetic Compatibility Regulations 2016. The Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019. The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.

DECLARATION OF CONFORMITY (CONTINUED)

FOR EUROPEAN UNION

This appliance has been designed, constructed, and distributed in compliance with the safety requirements of EC Directives: Low Voltage Directive 2014/35/EU, Electromagnetic Compatibility Directive 2014/30/EU, Ecodesign Directive 2009/125/EC, RoHS Directive 2011/65/EU and following amendments.

TERMS OF KITCHENAID GUARANTEE ("GUARANTEE")

Covering U.K. - Ireland - South Africa - UAE

KitchenAid Europa, Inc., Nijverheidslaan 3, Box 5, 1853 Strombeek-Bever, Belgium ("Guarantor") grants the end-customer, who is a consumer, a Guarantee pursuant to the following terms.

FOR U.K.:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product. In summary, the Consumer Rights Act 2015 says products must be as described, fit for purpose and of satisfactory quality. During the expected lifespan of your product your legal rights entitle you to the following:

- Up to 30 days: if your product is faulty, then you can get an immediate refund.
- Up to six months: if your product can't be repaired or replaced, then you're entitled to a full refund, in most cases.
- Up to six years: if your product does not last a reasonable length of time you may be entitled to some money back.

These rights are subject to certain exceptions. For detailed information please visit the Citizens Advice website www.adviceguide.org.uk or call **03454 04 05 06**.

FOR IRELAND:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product under the European Communities (Certain Aspects of the Sale of Consumer Goods and Associated Guarantees Regulations 2003 (S.I. No. 11/2003)) and other enactments governing the sale of consumer goods.

FOR SOUTH AFRICA:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product. In summary, the Consumer Protection Act, 2008 says that products must be: (i) reasonably suitable for the purpose for which they are intended; (ii) in good working order, of good quality and free of any defects; (iii) useable and durable for a reasonable period of time, having regard to the use to which they would normally be put and to all the surrounding circumstances; and (iv) in compliance with any applicable standards or any other public regulations.

During the expected lifespan of your product and where the products are not purchased online, your legal rights will entitle you to the following:

- You will be entitled to a full refund, if you did not have the opportunity to examine the product before delivery and if you rejected delivery of the product on the basis that the type and quality of the product was not as reasonably expected or did not reasonably conform to the material specifications.
- Within 5 business days after delivery: you may rescind your purchase and request a refund, if your purchase resulted from direct marketing.
- Within 10 business days after delivery: you will be entitled to a full refund, if it is found that the product was unsuitable for a particular purpose specifically communicated to you by the Guarantor.
- Within 15 business days after delivery: you will be entitled to a refund if: (i) the product was not delivered to you; or (ii) if you returned the product to the Guarantor.
- Within 6 months after delivery: you will be entitled to a refund or a replacement product, if the product is defective or fails to operate in terms of its specifications.

Where you have purchased a product online your legal rights will be governed by the Electronic Communications and Transactions Act, 2002 and you will be entitled to the following:

- Within 7 days after conclusion of the transaction or after delivery: you may cancel your purchase without reason and without penalty.
- Within 30 days of the date of cancellation of the transaction: you will be entitled to receive a refund, if you have already made payment.
- You will only be liable for the direct costs of returning the product to the Guarantor.

FOR UAE:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product.

TERMS OF KITCHENAID GUARANTEE ("GUARANTEE") (CONTINUED)

1. SCOPE AND TERMS OF THE GUARANTEE

- a) The Guarantor grants the Guarantee for the products mentioned under Section 1.b) which a consumer has purchased from a seller or a company of the KitchenAid-Group within the following countries: U.K., Ireland, or South Africa, or the United Arab Emirates (UAE).
- b) The Guarantee period depends on the purchased product and is as follows:
- Ten Year full guarantee from date of purchase.**
- c) The Guarantee period commences on the date of purchase, i.e. the date on which a consumer purchased the product from a dealer or a company of the KitchenAid-Group.
- d) The Guarantee covers the defect-free nature of the product.
- e) The Guarantor shall provide the consumer with the following services under this Guarantee, at the choice of the Guarantor, if a defect occurs during the Guarantee period:
- Repair of the defective product or product part, or
 - Replacement of the defective product or product part. If a product is no longer available, the Guarantor is entitled to exchange the product for a product of equal or higher value.
- f) If the consumer wishes to make a claim under the Guarantee, the consumer has to contact the country specific KitchenAid service centres or the Guarantor directly at KitchenAid Europa, Inc. Nijverheidslaan 3, Box 5, 1853 Strombeek-Bever, Belgium;

Email-Address U.K.: CONSUMERCARE.UK@kitchenaid.eu

Email-Address IRELAND: CONSUMERCARE.IE@kitchenaid.eu

Toll Free Number U.K. & IRELAND: **00 800 381 040 26**

FOR SOUTH-AFRICA:

Our local KitchenAid Distributor:

KitchenAid Africa
PO Box 52102
V&A Waterfront
Cape Town
8002

Contact our distributor:

Telephone: +27 21 555 0700

You can contact our Customer Service Centre for Small Domestic Appliances from 8.30 am to 1.00 pm and from 1.30 pm to 5.00 pm or write to us at the following address: hello@kitchenaidafrica.com

FOR UAE:

AL GHANDI ELECTRONICS.

POST BOX NO. 9098,
DUBAI, UNITED ARAB EMIRATES
Toll free number: +971 4 2570007

- g) The costs of repair, including spare parts, and any postage costs (if applicable) for the delivery of a defect-free product or product part shall be borne by the Guarantor. The Guarantor shall also bear the postage costs for returning the defective product or product part if the Guarantor or the country specific KitchenAid customer service centre requested the return of the defective product or product part. However, the consumer shall bear the costs of appropriate packaging for the return of the defective product or product part.
- h) To be able to make a claim under the Guarantee, the consumer must present the receipt or invoice of the purchase of the product.

TERMS OF KITCHENAID GUARANTEE ("GUARANTEE") (CONTINUED)

2. LIMITATIONS OF THE GUARANTEE

- a) The Guarantee applies only to products used for private purposes and not for professional or commercial purposes.
- b) The Guarantee does not apply in the case of normal wear and tear, improper or abusive use, failure to follow the instructions for use, use of the product at the wrong electrical voltage, installation and operation in violation of the applicable electrical regulations, and use of force (e.g. blows).
- c) The Guarantee does not apply if the product has been modified or converted, e.g. conversions from 120 V products to 220-240 V products.
- d) The provision of Guarantee services does not extend the Guarantee period, nor does it initiate the commencement of a new Guarantee period. The Guarantee period for installed spare parts ends with the Guarantee period for the entire product.
- e) **FOR SOUTH-AFRICA & UAE ONLY:**
Further or other claims, in particular claims for damages, are excluded unless liability is mandatory by law.

After expiry of the Guarantee period or for products for which the Guarantee does not apply, the KitchenAid customer service centres are still available to the end-customer for questions and information.

Further information is also available on our website:

- For U.K. & Ireland www.kitchenaid.eu
- For South-Africa: www.kitchenaidafrica.com
- For UAE: www.KitchenAid-MEA.com

PRODUCT REGISTRATION

Register your new KitchenAid appliance now: <http://www.kitchenaid.eu/register>



KitchenAid

©2022 All rights reserved.