

## *Quick Reference Guide*



“Cooking gestures are invisible ingredients. They turn inspiration into emotions and emotions into a masterpiece. It’s all about artisanality, that’s why we take it so seriously.”

*Thanks for choosing*

**KitchenAid**  
FOR THE WAY IT'S MADE.

## *Index*

EN .....	pag. 3
----------	--------

*KitchenAid*  
*Iconic*  
*Fridge*  
*Quick reference guide*

EN

“Cooking gestures are invisible ingredients. They turn inspiration into emotions and emotions into a masterpiece. It's all about artisanality, that's why we take it so seriously.”

 
*Thanks for choosing*

**KitchenAid**  
FOR THE WAY IT'S MADE.

## Quick Guide

Before using your new appliance, please carefully read all of the safety instructions in the Instructions for Use Manual or at [www.kitchenaid.eu](http://www.kitchenaid.eu)

## Product Parts and Features

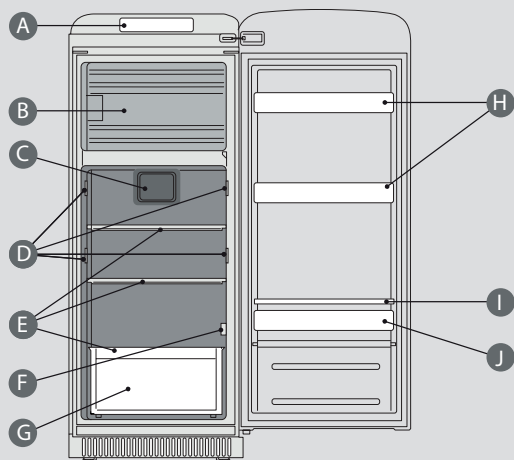

- A. Electronic control group
- B. Freezer compartment (with selected models) \*\*\*
- C. Fan and filter (with selected models)
- D. LED lights (with selected models)
- E. Shelves
- F. Sensor cover
- G. Crisper drawer
- H. Door shelves
- I. Bottle holder
- J. Bottle Shelf


**Please note:** All of the drawers, door shelves and shelves are removable.



Least cold zone  
Coldest zone  
Zero Degrees or Meat & Fish zone  
Crisper zone

**Please note:** Features and technical data may vary depending on the model.

## Control Panel

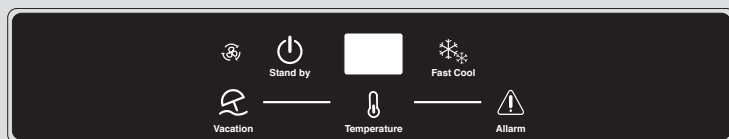

### On/Stand-by

To put the product in Stand-by, press and hold the button for 3 seconds. All the icons turn off except On/ Standby indicator. To reactivate the appliance press once (briefly) this button.

**Note:** this operation does not disconnect the appliance from the power supply.

### Temperature button

Press the Temperature button to change the temperature: the value changes cyclically between 8°C ad 2°C.

**Note:** Displayed set points correspond to the average temperature throughout the whole refrigerator.



 
### Vacation Mode

This function can be activated to reduce the energy consumption of the appliance during a prolonged period of time. After activating the function, remove the food from the appliance and keep the door closed since the refrigerator will maintain a suitable temperature to prevent the formation of unpleasant odors (+12°C).

**To activate/deactivate** press the Vacation mode button for 3 seconds. When the function is enabled, the related symbol will light up and the temperature of the refrigerator compartment will be set to a higher setpoint (the temperature display will show the new temperature setpoint of +12°C). Changing the temperature setpoint will automatically deactivate the function.

### Fan

The Fan improves temperature distribution inside the product, allowing better preservation of stored food. By default, the fan is switched on.



**To switch off the FAN** press and hold Fast Cool  and Stop Alarm  buttons at the same time for 3 seconds until an audible signal sounds and Fan icon  will turn off as confirmation that the fan has been switched off. To switched on the FAN repeat the same procedure. As a confirmation audible signal sounds and the icon turns on.

**Note:** Reasons why switch off the fan look for “ENERGY-SAVING TIPS” in the Instructions for Use.

### Refrigerator compartment temperature

A different temperature can be set using the “Temperature” button.

### Fast Cool Function

Using Fast Cool function it is possible to increase the cooling capacity in the refrigerator compartment. The use of this function is recommended when placing a very high quantity of food in the refrigerator compartment. Press the Fast Cool button  to activate Fast Cool function. When activated, the Fast Cool indicator turns on. The function is automatically disabled after 6 hours, or can be manually disabled by pressing Fast Cool button  again.

### Stop Alarm

Press in case of alarm to mute the acoustic alarm .

## Installation

- Be careful not to damage the floors (e.g. parquet) when moving the appliance.
- Make sure the appliance is not near a heat source.
- Install and level the appliance on a floor strong enough to take its weight and in a place suitable for its size and use.
- The appliance is arranged for operation in places where the temperature comes within the following ranges, according to the climatic class given on the rating plate. The appliance may not work properly if it is left for a long time at a temperature outside the specified range.

Climatic Class	Amb. T. (°C)
SN	From 10 to 32
N	From 16 to 32
ST	From 16 to 38
T	From 16 to 43

## Getting Started and Daily Use

1. When the appliance is delivered, ensure that it has not been damaged and that the door closes properly. Please communicate any damage to the dealer within 24 hours of delivery.
2. We recommend waiting at least two hours before switching the appliance on to ensure that the refrigerant circuit is fully efficient.
3. It is best to clean the inside of the appliance before using it.
4. Where provided, place the **antibacterial / anti-odour filter** inside the fan area as indicated on the filter packaging.

### **Please note:**

*In models with electronics, an acoustic signal may be emitted when the appliance is connected to the electricity grid to indicate that the temperature alarm has been activated. To switch off the acoustic signal, press the Stop Alarm button.*

### **PLEASE NOTE:**

- The ideal storage temperatures for the food are pre-set in the factory.
- After turning the appliance on, it will take about 4-5 hours to reach the correct storage temperature for an appliance filled at standard capacity.

### **DAILY USE**

- |  |   |
|--|---|
| <b>1.<br/>Switching the<br/>appliance on/off</b> | Press the <i>On/Standby</i> button for 3 seconds. |
|--|---|

- |                                   |   |
|-----------------------------------|---|
| <b>2.<br/>Freezing fresh food</b> | Fresh food can be frozen in the <b>freezer compartment</b> (if available). Position the food on the shelf or directly on the bottom of the compartment at a distance of 20 mm from any already frozen food. Check the data plate for the <b>amount of fresh food that can be frozen in a 24-hour period</b> . |
|-----------------------------------|---|

***Please note:** Re-freezing partially defrosted food is not recommended.*

 
- |                          |   |
|--------------------------|---|
| <b>3.<br/>Defrosting</b> | The <b>refrigerator compartment</b> defrosts automatically.<br>It is not necessary to defrost the <b>freezer compartment</b> on <b>frost free models</b> .<br>To defrost the <b>other models</b> , switch off the appliance and remove the drawers, leaving the freezer door open to allow the frost to melt. For best results, use an absorbent cloth to soak up the water then clean and dry the compartment before switching the appliance back on and placing the food back inside. |
|--------------------------|---|

***Please note:** We suggest activating the **Fast Freeze** function about 4 hours before removing the food to defrost the freezer. Doing so will prolong food storage.*

**Please refer to the Instructions for Use Manual or [www.kitchenaid.eu](http://www.kitchenaid.eu) for more detailed information and suggestions for use.**

## Cleaning

### Maintenance and Cleaning of the appliance

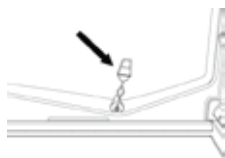

Clean the appliance occasionally with a microfiber soft and non-abrasive cloth to not leave any scratch on the surfaces. The surface must not be cleaned with products containing abrasives or with abrasive or melamine sponges or unsuitable tools .

The cloth could be used with or without cleaners. In case of cleaners a solution of warm water and neutral cleaning agents specifically for cleaning the inside of the refrigerator is preferred. Do not use abrasive cleaning agents and avoid products with strong acid or very alkaline base because they could affect the surface. To ensure the constant and correct flow of the defrosting water, regularly clean the inside of the drain situated in the back wall of the refrigerator compartment near the fruit and vegetable drawer using the utensil provided (see figure). Before carrying out any maintenance or cleaning, take the plug out of the socket or disconnect the appliance from the power supply.

Please refer to the Instructions for Use Manual or [www.kitchenaid.eu](http://www.kitchenaid.eu) for more information.

## Troubleshooting

### Before contacting the Customer Service Center:

1. Restart the appliance to be sure that the problem hasn't been resolved. If necessary, repeat the operation after one hour.
2. Carry out the checks outlined in the **Troubleshooting** section of the Instructions for Use Manual or at [www.kitchenaid.eu](http://www.kitchenaid.eu), then switch the appliance back on.

If the problem persists, contact your nearest Customer Service Center.

You will need to describe the problem to the technician and provide the precise type and model of your appliance, as well as the Assistance Code found on the data plate inside the refrigerator compartment. This information will enable the technician to immediately identify the type of intervention required.

If a repair is required, we suggest you refer to an Authorised Technical Service Center.

Please refer to our website [www.kitchenaid.eu](http://www.kitchenaid.eu) for complete instructions for use.

In addition, you will find a lot more useful information about your products, such as inspiring recipes created and tested by our brand ambassadors or the nearest KitchenAid cookery school.

EN

Printed in Italy



400011103930/B

**KitchenAid**  
FOR THE WAY IT'S MADE.