




Hotpoint

COOK 30


EN Operating Instructions

INSTALLATION


Prior to connecting

 Check that the voltage on the rating plate corresponds to the voltage in your home.

- Do not remove the microwave inlet protection plates located on the side of the oven in a cavity wall. They prevent grease & food particles from entering the microwave inlet channels.
- Place the oven on a stable, even surface that is strong enough to hold the oven and the food utensils you put in it. Use carefully when handling.
- Position the oven at a distance from other heating sources. For sufficient ventilation there must be a space of at least 30 cm above the oven. Ensure that the space underneath, above and around the oven is empty to allow for proper airflow. The microwave oven shall not be placed in a cabinet.
- Ensure that the appliance is not damaged. Check the oven door closes firmly against the door support. Empty the oven and clean the interior with a soft, damp cloth.

 Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

- Do not use extensions on cord: If the power supply cord is too short, have a qualified electrician or service man install an outlet near the appliance.

 This appliance MUST be Earthed or this could result in the risk of electric shock. It MUST be connected to a properly installed earthed socket or fused earthed switch circuit. Consult a qualified electrician or serviceman if the earthing instructions are not completely understood, or if doubt exists as to whether the microwave oven is properly earthed.

AFTER CONNECTING

- The oven can be operated only if the oven door is firmly closed.
- Poor television reception and radio interference

may result if the oven is located close to a TV, radio or aerial.

- The earthing of this appliance is compulsory. The manufacturer will accept no responsibility for injury to persons or animals or damage to objects arising from the non-observance of this requirement.
- The manufacturers are not liable for any problems caused by the user's failure to observe these instructions.

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

- Do not heat, or use flammable materials in or near the oven. Fumes can create a fire hazard or explosion.
- Do not use your microwave oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. This could result in fire.
- If material inside / outside the oven should ignite or smoke is emitted, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.
- Do not over-cook food. This could result in fire.
- Do not leave the oven unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can burn and some plastics can melt if used when heating foods. Do not leave the oven unattended if you are using a lot of fat or oil since they can overheat and cause a fire!
- Do not use ovens for emissions or vapors in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory

- Do not hang or place heavy items on the door as this can damage the oven opening and hinges. The door handle should not be used for hanging things on.
- The Microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, lippers, pongs, damp cloth and similar may lead to risk of injury, ignition or fire.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental abilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental abilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use your microwave oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.
- The door seals and the door seal areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Do not use your microwave oven for cooking or reheating whole eggs with or without shells as they may explode even after microwave heating has ended.

PRECAUTIONS GENERAL

- This appliance is designed for domestic use only!
- The appliance should not be operated without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.
- The ventilation openings on the oven must not be obstructed. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results.
- If you practice operating the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not

- be damaged.
- Do not store or use this appliance outdoors.
- Do not use this product near a kitchen sink in a wet basement, or near a swimming pool, or similar.
- Do not use the activity for any storage purposes.
- Remove wire twists from paper or plastic bags before placing bag in the oven.

DEEP-FRYING

- Do not use your microwave oven for deep-frying, because the oil temperature cannot be controlled.
- Use hot pads or oven mitts to prevent burns when touching containers, oven parts and pan after cooking. Accidental parts may become hot during use, and young children should be kept away.

LIQUIDS

- e.g. beverages or water. Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.
- To prevent this possibility the following steps should be taken:
 1. Avoid using straight-sided containers with narrow necks.
 2. Stir the liquid before placing the container in the oven and let the teapoon remain in the container.
 3. After heating, allow standing for a short time, stirring again before fully removing the container from the oven.
- After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.
- Ensure the Lid and the Teat is removed before heating!

ACCESSORIES

GENERAL

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

Ensure that the utensils you use are oven proof and allow microwaves to pass through them before cooking.

When you put food and accessories in the microwave oven, ensure that they do not come in contact with the interior of the oven.

This is especially important with accessories made of metal or metal parts.

If accessories containing metal come in contact with the oven interior, while the oven is in operation, permanent damage and the oven could be damaged.

Always ensure that the turntable is able to turn freely before starting the oven. If the turntable is not able to turn freely you should use a smaller vessel.

TURNTABLE SUPPORT



Use the turntable support under the Glass turntable. Never put any other utensils on the turntable support.

- Fit the turntable support in the oven.

GLASS TURNTABLE



Use the Glass turntable with all cooking methods. It allows the dripping juices and food particles that otherwise would stain and soil the

interior of the oven.

- Place the Glass turntable on the turntable support.

MAINTENANCE & CLEANING

Cleaning is the only maintenance normally required. It must be carried out with the microwave oven disconnected.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the ap-

pliane and possibly result in a hazardous situation.

Do not use metal scouring pads, abrasives, cleansers, steel-wool pads, gritty wash cloths etc which can damage the control panel, and the interior and exterior oven surfaces. Use a cloth with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.

Do not spray directly on the oven. At regular intervals, especially if spills have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.

This oven is designed to operate with the turntable in place.

Do not operate the microwave oven when the turntable has been removed for cleaning.

Use a soft and damp cloth with mild detergent to clean the interior surfaces front and rear of the door and the door opening.

Do not allow grease or food particles to build up around the door.

For stubborn stains, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

Adding some lemon juice to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odors inside the oven.

Do not use steam cleaning appliances when cleaning your microwave oven.

The oven should be cleaned regularly and any food deposits removed.

The ceiling beneath it may need regular cleaning. This could be done with a soft and damp cloth with mild detergent.

DISHWASHER SAFE:

- Turntable Support
- Glass Turntable


TROUBLE SHOOTING GUIDE


If the oven does not work, do not make a service call until you have made the following checks:

- The Turntable and turntable support is in place.

- The Plug is properly inserted in the wall socket.
- The Door is properly closed.
- Check your Fuses and ensure that there is power available.
- Check that the oven has ample ventilation.
- Wait for 10 minutes then try to operate the oven once more.
- Open and then close the door before you try again.


This is to avoid unnecessary calls for which you will be billed. When calling for Service, please give the serial number and telephone number of the oven (see Service label). Consult your warranty booklet for further advice.

 If the mains cord needs replacing it should be replaced by the original mains cord, which is available via our service organization. The mains cord may only be replaced by a trained service technician.

 Service only to be carried out by a trained service technician. It is hazardous for anyone other than a trained person to attempt any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy. Do not remove any cover.


CONTROL PANEL DESCRIPTION

MWH 301 B

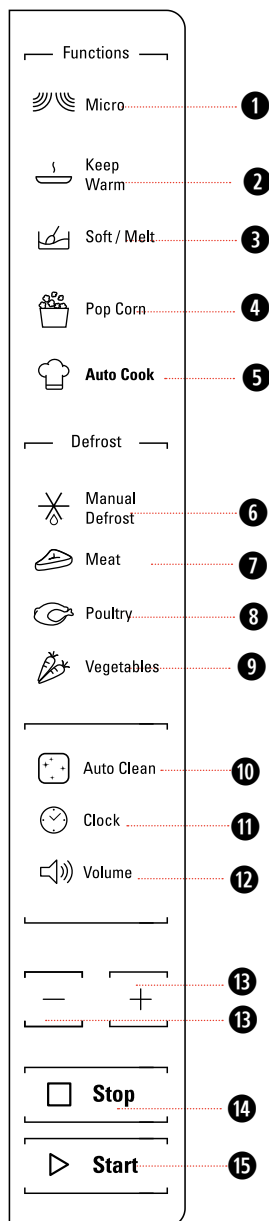

- 1** Micro
Use to set power level.
- 2** Keep Warm
Touch to set Keep Warm program.
- 3** Soft/Melt
Press this button to access Soft/Melt cooking mode.
- 4** Pop corn
- 5** Auto Cook
Use to access the automatic recipes menu.
- 6** Manual Defrost
To defrost manually.
- 7 8 9** Meat/Poultry/Vegetables
To set defrost menu.
- 10** Auto Clean
Use to clean cavity.
- 11** Clock
Use to set the time of day.
- 12** Volume
Use to activate/deactivate beep signal.
- 13** +/-
Use to input food menu code, clock time, cook time, cook weight.
- 14** STOP
Use to pause, stop or cancel cooking.
- 15** JET START
Use to start the cooking.
Use to set quick start program.

DISPLAY DESCRIPTION

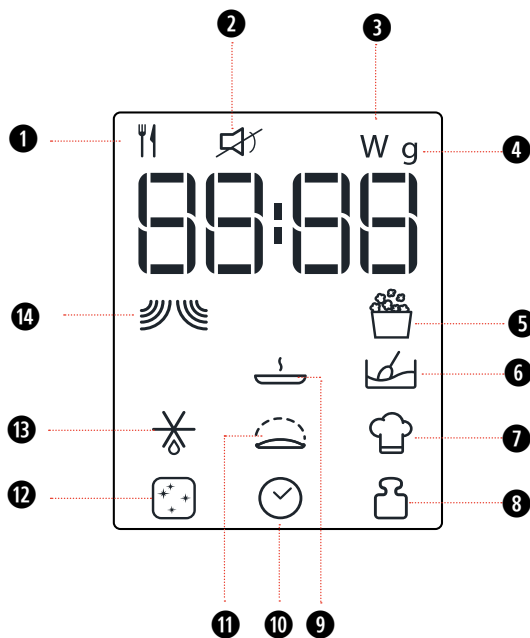

- ❶ Food type selection
- ❷ Mute Icon
- ❸ Microwave power (watt)
- ❹ Weight (grams)
- ❺ Popcorn Icon
- ❻ Soft/Melt Icon
- ❼ Auto cook Icon
- ❽ Insert weight
- ❾ Keep Warm Icon
- ❿ Insert time
- ⓫ Dough Rising Icon
- ⓬ Auto clean Icon
- ⓭ Defrost Icon
- ⓮ Microwave Icon

STAND-BY MODE

The oven is in Stand-by mode when the clock is displayed (or, if the clock has not been set, when the display will show “:.”).

START PROTECTION / CHILD LOCK

This automatic safety function is activated one minute after the oven has returned to “Stand-by mode”.

When the safety function is active the door must be opened and closed in order to start the cooking, otherwise the display will show “door”.

door

PAUSE OR STOP COOKING

To pause cooking:

The cooking can be paused to check, add or turn or stir the food by opening the door. Press STOP button once, the functions can be paused as what they are, press STOP button twice, the functions stopped.

The setting will be maintained for 5 minutes.

To continue cooking:

Close the door and press the Jet Start button. The cooking is resumed from where it was paused.

If you don't want to continue cooking you can:

Remove the food, close the door and press the Stop button.

When the cooking is finished:

The display will show the text “End”. An acoustic beep will signal once a minute for 2 minutes.

Please note that reducing or stopping this programmed cooling cycle will not have a negative impact on the functioning of the product.

ADD / STIR / TURN FOOD

Depending on the selected function, it could be needed to add / stir / turn food during cooking. In these cases the oven will pause cooking and it will ask you to perform the needed action.

When required, you should:

- * Open the door.
- * Add or Stir or Turn the food (depending on the required action).
- * Close the door and restart by pressing JET START button.

Notes: if the door is not opened within 2 minutes from the request to Add or Stir or Turn the food, the microwave oven will continue the cooking process (in this case the final result may not be the optimal one).


CLOCK

To set the Clock of your appliance:

1. In standby, touch the Clock button once. The display shows the current clock.
2. Press + / - to set the hour.
3. Press Clock/JET START button to confirm.
4. Press + / - to set the minute.
5. Press Clock/JET START button to confirm the setting.

Note:

Every time after cooking process is completed, the screen shows “End” and issued a prompt until opened the door to return standby (no operation for 10 minutes automatically return to standby).

 • When plug in, the screen shows “12:00” (“12” flashing), 1 minute later return to standby (before returning standby can directly set clock).

- In the process of cooking, press Stop button once to pause, press Jet Start button to continue cooking, but press Stop twice to cancel this program.
- In the process of cooking set, no operating system automatically return to standby mode in 1 minute.



JET START

This feature allows you to start the oven quickly. Press JET START button once, the oven starts work at full power level automatically. During cooking, press JET START to add time. The longest cooking time is 90 minutes.

1. Press the Jet Start Button.

Pressing the Jet Start button the Microwave function will start at maximum microwave power (800 Watt) for 30 seconds.

Pressing the JET START button, the Microwave function will start at full microwave power (900W) for 30 seconds.



- It is possible to change the power level and the duration time even after the cooking process has been already started. To adjust the power level, simply press the Microwave button repeatedly.
- To change the duration time, please press +/- button. Or press the JET START button once to increase the duration time by 30 seconds.



KEEP WARM

This function allows you to keep your dishes warm automatically.

1. Press the Keep Warm button. The display shows as left side.
2. Press +/- button to select suitable time, then press JET START button.



- The keep warm cycle is 15 minutes, to ensure keep perfect effect, please select the time more than 15 minutes



POPCORN

This function allows to cook Pop Corn microwaveable bags (net weight of the bag has to be 100g).

1. Press the Pop corn button.
2. Press JET START button to start the function.



AUTO CLEAN

This automatic cleaning cycle will help you to clean the microwave oven cavity and to remove unpleasant odors.

BEFORE STARTING THE CYCLE:

1. Put 300ml water into a container (see our recommendations in the below section "Tips and suggestions").
2. Place the container directly on the middle of the cavity

TO START THE CYCLE:

3. Press the Auto Clean button, the cleaning cycle duration will be visible on the display.
4. Press the Jet Start button to start the function.

WHEN THE CYCLE IS FINISHED:

5. Press the Stop button.
6. Remove the container.
7. Use a soft cloth or a paper towel with mild detergent to clean the interior surfaces.



- For a better cleaning result, it is recommended to use a container with a diameter of 17-20cm, and a height that is lower than 6.5cm.
- It is recommended to use a container of light plastic material that is suitable for the microwave.
- As the container will be hot after the cleaning cycle is completed, it is recommended to use a heat resistant glove when removing the container from the microwave.
- For a better cleaning effect and removal of unpleasant odors, add some lemon juice or vinegar to the water.



MICROWAVE

To cook with microwave power individually, press the Micro button repeatedly to select a cooking power level, then press +/- button to set a desired cooking time. The longest cooking time is 90 minutes.

1. Press the Micro button. The default power level (750W) will be shown on the display and the watt icon starts blinking.
2. Press the Micro button repeatedly or press +/- button to select suitable cooking power, then press JET START button
3. Press + / - to set the cooking time.,then press JET START button to start cooking.



If need to change the power, press the Micro button again,the desired power level can be selected as below table.

POWER	SUGGESTED USE:
90 W	Softening ice cream, butter and cheeses. keep warming.
160 W	Defrosting.
350 W	Simmering stews, melting butter.
500 W	More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
650 W	Cooking of fish, meat, vegetables etc.
750 W	Cooking of fish,meat, vegetables,etc.
900 W	Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.



MANUAL DEFROST

This function allows you to defrost food.

1. Press the Defrost button,press JET START to confirm.
2. Press +/- button to adjust cooking time.
3. Press JET START to start.



Two-thirds of cooking time the system will pause to remind you to turn over the food until you depress JET START button to enter into the next defrosting stage, and defrost resume.

For best result we recommend to defrost directly on the cavity bottom.

If the food is warmer than deep-freeze temperature (-18°C), choose a lower weight than the food. If the food is colder than deep-freeze temperature (-18°C), choose a higher weight than the food.

Separate pieces as they begin to defrost. Individual slices defrost more easily.

Standing time after defrosting always improves the result since the temperature will then be evenly distributed throughout the food.



VOLUME:SILENCE MODE

This function allows to activate/deactivate all the sounds played by the appliances,includes button press, warnings, alarm, even end audio feedback.


Press Volume button to become mute,press Volume button again to become sounding.









This function can operate at any time.

Soft/Melt

A selection of automatic recipes with preset values to offer optimal cooking results.

1. Press the Soft/Melt button.
2. Press Soft/Melt button repeatedly or press +/- button to select the desired recipe (see the table below).
3. Press the JET START button to confirm the recipe and press +/- button to select the weight when there is a weight range in the table.
4. Press the JET START button. The function will start.

 The cooking recipe will be confirmed once you leave the function button for 3 Seconds, press the function key again to change the recipe type.

FOOD TYPE		WEIGHT	HINT
P1	Soften  Butter	50g - 500g/50g	From refrigerator state, unwrap and place in microwave safe dish
P2	Soften  Ice Cream	50g - 1000g/50g	From frozen state, place ice cream container on turntable.
P3	Soften  Cream Cheese	50g - 500g/50g	From refrigerator state, unwrap and place in microwave safe dish
P4	Soften  Frozen Juice	250g - 1000g/250g	From frozen state, remove lid from container.
P5	Melting  Butter	50g - 500g/50g	From refrigerator state, unwrap and place in microwave safe dish
P6	Melting  Chocolate	100g - 500g/50g	From room temperature, place in microwave safe dish.
P7	Melting  Cheese	50g - 500g/50g	From refrigerator state, place in microwave safe dish.
P8	Melting  Marshmallows	50g - 500g/50g	From room temperature, place in microwave safe dish. The dish should be at least double volume with the marshmallows since they are expanded during cooking.






DEFROST MENU(MEAT/POULTRY/VEGETABLES)

These functions allows you to defrost food.

1. Press the Meat/Poultry/Vegetables buttons,press JET START to confirm.
2. Press +/- button to adjust the weight of food.
3. Press JET START to start.



It would be better that, turn food when the oven prompts.

FOOD TYPE		WEIGHT	SUGGESTED USE
P2	 Minced meat	100g - 2000g	Minced meat,cutlets, steaks or roasts. After cooking, allow food to rest for at least 5 minutes for better results.
P3	 Poultry	100g - 2000g	Whole chicken, pieces or fillets. After cooking, allow food to rest for 5-10 minutes for better results.
P4	 Vegetables	100g - 1000g	Larger, medium and small cut vegetables. Before serving, allow food to rest for 3-5 minutes for better results.



AUTO COOK MENU

A selection of automatic recipes with preset values to offer optimal cooking results.











1. Press the Auto Cook button.
2. Press Auto Cook button repeatedly or press +/- button to select the desired recipe (see the table following).
3. Press the JET START button to confirm the recipe and press +/- button to select the weight when there is a weight range in the table.
4. Press the JET START button.The function will start.



According to the selected recipe, after a certain time, the display would ask you to add or turn or stir the food. See "Add/Stir/Turn food" chapter on page 8.



The cooking recipe will be confirmed once you leave the function button for 3 Seconds,press the function key again to change the recipe type.

RECIPE	INITIAL STATE	WEIGHT AMOUNT	DURATION	PREPARATION
1  Risotto	Frozen	250-1000g/250g	20-31min.	Put food onto microwave safe dish(250g risotto with 400g water for 1 serving),cover the dish.
2  Cupcakes	Room temperature	300g / 600g	5-11 min.	Put 125g eggs and 170g sugar into container then stir for 2-3mins add 170g flour,10g baking powder,100g water,50g butter,put food into the cups Put the cups around the turntable to make sure heated evenly.
3  Vegetable	Room temperature	200-500g/50g	3-6 min.	Cut the vegetable into pieces,add 2 tablespoon water.
4  Spaghetti	Room temperature	100-300g/100g	13-17 min.	Put the spaghetti and water into microwave safe dish(100g for 1 serving,need 800g water).
5  Soup	refrigerator temperature	300-1200g/300g	2-7 min.	Cover the dish , leaving an air ventilation.
6  Scrambled eggs	Room temperature	1-4eggs	2-4 min.	Well beat the egg and water together, cover the measuring cup with plastic wrap.
7  fish fillet	refrigerator temperature	200-500g/50g	6-11 min.	Cover the dish and leave a vent.
8  Green bean	Room temperature	200-500g/50g	4-7 min.	Add 2 tablespoon water and cover the dish .
9  Yogurt	Room temperature	1000g	5Hr20 min.	Use boiled water to beat the container.Put 1000ml milk and 1g yogurt starter into container,then add 50g sugar. Cover the container during the cooking.
10  Rising	Room temperature	1 dough	65min.	Put 200ml water into oven. Add the prepared dough when oven prompt.

TECHNICAL SPECIFICATION

Supply Voltage	230 V/50 Hz
Rated Input Power	1400 W
Outer dimensions (HxWxD)	300X 539 X 398
Inner dimensions (HxWxD)	240 x 354 x 358

GUARANTEE

12 months Standard Guarantee Enhanced to 2 years upon product registration

This certificate of guarantee represents the guarantee ("Guarantee" hereinafter) offered by Indesit Company UK Limited with registered office at Peterborough PE2 9JB in relation to products purchased in the United Kingdom and Indesit Ireland Limited with registered office in Dublin 9, Ireland for products purchased in the Republic of Ireland. This Guarantee does not affect your statutory rights.

Your product has the benefit of our manufacturer's Guarantee, which covers the product for twelve months from the date of purchase.

This gives you the reassurance that if, within that time, your product is proven to be defective because of either workmanship or materials we will, at our discretion, either repair or replace the product at no cost to you.

This Guarantee is subject to the following conditions:

- Documentary proof of original purchase date is provided.
- Cosmetic damage must be reported within 14 days from the date of purchase.
- The product has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The product is used only on the electricity supply printed on the rating plate.
- The product has been used for normal domestic purposes only.
- The product has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us.

- Any repair work must be undertaken by us or our appointed agent.
- Any parts removed during repair work or any product that is replaced become our property.
- The product is used in the United Kingdom or Republic of Ireland.

The Guarantee does not cover:

- Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation.
- Accidental damage, this includes but is not limited to, damage which occurs as a result of an external action.
- Replacement of any consumable item or accessory. These include but are not limited to:
 - plugs, cables, light bulbs, hoses, brushes, covers and filters.
 - Replacement of any removable parts made of glass or plastic.

After Sales Service

No one is better placed to care for your Hotpoint product during the course of its working life than us – the manufacturer.

Essential Contact Information Advice Line

We have a dedicated team who can provide free advice and assistance with your product if you experience any technical difficulties. Simply call our Hotpoint Service Hotline for telephone assistance.

UK: 03448 240 055

Republic of Ireland 0818 904 041

www.hotpointservice.co.uk

Please note:

Our advisors will require the following information:

Model number:

Serial number:

Consumables and Accessories

We supply a full range of consumables and accessories to keep your product functioning efficiently throughout its life.

UK: 03448 225 225

Republic of Ireland: 0818 313 413

parts.hotpoint.co.uk/shop

Recycling and Disposal Information

As part of Hotpoint's continued commitment to helping the environment, Hotpoint respects the right to use quality, recycled components to keep down a customer's costs and minimise material wastage.

Please dispose of packaging and old products carefully.

Register your new product and receive 1 additional year FREE!

As an additional benefit of owning your Hotpoint product, we are offering 1 year additional free guarantee. To be eligible for this you will need to contact us to register your product within 28 days of purchase. If you do not register your appliance within the 28 days you will still be entitled to 1 year manufacturer's guarantee. To activate your 2 year guarantee register online at www.hotpoint.co.uk. Please note that the extended guarantee is only available in the UK and Ireland and is subject to the same terms and conditions as the 1 year guarantee. Please refer to the certificate of guarantee for more information.

DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European Directive 2012/19/UE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream.



Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be collected separately. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

Hotpoint

Whirlpool EMEA S.p.A.
via Carlo Pisacane n.1,
20016 Pero (MI), Italy

www.hotpoint.eu

MWH 301 B UK