

ECODESIGN LEAFLET - 2020

The intent of this document is to provide a list of suggestions that can help to optimize the energy performance and usage of the appliance.

This refrigerating appliance is not intended to be used as a built-in appliance.

Doors and lids of the refrigeration appliance should be removed before disposal in the landfill, to avoid children or animals getting trapped inside.

Recommended setting:

- Refrigerator compartment: +4°C or MED
- Freezer compartment: -18°C or -20°C

Fast/Super Freeze function is automatically disabled after maximum 72 hours, or can be manually disabled by pressing Fast/Super Freeze button.

Fast/Super Cool function is automatically disabled after maximum 24 hours, or can be manually disabled by pressing Fast/Super Cool button again.

To optimise freezing speed and get more storage space, the freezer compartment can be used without the freezer drawers and the food can be placed directly on the bottom of the compartment.

The quantity of fresh food that can be frozen in a specific time period is indicated on the rating plate.

Load limits are determined by baskets, flaps, drawers, shelves etc. Make sure that these components can still close easily after loading.

To avoid food waste, please refer to the recommended setting and storage times found in the online user manual.

Fill 2/3 of the ice tray with water and put it back in the freezer compartment. Do not, under any circumstances, use sharp or pointed objects to remove the ice.

The model information can be retrieved using the QR-Code indicated on the energy label.

The label also includes the model identifier that can be used to consult the <https://eprel.ec.europa.eu> database portal.

If the declaration for the "chiller/chill" drawer is on the rating plate, the declaration applies only to standard EN 62552:2013, valid until February 28th, 2021.

