

5KHB1231



KitchenAid

TABLE OF CONTENTS

PARTS AND FEATURES

Parts and accessories.....	6
Immersion Blender features	7

IMMERSION BLENDER SAFETY

Important safeguards	8
Electrical requirements	11
Electrical equipment waste disposal	11

OPERATING YOUR IMMERSION BLENDER

Assembling the Immersion Blender	12
Using the blending arm	13

TIPS FOR GREAT RESULTS

Blending tips.....	15
Operating tips	16

 
 
 
CARE AND CLEANING

Washing the motor body.....	17
Washing the accessories and attachments.....	17

WARRANTY AND SERVICE	18
----------------------------	----

PARTS AND FEATURES

PARTS AND ACCESSORIES

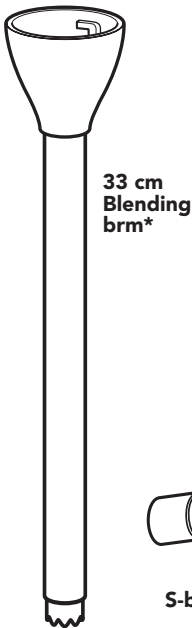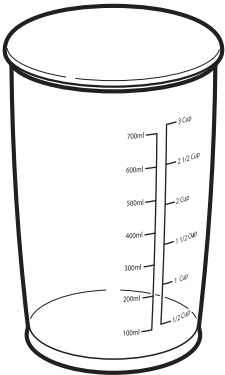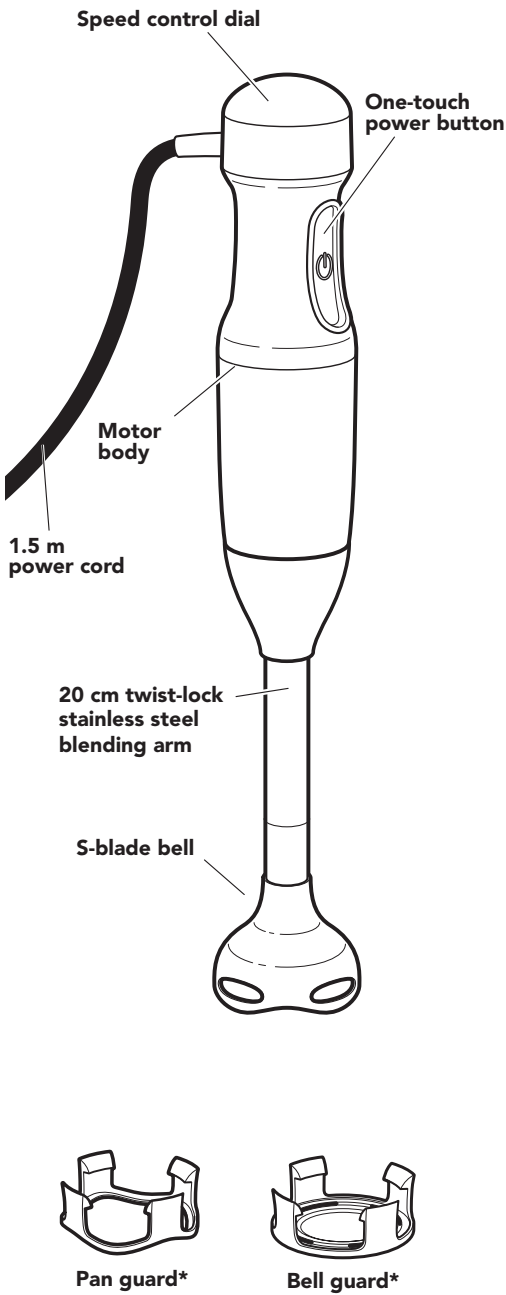

*Not available on all models

PARTS AND FEATURES

IMMERSION BLENDER FEATURES

Speed control

Provides easy adjustment of speed.

One-touch power button

Activate the Immersion Blender by pressing and holding the POWER button during blending. To stop blending, simply release the power button.

Motor body

Designed for a comfortable, nonslip grip.

Powerful DC motor (not shown)

Provides a powerful blending action and is designed for quiet, long-life operation.

1.5 m power cord

Long enough to take the Immersion Blender to the cooktop or work area, the power cord is rounded with no grooves for easy cleanup. A silicone cord strap is included for convenient cord storage.

Twist-lock stainless steel blending arm

Attaches onto the motor body with a simple twist and rotates to lock into place. The sharp stainless steel blade is covered to help prevent splashing while blending.

Blending jar

700 mL BPA-free jar with lid.

IMMERSION BLENDER SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:

 **DANGER**

You can be killed or seriously injured if you don’t immediately follow instructions.

 **WARNING**

You can be killed or seriously injured if you don’t follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. To protect against risk of electrical shock do not put motor body, cord, or electrical plug of this Immersion Blender in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

IMMERSION BLENDER SAFETY

4. This appliance can be used by children aged 8 years and above and persons with physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. Children should be supervised to ensure they do not play with the appliance. Do not allow children to use the Immersion Blender without supervision. Care should be taken when used near children.
6. Always disconnect the Immersion Blender from the supply if it is left unattended and before assembling, disassembling or cleaning. Never leave the appliance unattended while it is in operation.
7. Avoid contact with moving parts.
8. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Centre for examination, repair, or electrical or mechanical adjustment.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
10. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter.

IMMERSION BLENDER SAFETY

13. Do not let cord contact hot surfaces, including the stove.
14. When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
15. Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used, but must be used only when the unit is not running.
16. Blades are sharp. Care should be taken when handling the sharp cutting blades, emptying the bowl, and during cleaning.
17. Be careful if hot liquid is blended in the jar, as it can be ejected out due to a sudden steaming.
18. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices, or other working environments
 - farmhouses
 - by clients in hotels, motels, and other residential type environments
 - bed and breakfast type environments.

SAVE THESE INSTRUCTIONS

This product is designed for household use only.

IMMERSION BLENDER SAFETY

ELECTRICAL REQUIREMENTS


Voltage: 220-240 Volts
Frequency: 50-60 Hertz
Wattage: 180 Watts

NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way.

ELECTRICAL EQUIPMENT WASTE DISPOSAL

Disposal of packing material

The packing material is 100% recyclable and is marked with the recycle symbol

 The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.


Scrapping the product

- This appliance is marked in compliance with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE).

- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which

could otherwise be caused by inappropriate waste handling of this product.



- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery, and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

OPERATING YOUR IMMERSION BLENDER

ASSEMBLING THE IMMERSION BLENDER

Before using the KitchenAid Immersion Blender for the first time, wipe the motor body and attachment adapters with a clean, damp cloth to remove any dirt or dust. Mild dish soap may be used, but do not use abrasive cleansers.

 
NOTE: Do not immerse the motor body or the adapters in water.

Dry with a soft cloth. Wash all the other attachments and accessories by hand or in the top rack of the dishwasher. Dry thoroughly.

NOTE: Always be sure to unplug the power cord from the wall socket before installing or removing attachments.

Bell guard*


Easily snaps onto bell blade and provides protection to blades while the Immersion Blender is not in use.

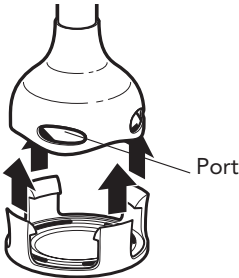


NOTE: Ensure bell guard is installed with the mounting clips positioned between the ports on the bell blades.

Pan guard*

 The pan guard snaps onto any of the included bell blades and provides protection to the Immersion Blender and your cookware.

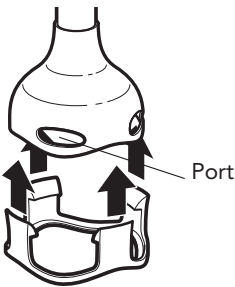

 NOTE: Ensure pan guard is installed with the mounting clips positioned between the ports on the bell blades.

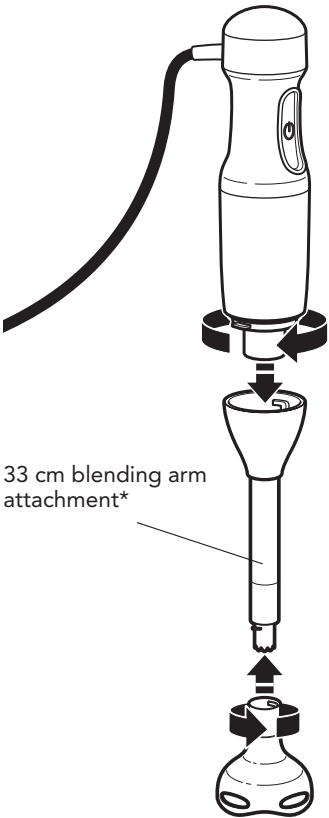

*Not available on all models


OPERATING YOUR IMMERSION BLENDER

USING THE BLENDING ARM

Use the blending arm attachment for smoothies, milkshakes, soup, cooked vegetables, frosting, or baby food.

**1**

 OPTIONAL: If using the 33 cm blending arm (not available on all models), insert blending arm into bell blade and twist to lock until it clicks.

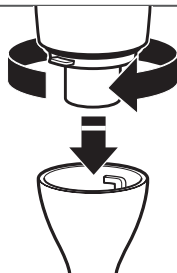**2**

Insert blending arm into motor body and twist to lock until it clicks.

⚠ WARNING



Electrical Shock Hazard

 
Plug into an earthed outlet.

Do not remove earth prong.

Do not use an adapter.


Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

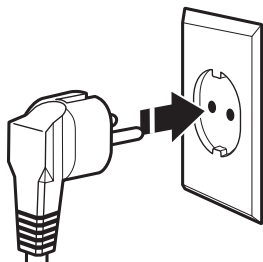
**3**

Plug the electrical cord into an earthed outlet.

 OPERATING YOUR IMMERSION BLENDER

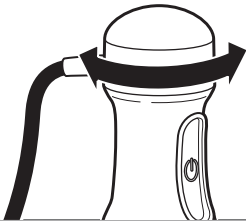


4 Set Immersion Blender on Speed 1. Adjust the speed by turning the speed control dial on top of the Immersion Blender.




5 Insert the Immersion Blender into the mixture.

 
IMPORTANT: The Immersion Blender should only be immersed in liquids the length of the attachment. Do not submerge beyond the seam of the blending attachment. Do not immerse the motor body into liquids or other mixtures.

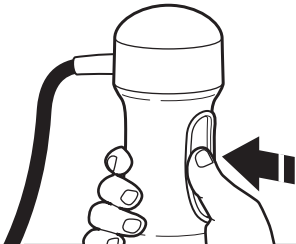

 6 Press the POWER button to activate the Immersion Blender.

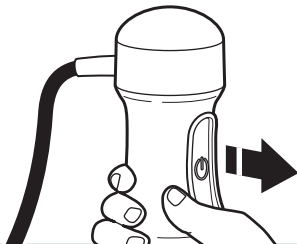

 7 When blending is complete, release the power button before removing Immersion Blender from the mixture.

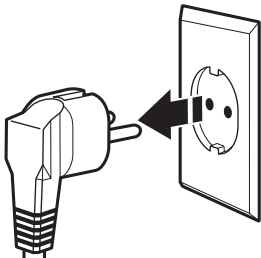


8 Unplug immediately after use, and before removing or changing attachments.

TIPS FOR GREAT RESULTS


BLENDING TIPS



 Blending: Insert Immersion Blender with blending arm attached into the blending jar containing ingredients at an angle. Use your free hand to cover the top of the blending jar for better stability and avoid splattering. Remember to stop the Immersion Blender before removing it from the jar to avoid splashing.

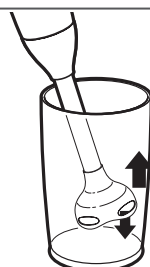

Drawing up: Rest the Immersion Blender on the bottom of the blending jar momentarily then hold at an angle and slowly draw it upwards against the side of the jar. As the Immersion Blender is drawn up, you will notice the ingredients from the bottom of the jar being drawn up. When the ingredients are no longer being drawn up from the bottom, return the Immersion Blender to the bottom of the jar and repeat the process until the ingredients are at the desired consistency.

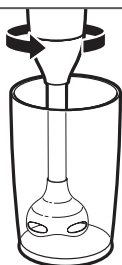 

Wrist movement: Using a light circular motion from your wrist, draw the Immersion Blender up slightly and let it fall again into the ingredients. Allow your wrist motion and the weight of the Immersion Blender to do the work.

TIPS FOR GREAT RESULTS

OPERATING TIPS

 
- Cut solid foods into small pieces for easier blending or chopping.
- The Immersion Blender is equipped with thermal protection from high operating temperatures. Should the Immersion Blender suddenly stop during use, unplug it and allow 10 minutes to automatically reset.
- To avoid splashing, insert the Immersion Blender into the mixture before pressing the power button, and release the power button before pulling the Immersion Blender out of the mixture.
- When blending in a saucepan on a cooktop, remove the pan from the heating element to protect the Immersion Blender from overheating.
- For best blending, hold the Immersion Blender at an angle and gently move up and down within the container. Do not pound down on the mixture with the Immersion Blender.
- To prevent overflow, allow room in the container for the mixture to rise when using the Immersion Blender.
- Be sure the extra-long cord of the Immersion Blender is not extending over a hot heating element.
- Do not let the Immersion Blender sit in a hot pan on the cooktop while not in use.
- Remove hard items, such as fruit pits or bones, from the mixture before blending or chopping to help prevent damage to the blades.
- Do not use your Immersion Blender to process coffee beans or hard spices such as nutmeg. Processing these foods could damage the blades of the Immersion Blender.
- Do not use the jar in the microwave oven.

CARE AND CLEANING

WASHING THE MOTOR BODY

Always clean the Immersion Blender prior to initial use, after each use, and before storing.


1. Unplug the Immersion Blender before cleaning.
2. Remove all attachments.
3. Wipe the motor body and power cord with a warm sudsy cloth; wipe clean with a damp cloth. Dry with a soft cloth. Mild dish soap may be used, but do not use abrasive cleansers.

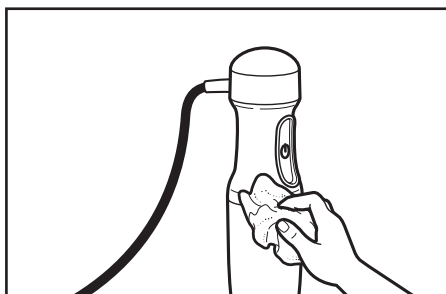

IMPORTANT: Do not immerse the motor body in water or other liquid.

WASHING THE ACCESSORIES AND ATTACHMENTS

 1. Wash blending arms*, jar and lid, blades, blade guard*, and pan guard* in hot, soapy water, or in the top rack of the dishwasher.
2. Dry thoroughly with a soft cloth.

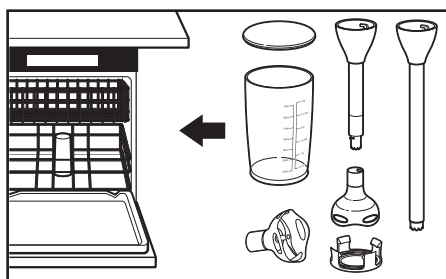

*Not available on all models

WARRANTY AND SERVICE

KITCHENAID IMMERSION BLENDER WARRANTY

Length of Warranty:	KitchenAid Will Pay For:	KitchenAid Will Not Pay For:
Europe, Middle East and Africa: 5KHB1231 Two years full warranty from date of purchase.	The replacement parts and repair labour costs to correct defects in materials or workmanship. Service must be provided by an Authorised KitchenAid Service Centre.	A. Repairs when Immersion Blender is used for operations other than normal household food preparation. B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes.

KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.

CUSTOMER SERVICE

In U.K. and Ireland:

For any questions, or to find the nearest Authorised KitchenAid Service Centre, please find our contact details below.

NOTE: All service should be handled locally by an Authorised KitchenAid Service Centre.

Contact number for U.K. and Northern Ireland:

Tollfree number 0800 988 1266 (calls from mobile phones are charged standard network rate) or call 0194 260 5504

Contact number for Ireland:

Tollfree number +44 (0) 20 8616 5148

E-mail contact for U.K. and Ireland:

Go to www.kitchenaid.co.uk, and click on the link "Contact Us" at the bottom of the page.

Address for U.K. and Ireland:

KitchenAid Europa, Inc.
PO BOX 19
B-2018 ANTWERP 11
BELGIUM

General hotline number:  00800 3810 4026

In other countries:

For all product related questions and after sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/Customer Centre.

For more information, visit our website at:

www.KitchenAid.co.uk
www.KitchenAid.eu

©2017 All rights reserved.
Specifications subject to change without notice.

KitchenAid

©2017 All rights reserved.
Specifications subject to change without notice.

W11087402A

03/17