

**Jet Start** 

To start the Microwave function at maximum power for 30 seconds, just press the Jet Start button.

If you have already selected a cooking function (e.g.: Grill), press Jet Start to start the selected function.

Each additional pressure will increase the cooking time of 30 seconds.

7 Touch the name of the function to select it. Use the Rotating Knob and the Confirmation button to set the cooking parameters.

Function	Icon	Suggested accessories / Food categories
Microwave	<b>#</b>	<b>≋</b> Microwave safe and oven proof dish
Grill	<b>~~</b>	High rack
Forced Air	*	Low rack
Dual Crisp	<u></u>	Crisp plate Crisp handle
Jet Defrost	*	2* 3* 4* 5*
Combi Combined functions:		
1. Combi ( Microwave + Grill )	<b>&gt;&gt;&gt;</b>	High rack
2. Combi ( Microwave + Forced Air )	<b>9</b> 6	Low rack
Keep Warm	<u></u>	<b>≋</b> Microwave safe and oven proof dish
Dual Crisp Fry	<u>*</u>	Crisp plate  Crisp handle  High rack

Touch the name or the icon on the control panel to select the function. More info about the special functions are contained in the Instructions for Use.

Function	lcon	Notes
Chef Menu		To see the list of the 30 automatic recipes available on this product, go to the last page of this Quick Reference Guide. A complete description of each recipe is included in the Instructions For Use.
Auto Clean	++++	This automatic cleaning cycle will help to clean the microwave oven cavity and to remove unpleasant odors. Use manner and use tips are included in the Instructions For Use.
Special Menu		This special menu allows to make the dough rise, soften and melt butter, chocolate, cheese, etc.
Stop Turntable	Ø	This function allows to use large and squared vessels that could not turn freely in the product. Available only with some cooking functions.

Discover all the original Whirlpool accessories!





1/4

**MWH 338** 



- ·Microwave function allows to quickly cook or reheat food and beverages.
- •Press the Microwave button, then use the Knob and the Confirmation button to choose the power level according to the table.

POWER	SUGGESTED USE:	
900W	Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.	
750 W	Cooking of fish, meat, vegetables etc.	
650 W	Cooking dishes, not possible to stir.	
500 W	More careful cooking e.g.high prote sauces, cheese and egg dishes and to finish cooking casseroles.	
350 W	Simmering stews, melting butter.	
160 W	Defrosting.	
90 W	Softening ice cream, butter and cheeses.	



### **GRILL**

•This function uses a powerful metal tube to grill food and bring food with perfect browning color. Press the Grill button, rotate the Knob to select the Power level according to below table, press the Confirmation button to confirm and rotate the Knob to set the cooking time. Press the Jet Start button to start the cooking cycle.

	POWER LEVEL	
1	Low	
2	Medium	
3	High	



### **FORCED AIR**

- •This function allows you to obtain ovenbaked dishes. Use this function to cook meringues, pastry, cakes, soufflés, poultry and roast meats.
- •The Forced air function is designed to cook food with preheat phase. Using both the fan and the grill to quickly preheat the oven before you start cooking, to achieve the best possible cooking results.
- •Press the Forced Air button, and enter into the Preheat phase, adjust the temperature by rotating the Knob, when the desired temperature reached, a beep will signal and ask to add food. After adding the food, rotate the Knob to set the time, confirm and start the cooking cycle.



### **DUAL CRISP**

 
 This exclusive Whirlpool function allows for perfectly golden brown results both on the top and bottom surfaces of the food. Using both Microwave and Grill cooking, the Crisp Plate will rapidly reach the right temperature and begin to brown and crisp the food.

### **Manual Dual Crisp function:**

•Press the Dual Crisp button and confirm, rotate the Knob to set the cooking time, press the Jet Start button to start the cooking cycle

### **Dual Crisp Bread Defrost function:**

- •Press the Dual Crisp button and rotate the Knob to select the P2 Dual Crisp Bread Defrost function, press the Confirmation button to confirm. Rotate the Knob to adjust the weight and press the Jet Start button to start the cooking cycle.
- •The following accessories must be used with both the Manual Dual Crisp and Dual Crisp Bread Defrost functions:





## **JET DEFROST**

 Jet Defrost function allows to quickly defrost frozen food. Press the Defrost button, then use the Knob and Confirmation button to select your preferred choice above the ones shown in the

	FOOD CATEGORY	
PI	Meat	
P2	Chicken	
P3	Fish	
PH	Vegetables	
<b>P</b> 5	Bread	

- •In order to achieve the best possible results the product will ask you
- adjust the weight value of the food
- to turn/stir the food when needed



### MAIN & SPECIAL FUNCTIONS - QUICK GUIDE





# COMBI ( MICROWAVE + GRILL )

•This function combines Microwave and Grill heating, allowing you to cook and gratin in less time. Press the Combi button: the display will show the number "1", corresponding to the Combi ( Microwave + Grill ) function. Press the Confirmation button, then select the power level according to the table below.

POWER LEVEL	SUGGESTED USE:	
650 W	Vegetables	
500 W	Lasagne	
350 W	Poultry & Fish	
160 W	Meat	
90 W	Gratined Fruit	

### **DUAL CRISP FRY**

•This exclusive Whirlpool function allows you to crisp and fry the food at the same time. Use this function to quickly crisp and fry French fries, chicken nuggets, breaded fish & potato wedges.

	FOOD CATEGORY	
PI	French fries	
P2	Chicken nuggets	
PB	Breaded fish	
PY	Chicken wings	
<b>P</b> 5	Potato wedges Falafel	
<b>P</b> 5		
<b>P</b> 7	Spicy Breaded Cod	

# 

# COMBI ( MICROWAVE + FORCED AIR )

•This function combines Microwave and Forced Air cooking, allowing you to prepare oven-baked dishes in less time. Press the Combi button, then use the Rotating Knob and the Confirmation button to select the number "2" for Combi ( Microwave + Forced Air ) function. Choose proper temperature and press Confirmation button to confirm, then choose the power level according to the table.

POWER LEVEL	SUGGESTED USE:	
350 W	Poultry, Jacket potatoes, Lasagne & Fish	
160 W	Roast meat & Fruit cakes	
90 W	Cakes & Pastry	

## 5

### **KEEP WARM**

1-VEGETABLES

- •This function will allow to keep warm the fresh cooked food.
- •The temperature can be adjusted between 60°C-80°C, please refer to the recommended recipes in Instructions For Use.

### **CHEF MENU**

- •Chef Menu is a simple and intuitive guide, offering automatic recipes that guarantee perfect results every time.
- •Use this menu to prepare the dishes listed in the last page of this Quick Guide. Press the Chef Menu button, then simply select a recipe and follow the instructions on the display: Menu will automatically adjust the cooking parameters to get the best results. A complete description of all the Menu recipes are included in the Instructions For Use.



### **SPECIAL MENU**

•The Special menu is a convenient button that contains different functions that support the cooking process. Allowing to make the dough rise, soften and melt butter, chocolate, cheese, etc.

	METHOD	FOOD CATEGORY
P	Dough rising	Dough rising
P2	Soften	Butter
P3	Soften	Ice cream
PY	Soften	Cream Cheese
<b>P</b> 5	Soften	Frozen Juice
<b>P</b> 5	Melting	Butter
P7	Melting	Chocolate Chips
<b>P</b> B	Melting	Cheese
<b>P</b> 9	Melting	Marshmallows

# (+, +)

## **AUTO CLEAN**

- •This automatic cleaning cycle will help to clean the microwave oven cavity and to remove unpleasant odors.
- •User manners and use tips are included in the Instructions For Use.

## $\mathscr{D}$

### **STOP TURNTABLE**

- Use this function when you need to use very large vessels that could not turn freely in the oven
- •The "Stop turntable" function works only with the following cooking functions:
- Forced Air
- Combi ( Microwave + Forced Air )
- •This function also allows to access the Clock setting mode by pressing and holding this button for 3 seconds.



5-PIZZA/QUICHE

- This function is used for quick reheating of food with a high water content such as clear soups, coffee or tea.
- •Press Jet Start button to automatically start the Microwave function at maximum power (900W) for 30 seconds. Each additional pressure will increase the cooking time of 30 seconds. You can also increase or decrease the time by rotating the Knob after the function has started.

3/4

# (GB)

# $\widehat{\ }$ CHEF MENU-AUTOMATIC RECIPES



$\stackrel{\widehat{pprox}}{\widehat{pprox}}$	Stuffed Potato		
$\stackrel{\text{\tiny a}}{\lessapprox}$	Potatoes,baked		
$\widetilde{\widetilde{z}}$ $\mathfrak{g}^{\hat{a}}$	Tomatoes,baked		
	2-CHICKEN		
	Chicken Fillets,fried		
	Chicken Legs,fried		
	Thin Breaded Chicken		
$\widetilde{\widetilde{z}}$ $\mathfrak{g}^{\hat{a}}$	Scrambled eggs		
	3-MEAT		
	beef,roasted		
	Lamb,roast		
	Entrecote,grilled		
	Bacon		
	Meat balls		
	4-FISH/SEA FOOD		
	Frozen coated fillets,fried		
	Breaded Shrimps,Frozen		

PI		Home made pizza
P2		Quiche Lorraine
P3		Pan Style Pizza,Frozen
PY		Thin pizza,Frozen
P5		Fresh pizza
		6-PASTA/ LASAGNA
Pi		Fresh lasagna
P2		Frozen lasagna
		7-DESSERTS/ PASTRIES
PI		Home Made Fruit Pie
P2		Scones
P3		Crisp cake
PY		Nuts, roast
P5		Sponge cake(light)
P5		Muffins
P7		Biscuits
PR		Meringues
, ,	, , ,	
P9		Yogurt

ACCESSORIES





Crisp plate

Low rack

High rack

A complete description of each of the Chef Menu recipes is included in the Instructions For Use.