

DAILY REFERENCE GUIDE



THANK YOU FOR PURCHASING A HOTPOINT - ARISTON PRODUCT

To receive more comprehensive help and support, please register your product at www.hotpoint-ariston.com/register




You can download the Safety Instructions and the Use and Care Guide by visiting our website www.hotpoint.eu and following the instructions on the back of this booklet.




Read the safety instructions carefully before using the product

PRODUCT DESCRIPTION

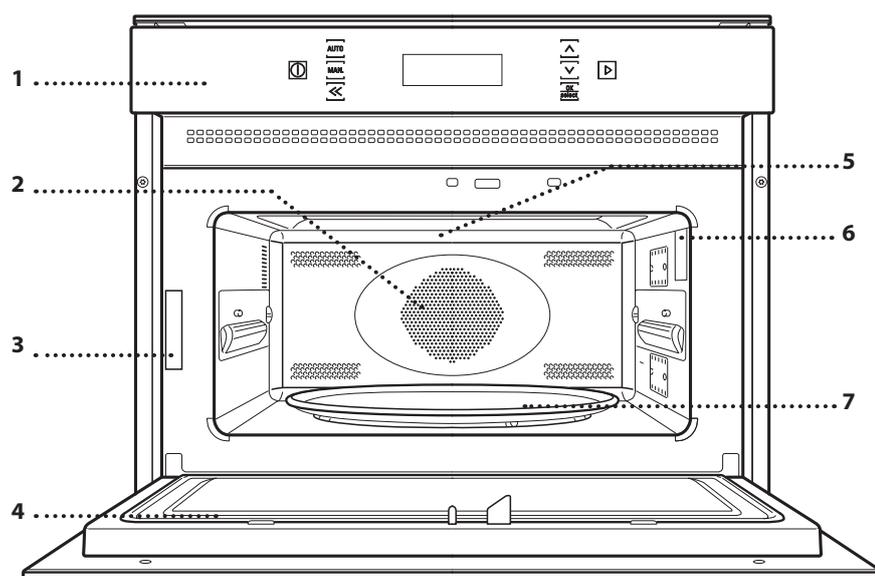

1. Control panel
2. Circular heating element (non-visible)
3. Identification plate (do not remove)
4. Door
5. Upper heating element/grill
6. Light
7. Turntable

CONTROL PANEL

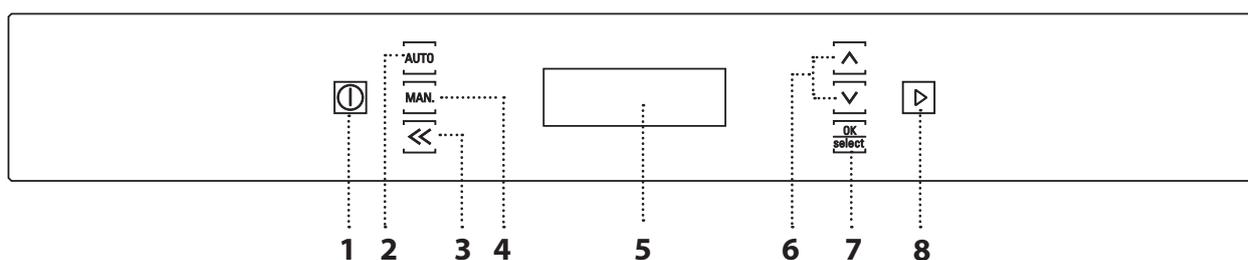

1. ON/OFF

For switching the oven on and off and for stopping an active function.

2. AUTOMATIC

For scrolling through the list of automatic functions.

3. BACK

For returning to the previous settings menu.

4. MANUAL

For scrolling through the list of manual functions.

5. DISPLAY

6. NAVIGATION BUTTONS
For changing the settings and values of a function.


7. CONFIRMATION BUTTON

For confirming a selected function or a set value.

8. START

For starting a function. When the oven is switched off, it activates the "Jet Start" microwave function.


TURNTABLE

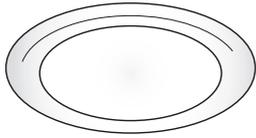

Placed on its support, the glass turntable can be used with all cooking methods. The turntable must always be used as a base for other


containers or accessories, with the exception of the rectangular baking tray.

TURNTABLE SUPPORT

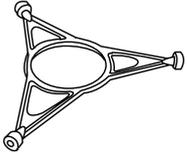

Only use the support for the glass turntable. Do not rest other accessories on the support.


CRISP PLATE

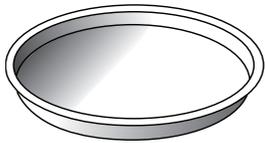

Only for use with the specific "Crisp Dynamic" function. The crisp plate must always be placed in the centre of the glass turntable and can be

preheated when empty, using the special function for this purpose only. Place the food directly on the crisp plate.

HANDLE FOR THE CRISP PLATE

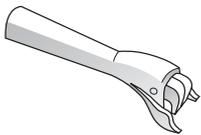

Useful for removing the hot crisp plate from the oven.

RECTANGULAR BAKING TRAY




Only use the baking tray with functions that allow for convection cooking; it must never be used in combination with microwaves. Insert the

tray horizontally, resting it on the rack in the cooking compartment.

Please note: You do not need to remove the turntable and its support when using the rectangular baking tray.


WIRE SHELF

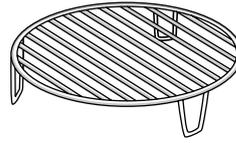

This allows you to place food closer to the grill, for perfectly browning your dish and for optimal hot air circulation. Place the wire shelf on the

turntable, making sure that it does not come into contact with other surfaces.

STEAMER

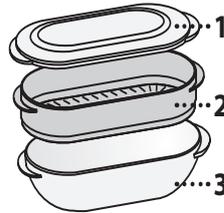


To steam foods such as fish or vegetables, place these in the basket (2) and pour drinking water (100 ml) into the bottom of the steamer (3) to achieve the right amount of steam.

To boil foods such as pasta, rice or potatoes, place these directly on the bottom of the steamer (the basket is not required) and add an appropriate amount of drinking water for the amount you are cooking.

For best results, cover the steamer with the cover (1) provided.

Always place the steamer on the glass turntable and only use it with the appropriate cooking functions, or with microwave functions.

COVER

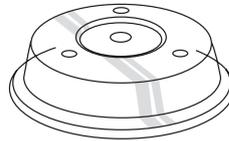

Useful for covering food while it is cooking or heating in the microwave. The cover reduces splashes,

keeps foods moist and can also

be used to create two cooking levels.

It is not suitable for use with convection cooking or with any of the grill functions (including "Crisp Dynamic").

The number of accessories may vary according to which model is purchased. Other accessories can be purchased separately from the After-sales Service.

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use and resistant to oven temperatures.

Metallic containers for food or drink should never be used during microwave cooking.

Always ensure that foods and accessories do not come into contact with the inside walls of the oven.

Always ensure that the turntable is able to turn freely before starting the oven. Take care not to unseat the turntable whilst inserting or removing other accessories.

FUNCTIONS



Download the Use and Care Guide at
www.hotpoint.eu for more information

MAN.MANUAL FUNCTIONS

MICROWAVES
 For quickly cooking and reheating food or drinks.

| POWER | RECOMMENDED FOR |
|--------------|--|
| 900 W | Quickly reheating drinks or other foods with a high water content |
| 750 W | Cooking vegetables |
| 650 W | Cooking meat and fish |
| 500 W | Cooking meaty sauces, or sauces containing cheese or egg. Finishing off meat pies or pasta bakes |
| 350 W | Slow, gently cooking. Perfect for melting butter or chocolate |
| 160 W | Defrosting frozen foods or softening butter and cheese |
| 90 W | Softening ice cream |

Recommended accessory: **cover**

CRISP DYNAMIC
 For perfectly browning a dish, both on the top and bottom of the food. This function must only be used with the special crisp plate.

Required accessories: Crisp plate, handle for the crisp plate

GRILL
 For browning, grilling and gratins. We recommend turning the food during cooking. For best results, preheat the grill for 3-5 minutes.

Recommended accessories: **wire shelf**

GRILL + MICROWAVES
 For quickly cooking and gratinating dishes, combining the microwave and grill functions.

Recommended accessories: **wire shelf**

TURBO GRILL + MICROWAVES
 For quickly cooking and browning your food, combining the microwave, grill and convection oven functions.

Recommended accessories: **wire shelf**

CONVECTION BAKE
 For cooking dishes in a way that achieves similar results to using a conventional oven. The baking tray or other cookware that is suitable for oven use can be used to cook certain foods.

Recommended accessories: **Rectangular baking tray/wire shelf**

CONVECTION + MICROWAVES
 For preparing oven-baked dishes in a short amount of time.

Recommended accessories: **wire shelf**

FAST REHEATING
 For quickly heating the oven before activating a cooking cycle. Wait for the function to finish before placing food inside the oven.

TEMPO5 SETTINGS
 For changing the oven settings (language, Eco mode, brightness, audible signal volume, clock).

Please note: When Eco mode is active, the brightness of the display will be reduced after a few seconds to save energy. The display is reactivated automatically whenever any of the buttons are pressed, etc.

AUTO AUTOMATIC FUNCTIONS

With the automatic functions, simply select the type and weight or quantity of food to achieve the best results. The oven will automatically calculate the optimum settings and continue to change them as cooking progresses. The total time does not include preparation or preheating phases.

DEFROST DYNAMIC
 For quickly defrosting various different types of food simply by specifying their weight. Food should be placed directly onto the glass turntable. Turn the food when prompted.

| CATEGORY | RECOMMENDED FOODS | WEIGHT |
|----------|--|----------------|
| 1* | MEAT (mince, cutlets, steaks, roasting joints) | 100 g - 2 kg |
| 2* | POULTRY (whole chicken, pieces, fillets) | 100 g - 2.5 kg |
| 3* | FISH (whole, steaks, fillets) | 100 g - 1.5 kg |
| 4* | VEGETABLES (mixed vegetables, peas, broccoli, etc.) | 100 g - 1.5 kg |
| 5* | BREAD (loaves, buns, rolls) | 100 g - 2 kg |

 **REHEAT DYNAMIC**
 For reheating ready-made food that is either frozen or at room temperature. The oven automatically calculates the settings required to achieve the best results in the shortest amount of time. Place food on a microwave-safe and heatproof dinner plate or dish.

 **CRISP DYNAMIC**
 For quickly reheating and cooking frozen foods and giving them a golden, crunchy top. Only use this function with the crisp plate provided. Turn the food when prompted.

| CATEGORY | FOOD | WEIGHT |
|---|--|-------------|
|  1* | FRENCH FRIES (spread out in a single layer and sprinkle with salt before cooking) | 300 - 600 g |
|  2* | PIZZA, THIN CRUST | 250 - 500 g |
|  3* | PIZZA, THICK CRUST | 300 - 800 g |
|  4* | CHICKEN WINGS, CHICKEN PIECES (Lightly oil the plate) | 300 - 600 g |
|  5* | FISH FINGERS (Crisp plate must be preheated) | 200 - 600 g |

Required accessories: **Crisp plate, handle for the crisp plate**

 **COOK DYNAMIC**
 For oven-cooking foods quickly and achieving optimal results. Use cookware that is suitable for oven cooking and resistant to microwaves.

| CATEGORY | FOOD | WEIGHT |
|---|---------------|----------------|
|  1 | ROAST CHICKEN | 800 g - 1.5 kg |
|  2 | BISCUITS | 1 batch |
|  3 | WHOLE FISH | 600 g - 1.2 kg |
|  4 | POTATO GRATIN | 800 g - 2 kg |
|  5 | ROAST BEEF | 800 g - 1.5 kg |

 **STEAM DYNAMIC**
 For steam-cooking foods such as vegetables or fish, using the steamer provided. An initial preparation phase automatically generates steam, bringing the water poured into the bottom of the steamer to the boil. Timings for this phase may vary. The oven then proceeds with steam-cooking the food, according to the time set.

Some indicative cooking times are as follows:

- FRESH VEGETABLES (250-500 g): 4-6 minutes;
- FROZEN VEGETABLES (250-500 g): 5-7 minutes;
- FISH FILLETS (250-500 g): 4-6 minutes.

Required accessories: **Steamer**

USING THE APPLIANCE FOR THE FIRST TIME

1. SELECT THE LANGUAGE

You will need to set the language and the time when you switch on the appliance for the first time. "ENGLISH" will scroll along the display.




Use **▲** or **▼** to scroll through the list of available languages and select the one you require.

Press **OK select** to confirm your selection.

Please note: The language can subsequently be changed from the "Settings" menu.

2. SET THE TIME

After selecting the language, you will need to set the current time: The two digits for the hour will flash on the display.

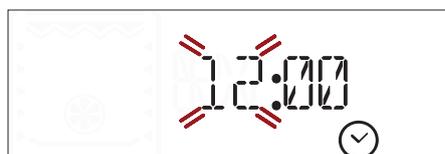

Use **▲** or **▼** to set the hour you require and press **OK select**: The two digits for the minutes will flash on the display.



Use **▲** or **▼** to set the minutes and press **OK select** to confirm.

Please note: You may need to set the time again following lengthy power outages.

DAILY USE

1. SELECT A FUNCTION

Press **ⓘ** to switch on the oven, then use **AUTO** or **MAN.** to access the menus for the manual and automatic functions.


To scroll through the menu, keep pressing **AUTO** or **MAN.** until the function you require is shown on the display: The display will show the icon for the function and the basic settings for it that you can change.



2. SET THE FUNCTION

After having selected the function you require, you can change its settings.

The display will show the settings that can be changed in sequence.

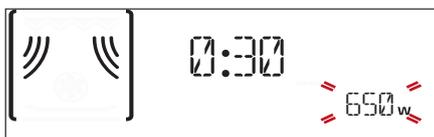

When a setting is flashing on the display, use **▲** or **▼** change it, then press **OK select** to confirm and continue to alter the settings that follow (if possible).



Note: Pressing **◀** allows you to change the previous setting again.

3. ACTIVATE THE FUNCTION

Once you have applied the settings you require, press **▶** to activate the function.



You can press **ⓘ** at any time to pause the function that is currently active.

. SAFETY LOCK

This function is automatically activated to prevent the oven from being switched on accidentally.



Open and close the door, then press **▶** to start the function.

. PAUSE

To pause an active function, for example to stir or turn the food, simply open the door.

To start it up again, close the door and press **▶**

. JET START

When the oven is switched off, press **▶** to activate cooking with the microwave function set at full power (900 W) for 30 seconds.

Every time the **▶** button is pressed again, the cooking time will be increased by a further 30 seconds.

. AUTOMATIC FUNCTIONS AUTO

CATEGORIES

When using certain automatic functions, you will need to select a category for the food you are cooking in order to achieve the best results. The reference category corresponds to the number indicated at the top right of the display. Refer to the table containing descriptions of the functions for information on all of the categories.



Once you have selected the category, most of the automatic functions will also require you to enter the weight of the food.

DEGREE OF DONENESS

Most of the automatic functions will prompt you to select how well done (minimum, low, medium, high, maximum) you require the food to be. The degree of doneness can only be altered during the first 20 seconds of operation after activating the function: Activate the function and then press **▲** or **▼** to select the setting you require.



ACTIONS (STIRRING OR TURNING FOOD)

Certain automatic functions require you to turn or stir the food, for example, and will pause in order for you to do so.



Once the oven has paused cooking, open the door and carry out the action you are prompted to perform before closing the door again and pressing **▶** to continue with cooking.

Please note: When using the "Defrost Dynamic" function, the function will start again automatically after two minutes, even if you have not turned or stirred the food.

. RESIDUAL HEAT

In many cases, when food has been cooked, the oven will activate an automatic cooling process, which will be indicated on the display.



To view the clock during this process (with the oven switched off), press <<

Please note: Opening the door will temporarily interrupt the process.

. TIMER

When the oven is switched off, the display can be used as a timer. To activate the function and set the length of time you require, press ^ or v



Press **OK select** to activate the timer: An audible signal will sound and the display will indicate once the timer has finished counting down the selected time.

Once the timer has been activated, you can activate a function as well: The timer will continue to count down the selected time automatically without having any effect on the function.



To go back to viewing the timer, wait for the function to finish or switch off the oven by pressing ①

Please note: The timer does not activate any of the cooking cycles.

To change the time set for the timer, press << to pause it and then press << twice to go back to viewing the current time.

. SETTINGS

To change the oven settings, keep pressing **MAN.** until "SETTINGS" appears on the display and then press **OK select** to access the menu.

Use ^ or v to scroll through the menu and press **OK select** to access the setting you would like to change.

Use ^ or v to change the setting and press **OK select** to confirm.

COOKING TABLE

| FOOD | FUNC-TION | TEMP. (°C)/GRILL LEVEL | POWER (W) | TIME | ACCESSORIES |
|--|-----------|------------------------|-----------|-------|-------------|
| Sponge cakes | | 160-180 | - | 30-60 | |
| | | 160-180 | 90 | 25-50 | |
| Filled pies (cheesecake, strudel, apple tart) | | 160-190 | - | 35-70 | |
| Biscuits | | 170-180 | - | 10-20 | |
| Meringues | | 100-120 | - | 40-50 | |
| Rolls | | 210-220 | - | 10-12 | |
| Loaves of bread | | 180-200 | - | 30-35 | |
| Pizza/bread | | 190-220 | - | 20-40 | |
| Pizza (0.4-0.5 kg) | | - | - | 14-16 | |
| Quiche (vegetable tart, quiche lorraine) | | 180-190 | - | 40-55 | |

| FOOD | FUNCTIONS | TEMP. (°C)/ GRILL LEVEL | POWER (W) | TIME (MIN) | ACCESSORIES |
|--|---|----------------------------|-----------|------------|---|
| Quiche lorraine (1-1.2 kg) |  | - | - | 18-20 |  |
| Lasagne/pasta bake |  | Medium | 350-500 | 15-40 |   |
| Roast lamb/veal/roast beef (1.3-1.5 kg) |  | 170-180 | - | 70-80* |   |
| |  | 160-180 | 160 | 50-70* |   |
| Roast beef – medium (1.3-1.5 kg) |  | 170-180 | - | 40-60* |   |
| Roast chicken/rabbit/duck (whole 1-1.2 kg) |  | 210-220 | - | 50-70* |   |
| |  | 210-220 | 350 | 45-60* |   |
| Chicken/rabbit/duck (fillets/pieces) |  | Medium - High | 350-500 | 20-40* |   |
| Chicken pieces (0.4-1 kg) |  | - | - | 12-18 |  |
| Baked fish (whole) |  | High | 160-350 | 20-40 |   |
| Fish fillets/slices |  | High | - | 15-30* |   |
| Stuffed vegetables (tomatoes, courgettes, aubergines) |  | Medium | 500-650 | 25-50 |   |
| Toasted sandwiches |  | High | - | 3-6 |  |
| Sausages/kebabs/spare ribs/hamburgers |  | Medium - High | - | 20-40* |  |
| Sausages/burgers (0.2-1 kg) |  | - | - | 6-16** |  |
| Baked potatoes |  | Medium | 350-500 | 20-40* |   |
| Potato wedges (0.3-0.8 kg) |  | - | - | 10-20** |  |
| Baked fruit |  | Medium | 160-350 | 15-25 |   |
| Vegetable gratin |  | High - Medium | - | 15-25 |   |
| Fried vegetables (0.3-0.8 kg) |  | - | - | 8-18 |  |

* Turn the food halfway through cooking

** Preheat the crisp plate for 3-5 minutes

 www.hotpoint.eu Download the Use and Care Guide from www.hotpoint.eu for the table of tested recipes, compiled for the certification authorities in accordance with the standards IEC 60705 and IEC 60350

| | | | | | | |
|-------------|---|---|---|--|--|---|
| FUNCTIONS | Crisp  | Grill  | Grill + Microwaves  | Turbo Grill + Microwaves  | Convection Bake  | Convection Bake + Microwaves  |
| ACCESSORIES | Heatproof plate/container suitable for use in microwaves  | Low wire shelf  | Crisp plate  | Rectangular baking tray  | | |

CLEANING

Make sure that the oven has cooled down before carrying out any maintenance or cleaning.

Do not use steam cleaners.

Do not use wire wool, abrasive scourers or abrasive/corrosive cleaning agents, as these could damage the surfaces of the appliance.

INTERIOR AND EXTERIOR SURFACES

- Clean the surfaces with a damp microfibre cloth. If they are very dirty, add a few drops of pH-neutral detergent. Finish off with a dry cloth.
- Clean the door glass with a suitable liquid detergent.
- At regular intervals or in case of spills, remove the turntable and its support to clean the bottom of the oven, removing all food residue.
- The grill does not need to be cleaned as the intense heat burns away any dirt: Use this function on a regular basis.

ACCESSORIES

All accessories are dishwasher safe with the exception of the crisp plate. The crisp plate should be cleaned using water and a mild detergent. For stubborn dirt, rub gently with a cloth. Always leave the crisp plate to cool down before cleaning.

TROUBLESHOOTING



Download the Use and Care Guide at www.hotpoint.eu for more information

| Problem | Possible cause | Solution |
|--|---|--|
| The oven is not working. | Power cut. Disconnection from the mains. | Check for the presence of mains electrical power and whether the oven is connected to the electricity supply. Turn off the oven and restart it to see if the fault persists. |
| The oven is making noises, even when it is switched off. | Cooling fan active. | Open the door or wait until the cooling process has finished. |
| The display is showing "Err". | Software fault. | Contact your nearest After-sales Service Centre and state the letter or number that follows "Err". |

TECHNICAL SPECIFICATION

A complete specification for the product, including energy efficiency ratings, can be downloaded from our website www.hotpoint.eu

HOW TO OBTAIN THE USE AND CARE GUIDE


> Download the Use and Care Guide from our website www.hotpoint.eu (you can use this QR code), specifying the product's commercial code.

> Alternatively, contact our After-sales Service



CONTACTING OUR AFTER-SALES SERVICE

You can find our contact details in the warranty manual. When contacting our After-sales Service, please state the codes provided on your product's identification plate.

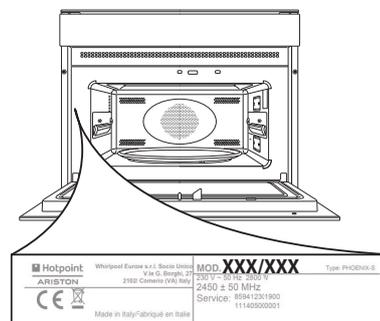

Printed in Italy