

Gebrauchsanweisung

Instructions for use

Mode d'emploi

Gebruiksaanwijzing

Istruzioni per l'uso



Brugsanvisning

Bruksanvisning

Käyttöohje

Manual de utilização

Instrucciones para el uso



Οδηγίες χρήσης

Instrukcje użytkowania

Használati utasítás

Инструкция за употреба

Қолдану бойынша нұсқаулық



Návod k použití

Návod na použitie

Instrucțiuni de utilizare

Инструкції по експлуатації

Инструкція з експлуатації

The Whirlpool logo, featuring a stylized swirl icon above the word "Whirlpool" in a bold, sans-serif font.

SENSING THE DIFFERENCE

icemagic *fresh* | icemagic | genius
powercool



ENGLISH

Instructions for use

Page 4


صفحة 4

تعليمات الاستخدام

العربية

GETTING TO KNOW YOUR WHIRLPOOL ICEMAGIC FRESH - IM POWERCOOL - GENIUS

Your new Whirlpool Icemagic has been designed to give you and your family the immeasurable satisfaction of ice and fast cooling throughout the hottest of summers! The refrigerator comes with many thoughtfully designed features to surprise and delight you.

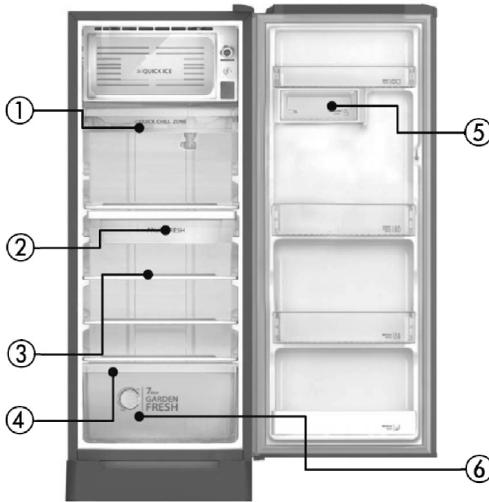

① Quick Chill Zone

A dedicated zone that chills your bottles twice as fast as regular door cooling.

② Fruit Crisper with MicroBlock

Whirlpool brings you an exclusive easy-access Fruit Crisper which is treated with MicroBlock to prevent bacterial growth, helping your fruit stay fresh for longer.

③ Glass shelf with Advanced AirFlow

Toughened glass shelves with extra endurance and an innovative shelf design that improves cold air flow throughout the refrigerator. It ensures optimum cooling even in the crisper, to help your fruit and vegetables remain fresh for 7 days.

④ HoneyComb Crisper Cover

Unique honeycomb crisper cover that retains more moisture than an ordinary cover, keeping your vegetables garden fresh for up to 7 days.

⑤ Utility/Medicine Box

An exclusive easy-access box for storing knick-knacks/medicines.

⑥ Advanced Moisture Control Technology

The Advanced Moisture Control knob lets you adjust the humidity level in your crisper, depending on the type of vegetables stored.

GETTING TO KNOW YOUR WHIRLPOOL ICEMAGIC FRESH - IM POWERCOOL - GENIUS

ADJUSTING THE TEMPERATURE

Set the Temperature Control Knob as per your requirements and usage conditions to make sure your food stays fresh for a longer period of time.

KNOB POSITION USAGE CONDITIONS

- | | |
|--------------------|--|
| Between 1-2 | Cold days or door is not opened very frequently. |
| Between 3-4 | Intermediate conditions e.g. Monsoons. |
| Between 5-6 | Hot days or door is opened very frequently. |



Turn knob to set the temperature

NEW MICROBLOCK FRUIT CRISPER

- Keeps fruit at optimum temperature & moisture level for maximum freshness.
- Unique life-long Microblock coating that actively prevents up to 99.9% of microbial growth.



NEW ADVANCED MICROBLOCK VEG CRISPER

HoneyComb Crisper Cover

- Unique HoneyComb Crisper cover keeps your fruit and vegetables garden fresh for 7 days.
- The Crisper cover also doubles up as an extra shelf.



Advanced Moisture Control Knob

- Helps you control the humidity level in the crisper for different vegetable types (soft/hard).

Freshonizer Filter

- Freshonizer crystals absorb excess oxygen so that your vegetables stay fresher for longer.

MICROBLOCK VEG CRISPER

- Keeps vegetables at the optimum temperature & moisture level for maximum freshness.
- Unique life-long Microblock coating that actively prevents up to 99.9% of microbial growth.

* In selected models only

#EPS insulation fitted inside chiller to avoid condensation. Do not remove it.

EASY STEPS FOR INSTALLING YOUR WHIRLPOOL ICEMAGIC FRESH - IM POWERCOOL - GENIUS

STEPS FOR INSTALLATION:

STEP 1

Remove the outer safety carton. Inspect the machine to make sure it has safely arrived at your home. Check for any transit damage to your refrigerator and, if any is noted, report to your dealer within 24 hours of delivery.

STEP 2

Lift the refrigerator as shown in the image. Do not lift it by holding the condenser (black colored tube). Hold the refrigerator by the condenser clamp (white colored plastic) to lift it.

STEP 3

Choose a well-ventilated place close to an electrical point. Keep a clearance of minimum 50 mm between the back of the refrigerator and the wall, or as per the spacer provided to the rear of the refrigerator.


PLEASE AVOID: carpeted areas, direct sunlight and other high temperature sources such as ovens, cooking ranges etc.

STEP 4A

Icemagic comes with specially designed levelling feet that help to compensate for uneven flooring and thereby prevent excessive noise and tilting. Turn the two front legs clockwise/anticlockwise to increase/reduce the height. The front should be slightly higher than the back.

STEP 4B

Icemagic with bottom drawer comes with a specially designed part with adjustable leg to compensate for floor irregularities. The part is to be inserted in the front legs as shown in picture (step 1); then turn the adjustable leg clockwise/anti clockwise to increase/reduce the height as shown in the picture (step 2).

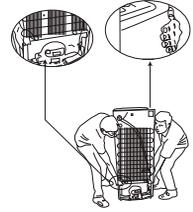

MOVING YOUR REFRIGERATOR:

- Switch-off the mains and disconnect the power cord from socket.
- Remove all food items from the Refrigerator, freezer and vegetable drawer.
- Use a soft, damp cloth to wipe the refrigerator from the inside and outside.
- Fasten the doors and interior components using tape to prevent them from moving/opening during transportation.
- Lift the refrigerator by holding the condenser clamp (white colored plastic). Do not lift it by holding the condenser (black colored tube).

REPLACING THE FUSED LAMP

- Replacement should be done by the authorized Whirlpool service person only.
- Disconnect refrigerator- Switch off the power supply and remove the plug from the socket.
- Open the freezer door, unscrew the side screws and top screws provided in the freezer.
- Slightly push the freezer frame snaps/lock with screw driver and pull out the freezer frame.
- Remove the bulb by turning the bulb in anti-clockwise direction, replace the fused bulb with a new lamp of the rating MAX 15W and fasten it in by turning it clockwise.
- Put the freezer frame on to the freezer and push slightly to fit the freezer frame on freezer.
- Tight all the screws back in their place. Plug the power cord in the mains and switch on.

SAFETY PRECAUTIONS

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Please read all safety and operating instructions before operating the appliance.
- Please retain this manual all times for reference.
- All warnings, cautions and notes on this refrigerator are important, please pay attention to them.
- For best results, follow all instructions given in this manual.
- Include both the model number and the serial number while corresponding with Whirlpool or your dealer in connection with this product.
- Please get the servicing done by an authorized Whirlpool Service Centre only.
- Co-operate with the Service Engineer while he is carrying out the gas charging process.
- This is the safety alert symbol, found alongside the word "DANGER" or "WARNING".
- If the supply cord is damaged. It must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid the hazard.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments:
 - farm houses and by the clients in hotels, motels and other residential type environments:
 - bed and breakfast type environments:
 - catering and similar non-retail applications.



	WARNING:
	Electric Shock Hazard
<ul style="list-style-type: none">• Plug into a 3 prong grounded outlet.• Do not remove ground prong.• Do not use an adapter.• Do not use an extension cord.• Failure to follow these instructions can result in death, fire or electrical shock.	



	WARNING
Risk of Fire Flammable Materials	
This appliance does not contain CFCs. The refrigerant circuit contains R600a (HC). Appliances with Isobutane (R600a): isobutane is a natural gas without environmental impact, but is flammable. Therefore, make sure the refrigerant circuit pipes are not damaged, especially when emptying the refrigerant circuit. C-Pentane is used as blowing agent in the insulation foam and it is a flammable gas.	

WARNING:

- You could be killed or seriously injured if you do not follow the instructions.
 - All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what may happen if the instructions are not followed.
 - Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
 - Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
 - Do not damage the refrigerant circuit.
 - This appliance is intended to be used in household and similar applications (list).
 - Do not use electrical appliances inside the food storage compartments of the appliance.
1. WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.
 2. WARNING: Do not locate multiple portable socket-outlets or portable power supplier at the rear of the appliance.

 WARNING:

Explosion hazard - Suffocation hazard <ul style="list-style-type: none">• Use non-flammable Cleaners.• Failure to do so may result in death, explosion or fire.• Do not allow children to play or hide inside the refrigerator

FREQUENTLY ASKED QUESTIONS

Why does the refrigerator make noise when it is switched on?

This is normal as the compressor, fitted at the rear of the refrigerator, has movable parts which are activated when it is switched on.

Is condensation in the Vegetable & Fruit Box normal?

Yes. As the water in the vegetables evaporates, it strikes the cold surface of the refrigerator, resulting in the formation of water droplets.

How much power does my refrigerator consume per day?

Under standard BIS (Bureau of Indian Standard) conditions, energy consumption for 190 & 215 L is between 0.92-1.0 Kwh/day. But this can vary depending upon the usage (the heavier the load and the more the door has been opened, the greater the power consumption) as well the climatic conditions.

Why is there a smell emanating from my refrigerator?

Check if any item which gives off a strong smell has been left unwrapped in the refrigerator. If so, wrap it in polythene or keep it in a closed container. Placing a cut lemon inside will also help to reduce the odor.

How long does it take to make ice?

This will vary according to the usage and climatic conditions.

Why do the side walls of the refrigerator get hot sometimes?

This is normal as there is a hot gas tube fitted to warm up the side edges of cabinet, which helps to prevent water droplets from forming on the walls when humidity is high.

How frequently should I clean my refrigerator?

It is advisable to clean your refrigerator twice a month. You can clean it with warm water and a very mild detergent.

What is the point of a chiller?

The chiller offers fast cooling for water bottles, soft drinks etc. It can also store cheese, milk products and chocolates in closed containers.

Why do vegetables spoil when kept on the shelf just below the chiller?

The zone below the chiller is not suitable for vegetables. Vegetables should be stored in the fruit & vegetable box which is the correct temperature for keeping vegetables fresh.

Which stabilizer would Whirlpool recommend for its refrigerators?

Refrigerators can work without a stabilizer in the voltage range between 160-260V but, considering actual variation of the voltage beyond this limit, Whirlpool recommends the DUROMAX brand of voltage stabilizers. For specifications, please contact your nearest Authorized Whirlpool Dealer.

Can my refrigerator work on an inverter or generator?

It is not advisable to operate your refrigerator on an inverter. However, you can use a generator depending on its capacity.

Moisture is visible on the freezer door and chiller tray. Is this normal?

Yes. As the door opens, hot air enters the cabinet and comes in contact with the cold surface, which results in water droplets.

PRECAUTIONS DURING USE

TAKE EXTRA CARE

- Do not splash water on the back of the refrigerator. Water impairs the insulation of electrical parts and may cause an electrical short circuit or a shock hazard.
- Do not use flammable sprays such as lacquer and paint near the refrigerator, as the heat from the refrigerator may ignite flammable aerosols.
- Do not store volatile chemicals such as ether and benzene in the refrigerator. The fumes, besides damaging food, can build up and cause an explosion.
- The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.
- Leaving the door open allows warmer air to enter the refrigerator and causes the refrigerator to use more energy to maintain cooling.
- Do not use the refrigerator if it is not operating correctly or has been damaged. Disconnect it from the power supply and call your Whirlpool Service Centre.
- If the power cord is damaged, avoid a hazard by having it replaced by the Authorized Whirlpool Service Centre or a qualified person.
- Do not keep hot (over 60°C) or heavy (over 10 kg) objects or lit candles on top of the refrigerator.
- Do not leave liquids and carbonated drinks in glass containers/bottles in the freezer/chiller compartment for long or they will freeze and burst.
- Child entrapment and suffocation are important safety issues. Abandoned refrigerators are still dangerous even if they are unattended for a few days. When disposing of your old refrigerator, please follow these instructions to prevent accidents.
- Before you throw away your refrigerator or freezer, remove the doors.
- Leave the shelves in place so that children cannot easily climb inside.
- Cyclopentane/R141 b is used as the insulation blowing agent in this product. Please contact your local authorities in regard to the environmentally safe disposal of this product.

REFRIGERATOR DISPOSAL

By ensuring this product is disposed of correctly, you will help avoid potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

This symbol  on the product or on the documents accompanying the product indicates that this appliance may not be treated as household waste. Instead it must be handed over to an authorized collection center for the recycling of electrical and electronic equipment waste generated at the end of the product's useful life. Disposal must be carried out in accordance with local environmental regulations for e-waste disposal, which involve channeling e-waste to authorized collection center(s) or registered dismantler(s) or recycler(s) or returning it to the pick-up to take back services provided by the manufacturer.

Icemagic Fresh / Genius IM Power Cool	WMD 200SL	WMD205 WN WMD205 VL	WMD 240** WMD 240	205 GENIUS CLS PLUS
Gross Capacity	185 L	190 L	215 L	190 L
Voltage Rating	230V, 50Hz	230V, 50Hz	230V, 50Hz	230V, 50Hz
Height mm	1159	1134	1267	1134
Width	536	525	525	525
Depth	604	455	455	455
Fruit Crisper*	No	No	No	NO
Humidity control Knob	No	YES (IN CRISPER COVER)	Yes	YES (IN CRISPER COVER)
Pedestal	No	No	Yes	NO
Shelves	2 Glass	2 Glass	3 Glass	2 Glass

In line with Whirlpool's policy of continuous improvement, features might change without prior notice.

** Terms and conditions apply.

INSTALLATION REPORT



Model No. & Serial No. _____ Compressor No.: _____

Customer's Name: _____ Telephone No.: _____

Address: _____

Installation Check Points

Machine Delivered on: _____

Machine Installed on: _____

Tick As Appropriate (by technician)

- | | | |
|--|----------------------------|----------------------------|
| 1. After unpacking, has any transit damage been observed?
If yes, give details below. | <input type="radio"/> Yes | <input type="radio"/> No |
| 2. Has leveling been performed? | <input type="radio"/> Yes | <input type="radio"/> No |
| 3. Condition of Voltage/Earthing/Plug Point
If poor, has customer been advised on action to be taken? | <input type="radio"/> Good | <input type="radio"/> Poor |
| | <input type="radio"/> Yes | <input type="radio"/> No |
| 4. Is the bulb glowing? | <input type="radio"/> Yes | <input type="radio"/> No |
| 5. Is the door sealing properly? | <input type="radio"/> Yes | <input type="radio"/> No |
| 6. Is the refrigerator cooling properly? | <input type="radio"/> Yes | <input type="radio"/> No |
| 7. Any accessories missing? | <input type="radio"/> Yes | <input type="radio"/> No |
| 8. Warranty terms explained? | <input type="radio"/> Yes | <input type="radio"/> No |
| 9. Thermostat knob function explained? | <input type="radio"/> Yes | <input type="radio"/> No |
| 10. Normal noises explained? | <input type="radio"/> Yes | <input type="radio"/> No |
| 11. Dos and don'ts explained? | <input type="radio"/> Yes | <input type="radio"/> No |
| 12. Is the door open alarm working properly? | <input type="radio"/> Yes | <input type="radio"/> No |
| 13. Electronic UI panel in automatic model explained? | <input type="radio"/> Yes | <input type="radio"/> No |
| 14. E-light in premier model explained? | <input type="radio"/> Yes | <input type="radio"/> No |

Installed by: _____

Signature: _____

Dealer's stamp

Customer's Response

- | | | |
|---|--------------------------------------|---|
| 1. The installer was courteous & helpful | <input type="radio"/> Yes | <input type="radio"/> No |
| 2. I would describe my installation experience as | <input type="radio"/> Unacceptable | <input type="radio"/> Satisfactory |
| | <input type="radio"/> Unsatisfactory | <input type="radio"/> Very satisfactory |

I certify that the above information has been provided & the checks performed to my satisfaction. I am fully satisfied with the installed performance of the refrigerator.

Customer's Signature

Date:

Time:





تقرير التركيب

رقم الموديل والرقم المسلسل _____ ضاغط رقم: _____

اسم العميل: _____ رقم الهاتف: _____

العنوان: _____

نقاط التأكد من التركيب

تم تسليم الجهاز في: _____

تم تركيب الجهاز في: _____

ضع علامة على النحو المناسب (الفتي)

1. بعد إزالة مواد التعبئة، هل لاحظت أي ضرر قد حدث أثناء النقل؟
إذا كانت الإجابة بنعم، اذكر التفاصيل أدناه.
نعم لا
2. هل تم ضبط مستوى التسوية؟
نعم لا
3. حالة الفلظية/ التآريض / نقطة التوصيل
إذا كانت سينة، هل أبلغ العميل بشأن الإجراء الذي يجب اتخاذه؟
نعم لا
4. هل اللبنة متوجهة؟
نعم لا
5. هل يتم إغلاق الباب بإحكام؟
نعم لا
6. هل تبريد التلاجة مناسب؟
نعم لا
7. هل هناك أي إكسسوارات مفقودة؟
نعم لا
8. هل تم شرح شروط الضمان؟
نعم لا
9. هل تم شرح وظيفة مقبض الترموستات؟
نعم لا
10. هل تم شرح سبب الضجيج العادي؟
نعم لا
11. هل تم شرح الأوامر والنواهي؟
نعم لا
12. هل إنذار فتح الباب يعمل جيدا؟
نعم لا
13. هل تم شرح لوحة واجهة المستخدم الإلكترونية في الموديل الأوتوماتيكي؟
نعم لا
14. هل تم شرح الإضاءة الإلكترونية في الموديل الفاخر؟
نعم لا

ختم الوكيل

المسؤول عن التركيب: _____

التوقيع: _____

رد العميل

1. كان مسؤول التثبيت مهذبا ومعاوننا
نعم لا
2. أود وصف تجربة التركيب على أنها
غير مقبولة مرضية
- غير مرضية غير مرضية جدا

أقر بأن المعلومات الواردة أعلاه قدمت وتم إجراء الفحوص بالشكل الذي يرضيني. أنا راض تماما عن أداء التلاجة التي تم تركيبها.

الوقت:

التاريخ:

توقيع العميل



الاحتياطات أثناء الاستخدام

- المزيد من الحذر
- لا ترش الماء على الجزء الخلفي من الثلاجة. الماء يضعف عزل القطع الكهربائية ويمكن أن يسبب دائرة قصر كهربائي أو خطر الصدمة الكهربائية.
- لا تستخدم البخاخات القابلة للاشتعال مثل الورنيش والطلاء بالقرب من الثلاجة، حيث أن الحرارة المنبعثة من الثلاجة قد تشعل الهباء القابل للاشتعال.
- لا تخزن المواد الكيميائية المتطايرة مثل الإيثير والبنزين في الثلاجة. الأدخنة، إلى جانب المواد الغذائية الصارة، يمكن أن تتراكم وتسبب الانفجار.
- الجهاز غير مصمم ليستخدمه الصغار أو المعاقين بدون إشراف. فيجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.
- يسمح ترك الباب مفتوحاً للهواء الأكثر دفئاً بدخول الثلاجة، ويجعل الثلاجة تستهلك المزيد من الطاقة للحفاظ على التبريد.
- لا تستخدم الثلاجة إذا كانت لا تعمل بشكل صحيح أو قد تتعرض للتلف. انفصلها عن التيار الكهربائي، وقم بالاتصال بمركز الخدمة التابع لـ Whirlpool.
- في حالة تلف سلك الطاقة، تجنب الخطر واستبداله استعن بمركز خدمة معتمد من Whirlpool أو فني مؤهل.
- لا تبق الأشياء الساخنة (أكثر من 60 درجة مئوية) أو الثقيلة (أكثر من 10 كجم) أو الشموع على أعلى الثلاجة.
- لا تترك السوائل والمشروبات الغازية في عبوات زجاجية / قنينات في حجرة التجميد / المبرد لفترة طويلة وإلا سوف تتجمد وتتفجر.
- انحباس الطفل واحتناقه قضيائاً هامة تتعلق بالسلامة. الثلاجات المهجورة لا تزال خطرة حتى لو كانت ستبقى بلا مراقبة لبضعة أيام فقط. إذا كنت ستقوم بالتخلص من ثلاجتك القديمة، يرجى اتباع هذه التعليمات للمساعدة في منع وقوع الحوادث.
- قبل التخلص من الثلاجة القديمة أو المجدد يجب إزالة أي أبواب فيهما.
- اترك الرفوف في مكانها حتى لا يمكن للأطفال الوثوب بداخلها بسهولة.
- يستخدم السيكلوبنتين / R141 "ب" كعامل نفع للعزل في هذا المنتج. يرجى الاتصال بالسلطات المحلية فيما يتعلق بالتخلص الآمن بيئياً من هذا المنتج.

التخلص من الثلاجة

إن حرصك على التخلص من هذا المنتج بشكل صحيح يساهم في تجنب التبعات السلبية الممكنة على البيئة وصحة الإنسان، والتي قد تنجم عن التعامل مع هذا المنتج بصورة غير صحيحة عند التخلص منه ضمن النفايات.

يشير الرمز  الموجود على المنتج إلى عدم إمكانية التخلص من هذا الجهاز كفضالة منزلية. وبدلاً من ذلك يجب تسليمه إلى مركز جمع معتمد لإعادة تدوير النفايات الإلكترونية والكهربائية من الأجهزة في نهاية عمرها الافتراضي. يجب أن يتم التخلص من النفايات وفقاً للأنظمة البيئية المحلية الخاصة بالتخلص من النفايات الإلكترونية، التي تنطوي على توجيه النفايات الإلكترونية إلى مركز جمع (مراكز) معتمدة أو مراكز تفكيك مسجلة أو نقاط إعادة تدوير أو إعادتها للحصول على الخدمات المقدمة من قبل الشركة المصنعة.

WMD240 ** WMD240	WMD205 WN WMD205 VL	WMD200 SL	
215L	190L	185L	الإجمالي القدرات
230V، 50HZ	230V، 50HZ	230V، 50HZ	القوة الكهربائية
1267	1134	1159	مم الارتفاع
525	525	536	عرض
455	455	604	عمق
لا	لا	لا	هش الفاكهة *
نعم	نعم (في غطاء هش)	لا	مراقبة الرطوبة مقبض الباب
نعم	لا	لا	قاعدة التمثال
الزجاج 3	الزجاج 2	الزجاج 2	رفوف

تتبعاً مع سياسة Whirlpool للتحسين المستمر، قد تتغير ملامح المنتج بدون إشعار مسبق. تُطبق جميع الشروط والبنود.

تحذير:



خطر الانفجار - خر الاختناق

- استخدم المنظفات التي هي ليست سريعة الاشتعال.
- الفشل في ذلك قد يؤدي إلى الموت أو الانفجار أو الحريق.
- لا تسمح للأطفال باللعب أو الاختفاء داخل الثلاجة.

الأسئلة الشائعة

لماذا تصدر الثلاجة ضجيجا عند تشغيلها؟

هذا طبيعي حيث أن الضاغط المثبت على ظهر الثلاجة به أجزاء متحركة تنشط عند تشغيله.

هل التكتيف في صندوق الخضروات والفواكه طبيعي؟

نعم. بما أن الماء في الخضروات يتبخر، فهو يضرب السطح البارد للثلاجة وبالتالي ينتج عن ذلك قطرات الماء.

ما مقدار الطاقة التي تستخدمها ثلاجتي يوميا؟

في ظل ظروف BIS (المكتب الهندي للتوحيد القياسي)، فإن استهلاك الطاقة لـ 190 & 215 لتر يتراوح بين 0.92-1.0 كيلووات ساعة/يوم. ولكن هذا قد يختلف استنادا إلى الاستخدام (كلما ثقلت الحمولة وزاد فتح الباب، زاد استهلاك الطاقة) وكذلك الظروف المناخية.

لماذا تكون هناك رائحة منبعتة من الثلاجة؟

افحص إذا ما كان هناك أي طعام يصدر الرائحة القوية يكون قد ترك غير مغلف في الثلاجة. إذا كان الأمر كذلك، غلفه بالبولي إيثيلين أو احتفظ به في وعاء مغلق. إن وضع الليمون المقطوع داخل الثلاجة قد يساعد أيضا في خفض الرائحة.

كم يستغرق تكوين الثلج؟

يختلف هذا استنادا إلى الاستخدام والظروف المناخية.

لماذا الجدران الجانبية للثلاجة تسخن أحيانا؟

هذا أمر عادي حيث أن هناك أنبوب للغاز الساخن مثبت لتدفئة الحواف الجانبية للكامبينة مما يساعد في منع قطرات الماء من التكون على الجدران عندما تكون الرطوبة عالية.

كم مرة يتعين علي تنظيف ثلاجتي؟

يُنصح بتنظيف ثلاجتك مرتين في الشهر. يمكنك تنظيفها بالماء الدافئ ومنظف رقيق جدا.

ما فائدة المبرد؟

يوفر المبرد التبريد السريع لزجاجات الماء والمشروبات الغازية، إلخ. يمكنه أيضا تخزين الجبن ومنتجات الألبان والشوكولاتة في حاويات مغلقة.

لماذا تتلف الخضروات عند الاحتفاظ بها على الرف أسفل المبرد مباشرة؟

المنطقة أسفل المبرد ليست مناسبة للخضروات. يجب أن يتم تخزين الخضروات في صندوق الفواكه والخضروات، وهذه هي درجة الحرارة الصحيحة لحفظ الخضروات الطازجة.

ما هو الموازن الذي توصي به Whirlpool للاستخدام مع ثلاجتها؟

يمكن أن تعمل الثلاجات بدون موازن في نطاق الجهد بين 160-260 فولت ولكن، ومع وضع الاختلاف الفعلي للجهد الذي يتجاوز هذا الحد في الاعتبار، فإن Whirlpool توصي بموازات الفلطية من العلامة التجارية DUROMAX. لمعرفة المواصفات، يرجى الاتصال بأقرب وكيل لـ Whirlpool.

هل تستطيع ثلاجتي العمل على العاكس أو المولد؟

من غير المستحسن تشغيل الثلاجة على العاكس. ومع ذلك، يمكنك استخدام مولد اعتمادا على قدراتها.

الرطوبة ظاهرة على باب الثلاجة وصينية التبريد. فهل هذا عادي؟

نعم. عندما يُفتح الباب، يدخل الهواء الساخن إلى الكامبينة، ويلامس السطح البارد مما ينتج عنه تكون قطرات من الماء.

تعتبر سلامتك وسلامة الآخرين أمراً مهماً للغاية

لقد قدمنا العديد من رسائل السلامة المهمة في هذا الدليل وعلى أجهزتك.

- هذا الجهاز ليس مخصصاً للاستخدام من قبل الأشخاص (بما في ذلك الأطفال) ذوي القدرات البدنية أو الحسية أو العقلية ، أو نقص الخبرة والمعرفة ما لم يتم منحهم الإشراف أو التعليمات المتعلقة باستخدام الجهاز من قبل شخص مسؤول عن سلامتهم.



- يجب مراقبة الأطفال للتأكد من عدم تشغيلهم مع الجهاز.
- يرجى قراءة جميع تعليمات السلامة والتشغيل قبل تشغيل الجهاز.
- يرجى الاحتفاظ بهذا الدليل طوال الوقت للرجوع إليه.
- جميع التحذيرات والمذكرات الموجودة في هذه الثلاثة مهمة ، يرجى الانتباه إليها .
- للحصول على أفضل النتائج تتبع جميع التعليمات الواردة في هذا الدليل
- وتشمل كلا من رقم الطراز والرقم التسلسلي في حين المقابلة مع دوامة أو بالموزع في اتصال مع هذا المنتج

- يرجى الحصول على الخدمة القيام به من قبل مركز خدمة ويربول المصرح لهم فقط
- نتعاون مع الخدمة مهندس أثناء تنفيذ عملية شحن الغاز.
- هذا هو رمز تنبيه السلامة الموجود بجانب كلمة الخطر "و" تحذير "
- في حالة تلف سلك التزويد. يجب أن تحل محل الشركة المصنعة أو وكيل الخدمة أو الأشخاص المؤهلين بالمثل لتجنب الخطر.

- ويهدف هذا الجهاز لاستخدامها في الأسرة وتطبيقات مماثلة مثل
- المناطق المطبخ الموظفين في المحلات التجارية والمكاتب وغيرها من بيئات العمل -
- بيوت المزارع والعلماء في الفنادق والموتيلات والبيئات السكنية الأخرى -
- بيئات من نوع المبيت والإفطار
- خدمات المطاعم والتطبيقات المماثلة غير المباعة بالتجزئة



تحذير:

Risk of Fire | Flammable Materials

خطر الحريق الأول المواد القابلة للاشتعال
لا يحتوي هذا الجهاز على مركبات الكربون الكلورية فلورية. دائرة التبريد
(Isobutane) HC (R600a) تحتوي على .
R600a (Isobutane)
هو غاز طبيعي بدون تأثير بيئي ولكنه
قابل للاشتعال. لذلك ، تأكد من أنابيب دائرة التبريد
عدم تلف ، خاصة عند إفراغ دائرة التبريد.
كعامل نفخ في رغوة العزل C.Pentane يستخدم

تحذير:



خطر حدوث صدمة كهربائية



- التوصيل بمقبس مؤرض بـ 3 شوكات.
- لا تزل شوكة التآريض.
- لا تستخدم مهايئاً.
- تجنب استخدام سلك تطويل.
- عدم اتباع هذه التعليمات يمكن أن يؤدي إلى الوفاة أو نشوب حريق أو صدمة كهربائية.

تحذير:



- قد تقتل أو تصاب إصابة خطيرة إذا لم تتبع التعليمات.
- كل رسائل السلامة سوف تحدد ما هو الخطر المحتمل، وتخبرك عن كيفية تقليل احتمال الإصابة، وتخبرك ماذا يمكن أن يحدث إذا لم يتم اتباع التعليمات.
- احرص على عدم انسداد فتحات التهوية في غطاء الجهاز أو البنية المضمنة.
- لا تستخدم أجهزة ميكانيكية أو وسائل أخرى لتسريع عملية فك التجمد بخلاف تلك الموصى بها من جانب الجهة المصنعة.
- لا تقم بإتلاف دائرة التبريد الكهربائية.
- يقتصر استخدام هذا الجهاز على الاستعمال المنزلي وما شابه ذلك (القائمة).
- لا تستخدم الأجهزة الكهربائية داخل حجيرة تخزين الأغذية الخاصة بالجهاز.
- 1. تحذير: عند وضع الجهاز ، تأكد من أن سلك الإمداد غير محاصر أو تالف.
- 2. تحذير: لا تحدد موقع العديد من منافذ المقبس المحمولة أو موردي الطاقة المحمولة في الجزء الخلفي من الجهاز.

WHIRLPOOL ICEMAGIC السهولة لتركيب FRESH - IM POWERCOOL - GENIUS

خطوات التركيب:

الخطوة 1

أزل كرتون السلامة الخارجي. افحص الجهاز للتأكد أنه وصل بأمان إلى منزلك. افحصه بحثًا عن أي تلف بسبب نقل الثلاجة، وإذا وُجد، أبلغ الوكيل عنه خلال 24 ساعة من التسليم.

الخطوة 2

ارفع الثلاجة كما هو موضح في الصورة. لا ترفعها بمسك المكثف (أنبوب باللون الأسود). امسك الثلاجة من مشبك المكثف (القطعة البلاستيكية البيضاء) لرفعها.

الخطوة 3

قم باختبار مكان جيد التهوية بالقرب من مأخذ كهربائي. حافظ على خلوص لا يقل عن 50 ملم بين الجزء الخلفي من الثلاجة والجدار، أو وفقًا للفواصل المورد للجزء الخلفي من الثلاجة.

فضلا تجنب الآتي: المناطق المكسوة بالسجاد، أشعة الشمس المباشرة، مصادر الحرارة مثل الأفران، أماكن الطهي، إلخ.

الخطوة 4A

تُورد Icemagic بقدم ضبط المستوى المصمم خصيصًا للمساعدة في تعويض الأرضية غير المستوية، وبالتالي منع الضجيج الزائد والميلان. أدر الساقين الأماميين في اتجاه عقارب الساعة/عكس اتجاه عقارب الساعة لزيادة/خفض الارتفاع. يجب أن تكون المقدمة أعلى قليلاً من الظهر.

الخطوة 4B


تُورد Icemagic بدرج سفلي بجزء مصمم خصيصًا بساق قابلة للتعديل لتعويض عدم تساوي الأرضية. يجب إدخال الجزء في السيقان الأمامية كما هو موضح في الصورة (الخطوة 1)؛ ثم أدر الساق القابلة للتعديل في اتجاه عقارب الساعة/عكس اتجاه عقارب الساعة لزيادة/خفض الارتفاع كما هو موضح في الصورة (الخطوة 2).

نقل الثلاجة:

- افصل التيار الرئيسي، وافصل سلك الطاقة من مأخذ التيار.
- أزل جميع الأطعمة من الثلاجة والفریزر ودرج حفظ الخضروات.
- استخدم قطعة قماش ناعمة ورطبة لمسح الثلاجة من الداخل والخارج.
- اربط الأبواب والأجزاء الداخلية باستخدام شريط لمنعها من التحرك/الفتح أثناء النقل.
- ارفع الثلاجة بمسك مشبك المكثف (الجزء البلاستيكي الملون بالأبيض).
- لا ترفعها بمسك المكثف (أنبوب باللون الأسود).

استبدال المصباح المحروق

- يجب أن ينفذ الاستبدال فقط فني معتمد من الدعم التقني في Whirlpool.
- قم بفصل الثلاجة، ثم اقطع التيار الكهربائي، وأزل القابس من مأخذ التيار.
- افتح باب الفريزر، ثم فك البراغي الجانبية، والعلوية الموجودة في الفريزر.
- ثم ادفع ببطء مشابك/قفل إطار الفريزر بالمفك، واسحب إطار الفريزر.
- أزل الللمبة بإدارتها في عكس اتجاه عقارب الساعة، ثم استبدل الللمبة المحروقة مستخدمًا لمبة جديدة بتصنيف 15 وات بحد أقصى، واربطها بإدارتها في اتجاه عقارب الساعة.
- ضع الإطار على الفريزر، ثم ادفعه قليلاً حتى يتناسب الإطار مع الفريزر.
- أحكم ربط جميع البراغي في مكانها. صل سلك التيار بمأخذ التيار الرئيسي، ثم شغله.

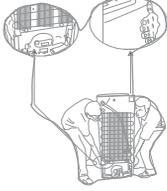

WHIRLPOOL ICEMAGIC FRESH - التعرف على IM POWERCOOL - GENIUS



قم بتدوير المقبض لضبط درجة الحرارة.



ضبط درجة الحرارة

اضبط مقبض التحكم في درجة الحرارة حسب متطلباتك وحسب ظروف الاستخدام لتأكد أنك طعامك يبقى طازجا لفترات زمنية أطول.

موقع المقبض ظروف الاستخدام

بين 2-1 أيام باردة أو الباب ليس

مفتوحا فتحا متكررا

ظروف متوسطة

مثل الرياح الموسمية.

بين 6-5 أيام حارة أو الباب مفتوح

فتحا متكررا.

درج MICROBLOCK الجديد للفواكه

- يحتفظ بالفواكه في درجة الحرارة المثلى وبمستوى الرطوبة الأمثل للحصول على الطازجة القصوى.
- طلاء Microblock طويل العمل الفريد الذي يمنع ما يصل إلى 99.9% من نمو الميكروبات منعا فعالا.

درج Microblock المتطور والجديد للخضروات

غطاء HoneyComb لدرج الخضروات والفواكه

- غطاء HoneyComb الفريد للخضروات والفواكه يحتفظ بكمية الخضروات لديك طازجة لمدة 7 أيام.
- غطاء الخضروات والفواكه يقوم أيضا بدور رف إضافي.

مقبض التحكم المتطور في الرطوبة

- يساعدك على التحكم في مستوى الرطوبة في درج الخضروات والفواكه لأنواع مختلفة من الخضروات (لبنة/صلبة).

مرشح Freshonizer

- تمتص بلورات Freshonizer الأكسجين الزائد بحيث تبقى الخضروات لديك أكثر طازجة لمدة أطول.

درج MICROBLOCK للخضروات والفواكه


- يحتفظ بالخضروات في درجة الحرارة المثلى وبمستوى الرطوبة الأمثل للحصول على الطازجة القصوى.
- طلاء Microblock طويل العمل الفريد الذي يمنع ما يصل إلى 99.9% من نمو الميكروبات منعا فعالا.

* في موديلات محددة فقط

عزل EPS مثبت داخل المبرد لتجنب التكثيف. لا تقم بإزالته.

التعرف على - WHIRLPOOL ICEMAGIC FRESH IM POWERCOOL - GENIUS

تم تصميم Whirlpool Icemagic الجديدة الخاصة بك لتوفر لك ولأسرتك رضا منقطع النظير للتجميد والتبريد السريع حتى في أكثر فصول الصيف حرارة! تُورد الثلاجة بالعديد من الخصائص المصممة بعناية لتقدم إليك المفاجآت السارة.

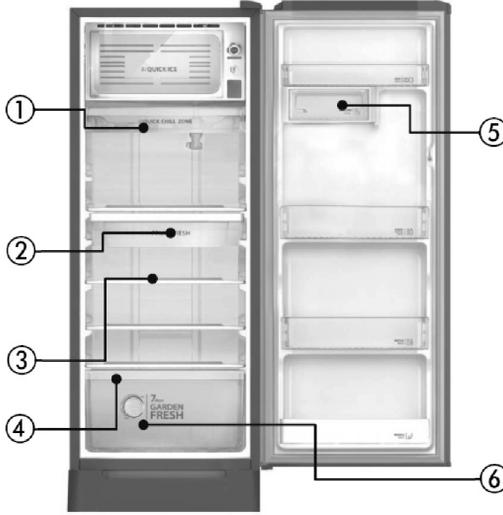

① منطقة التبريد السريع

منطقة مخصصة تبريد الزجاجات بضعف سرعة تبريد الباب المعتادة.

② درج الخضروات والفواكه المزود بـ MicroBlock

تقدم إليك Whirlpool درج الفواكه المعالج بـ MicroBlock لمنع نمو البكتيريا ومساعدة الفواكه على البقاء طازجة لفترة أطول.

③ رف زجاجي بـ "Advanced AirFlow" (تدفق متقدم للهواء)

رفوف زجاجية صلبة يتحمل إضافي وتصميم مبني للرف يحسن من تدفق الهواء البارد عبر الثلاجة. بضمن التبريد الأمثل حتى في درج الخضروات والفواكه لمساعدتها على البقاء طازجة لمدة 7 أيام.

④ غطاء HoneyComb لدرج الخضروات والفواكه

غطاء الخضروات والفواكه فريد على شكل قرص العسل يحتفظ برطوبة أكثر من الغطاء العادي مع الإبقاء على الخضروات لديك طازجة لمدة تصل إلى 7 أيام.

⑤ صندوق الخدمة/الأدوية

صندوق ممتاز يسهل الوصول إليه لتخزين الأشياء الصغيرة/الأدوية.

⑥ لتقنية المتطورة للتحكم في الرطوبة

يسمح لك مقبض التقنية المتطورة للتحكم في الرطوبة بتعديل مستوى الرطوبة في درج الخضروات والفواكه حسب نوع الخضروات المخزنة.

صفحة 4

تعليمات الاستخدام

العربية

ENGLISH

Instructions for use

Page 4

icemagic *fresh* | icemagic | genius
powercool





400010837870



Made in India

Whirlpool® Registered trademark/TM Trademark of Whirlpool group of companies - © Copyright Whirlpool Europe s.r.l. 2015. All rights reserved - <http://www.whirlpool.eu>