


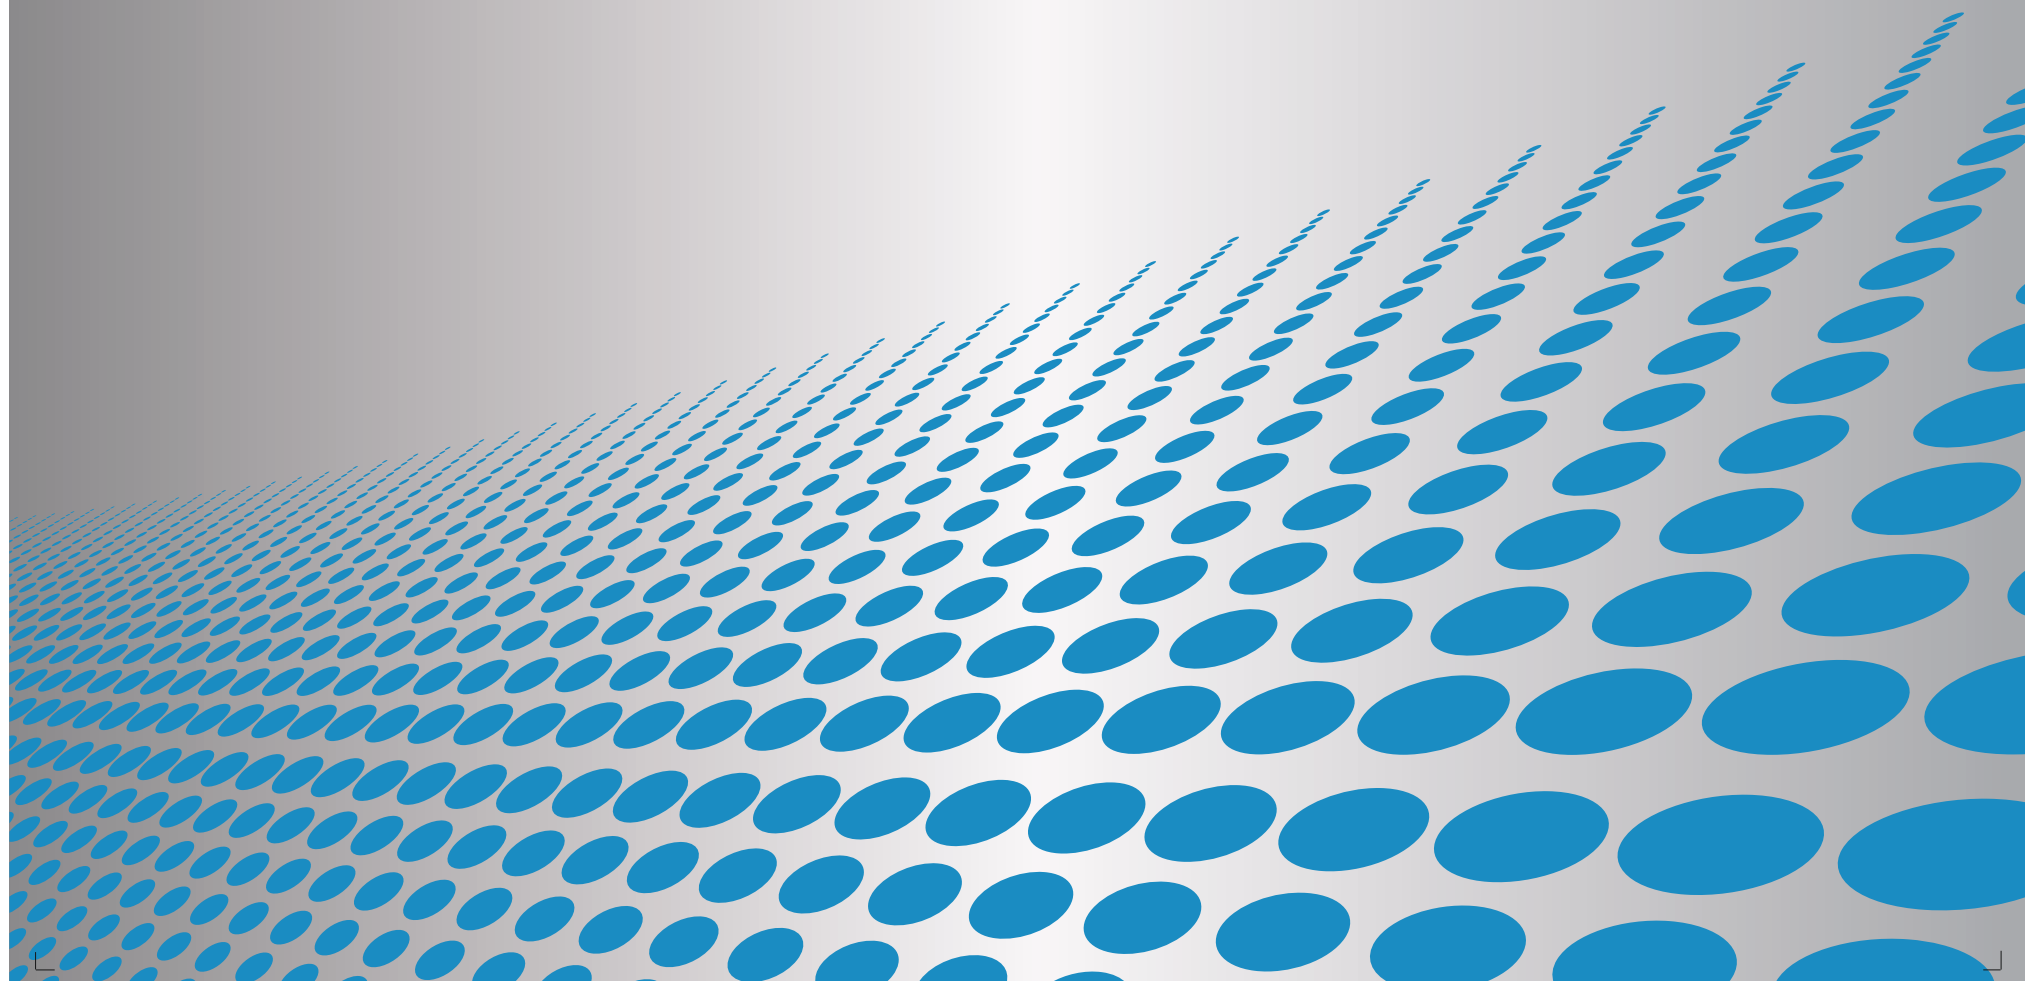


USAGE MANUAL

دليل الاستخدام



neoTM
Fresh
CONTENTS

The World of NEO FRESH	1
Safety Precautions	2
Installation	4
Operating	5
Maintenance	9
Troubleshooting	11
FAQs	12
Installation Report	15

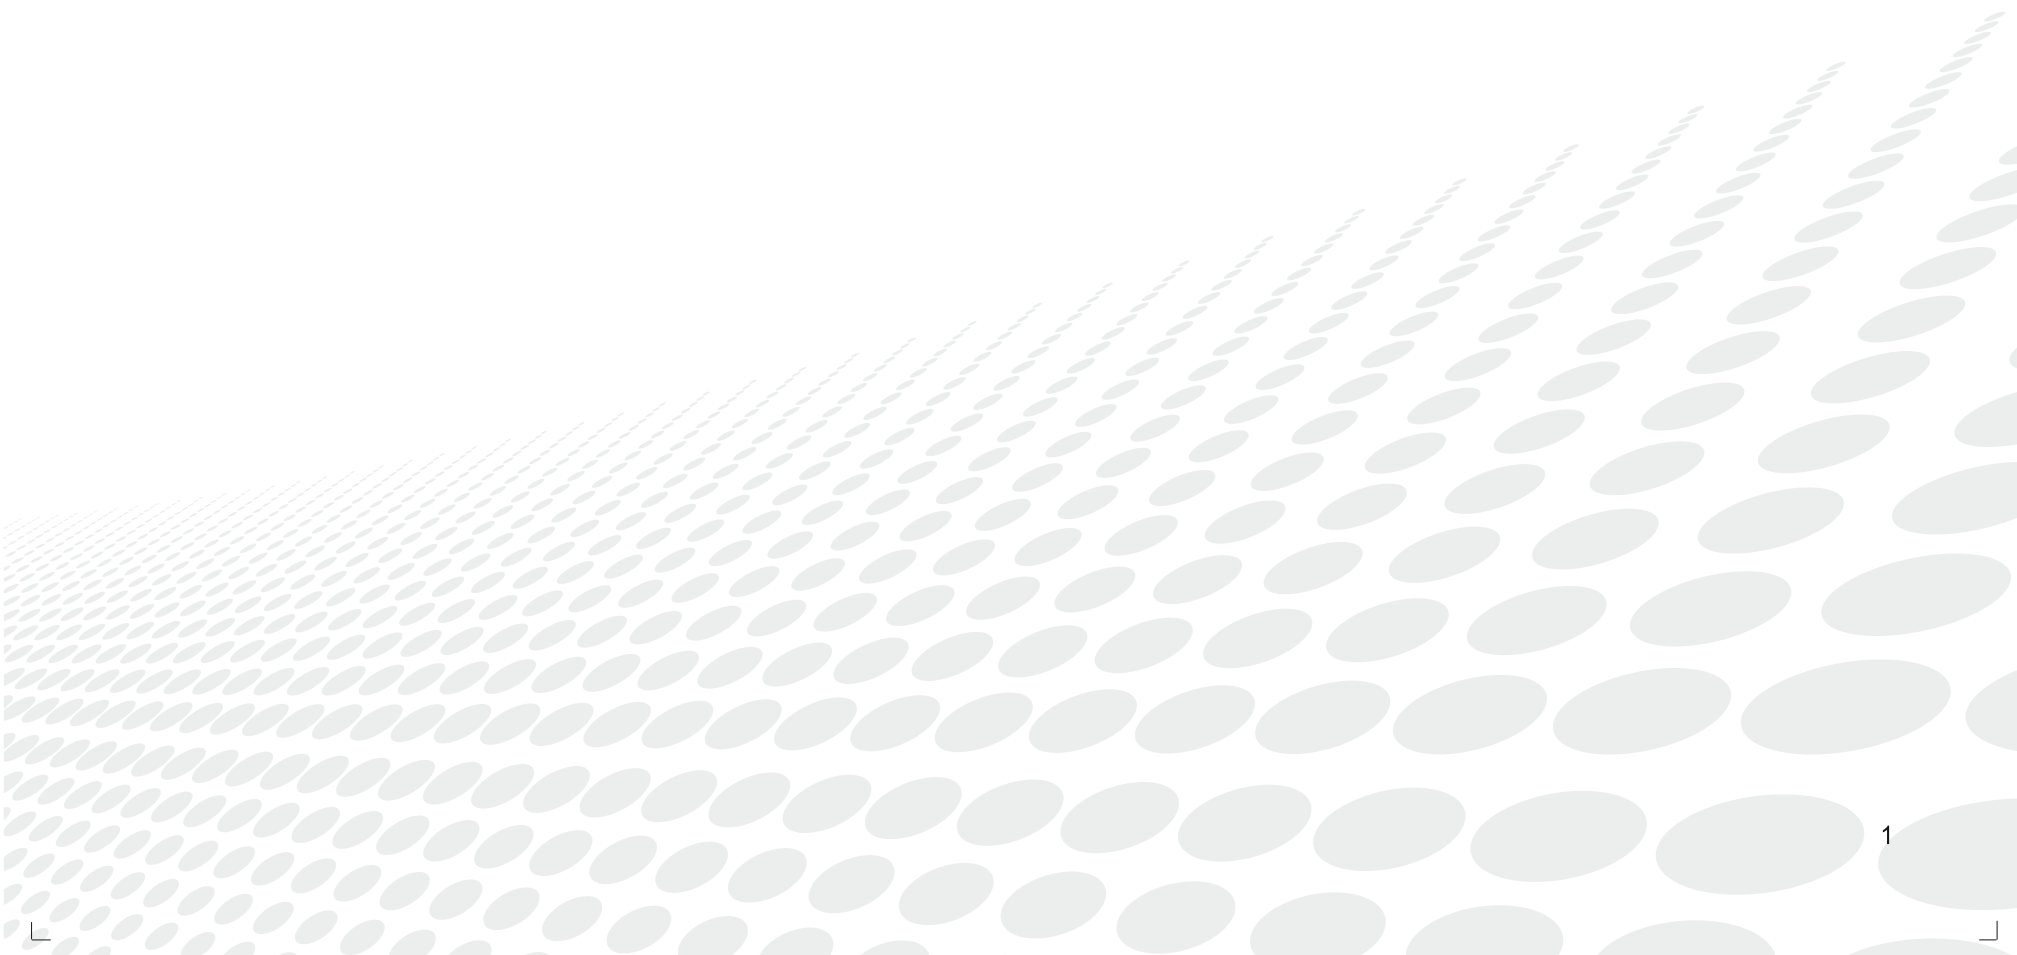

SAFETY PRECAUTIONS



Your safety and the safety of others is very important

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is the safety alert symbol.

This symbol alerts you to hazards that can kill or hurt you and others.

All safety messages will be preceded by the safety alert symbol and the word “DANGER” or “WARNING”

These words mean:



You will be killed or seriously injured if you don't follow instructions.



You can be killed or seriously injured if you don't follow instructions.

All safety messages will identify the hazard, tell you how to reduce the chance of injury and what can happen if the instructions are not followed.



⚠ WARNING

Risk of Fire / Flammable Materials

This appliance does not contain CFCs. The refrigerant circuit contains R600a (HC). Appliances with Isobutane (R600a): isobutane is a natural gas without environmental impact, but is flammable. Therefore, make sure the refrigerant circuit pipes are not damaged, especially when emptying the refrigerant circuit. C-Pentane is used as blowing agent in the insulation foam and it is a flammable gas.

Proper disposal of your Old Refrigerator is Important

Child entrapment or suffocation are not the problems of the past. Abandoned refrigerators are dangerous even if they are left unattended for a few days.

If you are getting rid of your old refrigerator, please follow these instructions to prevent accidents.

Before you throw away your old refrigerator or freezer

- ▶ Take out the doors.
- ▶ Leave the shelves in place so that children don't climb inside easily.

⚠ WARNING

Suffocation Hazard

Remove doors from your old refrigerator. Failure to do so can result in death or brain damage.

SAFETY PRECAUTIONS

WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for safety.

Children should be supervised to ensure that they do not play with the appliance.

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not store explosive substance such as aerosol cans with a flammable propellant in this appliance.

This appliance is intended to be used in household and similar applications such as

- Staff kitchen areas in shops, offices and other working environments
- Farm houses and by clients in hotels, motels and other residential type environments:
- Bed and breakfast type environments
- Catering and similar non-retail applications.

INSTALLATION

Steps for installation of NEO FR 258/278/305 models:

Step 1: Remove the outer carton specially designed to protect NEOFRESH . Inspect the refrigerator to make sure it has arrived safely at your home. In case you find any transit damage to your refrigerator, report to your dealer within 24 hours of delivery.

Step 2: After you unpack the refrigerator, select a well-ventilated spot close to an electrical point. Allow sufficient clearance for dispersion of heat, preferably 6 inches (150 mm) at the back, on the sides and top.

Step 3: You can shift the refrigerator by raising the front slightly and sliding it on the rear castors.

Step 4: Rotate the two front levellers, provided below your refrigerator, clockwise to raise the front and anticlockwise to lower it (refer fig.1). The front should be slightly above the rear so that the door shuts gently when left open.

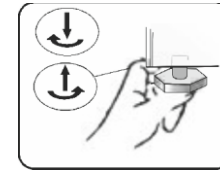


Fig. 1

Things to keep in mind:

- ▶ Keep the refrigerator away from direct sunlight and other high temperature sources like oven and cooking range.
- ▶ Avoid damp, exposed locations.
- ▶ Avoid carpeted areas. A stable installation minimizes noise and prevents tilting.

This appliance is intended to be used in household and similar applications.


Getting Connected

Plug the cord of the refrigerator into a 3 prong grounded outlet.

Adjust the cooling settings (refer pages 4 & 5 for instructions).

Ensure that the electrical point is properly earthed. Avoid extension cords.

Run refrigerator for 2-3 hours so that it is cooled sufficiently before keeping food inside.

⚠ WARNING	
	
Electric Shock Hazard	
<ul style="list-style-type: none">■ Do not remove ground prong.■ Do not use an adapter.■ Do not use an extension cord.■ Failure to follow these instructions can result in death, fire or electrical shock.	


WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Note : It is advisable to get your refrigerator installed by an authorised Whirlpool® Service Representative

OPERATING

Now you can easily adjust all your refrigerator settings according to your needs. Your new NEO iCHILL with its new control panel comes with a host of advanced features that are sure to delight you. Just plug in the refrigerator and follow the instructions given below to discover the convenience of operating NEO iCHILL.

For models with electronic user interface

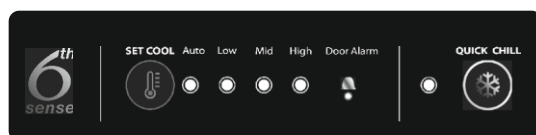

6th Sense™ Quick Chill

This mode makes ice super quick & chills water even in the hottest summers. Can be used in the event of guests coming in at short notice & to fulfill party needs. Press the button to activate. Quickchill light will start glowing when the mode is activated. Once activated, this mode will run for 1 hour & after that, it will stop glowing &

refrigerator will automatically return to its earlier cooling mode.

However, if you want to deactivate it, then just press the Quickchill button. The light will stop glowing & refrigerator will return to previous cooling setting. Cooling setting can be changed when Quickchill mode active. It will start when Quickchill mode is deactivated.



6th Sense™ Door Open Alarm

6th Sense™ Door Open Alarm alerts you to close the refrigerator door if it has been left open by mistake for more than two minutes. This not only prevents cooling loss but also saves electricity.

6th Sense™ Auto Cool Mode

6th Sense™ Auto Cool Mode, intelligently controls the temperature in your refrigerator so that you get perfect cooling, always. When you switch on the refrigerator for the first time, this mode will be automatically activated and the blue light will be on. The 6th Sense Auto Cool is the next leap in cooling technology. Once activated, the Auto Cool feature works continuously in the background while the product is on. The Blue light glows when this feature is functioning.

Set Cooling

Manual mode offers you the flexibility of selecting the controls manually as per your choice.

By default, the refrigerator will be in the 6th sense Auto Cool mode.

To set cooling manually, press "SET COOLING BUTTON", LOW COOL light will blink twice & will steady ON. Then press once to enter MID COOL mode. Keep pressing to select desired mode. The sequence is cyclic Auto >> Low >> Mid >> High >> Auto...

The different cooling settings are illustrated on next page.

OPERATING


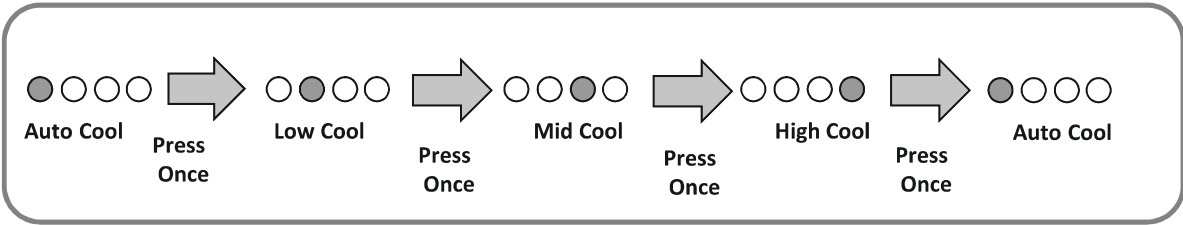


Fig. 1

Position	Usage Condition
Auto Cool	This is default setting. Can be used in normal usage conditions
Low Cool	Durind winters or when there is not much food in the refrigerator
Mid Cool	During summers or when there is lot of food stored in the refrigerator
High Cool	During extreme summers or when you want very strong cooling

For models without electronic user interface

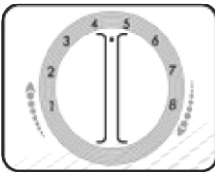

Temperature Control


To control the temperature of your refrigerator, turn the knob according to your requirement. This control is provided inside the refrigerator section. Turn knob to the left to reduce the cooling and to the right to increase the cooling. It is preset to the middle position.

For NEO IC425/465/495 models

Position	Usage Condition
1- 3	During winters or when there is not much food stored in the refrigerator.
4 - 5	This is the default setting. Can be used under normal usage conditions.
6 - 8	During summers / extreme summers or when there is a lot of food stored in the refrigerator.

OPERATING


For NEO FR258/278/305 models :

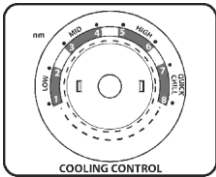

Position	Usage Condition
Low	During winter conditions or when there is not much food stored in the refrigerator.
Mid	This is the default & recommended setting. Can be used in normal usage.
High	During summers or when there is a lot of food stored in the refrigerator.
Quick Chill	During extreme summers or when you want faster cooling.

Air Flow Control

The Air Flow Control in the freezer controls the distribution of cold air between the refrigerator compartment and freezer compartment. Turn knob to the left for ‘Normal Ice’ and to the right for ‘Fast Ice’ setting. It is preset to the middle position as shown in the picture for uniform cooling in freezer and refrigerator compartments.

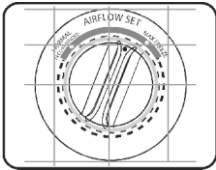


Knob Positions	Usage Conditions
Normal	For normal ice in freezer and strong cooling in your refrigerator compartment.
Max Freeze	For quick ice in your freezer compartment

For even cooling in both the refrigerator compartment and freezer compartment, set the air flow knob in mid position.

OPERATING

Replacement of Activ Deo with TimeStrip

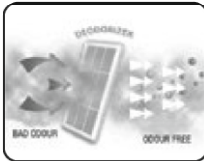

- ▶ Activ Deo should ideally be replaced every 6 months.
- ▶ Snap out the Activ Deo cover.
- ▶ Replace Activ Deo strip (available with Whirlpool® Service) with a new one.
- ▶ Press and snap back the cover.
- ▶ Please contact Whirlpool® Home Care Centres for replacement.
- ▶ The Timestrip provided along with the product indicates the time for replacing the product.
- ▶ To activate the Timestrip, simply squeeze the bubble on the front. A line in the indicator window will start colouring.
- ▶ Replace Activ Deo when the Timestrip indicator turns Black/Red.

Replacing Freshonizer / Freshflow Flexi-vent filters

- ▶ Please contact Whirlpool® Home Care Centres for replacement.

Replacing Freshonizer

- ▶ Freshonizer should be replaced every 6 months for optimum performance.
- ▶ The Timestrip provided along with the product indicates the time for replacing the product.
- ▶ To activate the Timestrip, simply squeeze the bubble on the front. A line in the indicator window will start colouring.
- ▶ Replace Freshonizer when the Timestrip indicator turns Black/Red.
- ▶ To replace Freshonizer, press snap & pull in vertical direction. Push down a new one. (Refer to Image).
- ▶ Please contact Whirlpool® Home Care Centers for replacement.

⚠ WARNING

Explosion Hazard

Keep flammable materials and vapors, such as gasoline, away from refrigerators.

Failure to do so can result in explosion or fire.

MAINTENANCE

Cleaning your NEOFRESH

Before cleaning, always switch-off the power supply and remove the plug from the socket.

- ▶ Remove all shelves and bins. To remove refrigerator selves, slide them till the front and push them up gently from the front of the shelf and then pull out.
- ▶ Slide out the chiller, tilt upwards and pull out gently.
- ▶ Remove the refrigerator and freezer door bins by pushing up and pulling out.
- ▶ Use a soft cloth and mild detergent to clean the refrigerator thoroughly. Take care not to damage the door seals.
- ▶ Allow the refrigerator to dry by leaving the door open for some time.
- ▶ Plug the power cord in and switch the mains on. Allow the refrigerator to cool for some time before placing food inside.

Cautions

- ▶ Do not splash water directly on the refrigerator.
- ▶ Do not work with flammable sprays.
- ▶ Be sure to check the voltage before inserting the power supply cord into the socket.
- ▶ Be sure not to re-insert the power supply socket within 5 minutes of removing it from the socket.
- ▶ Ensure that the water does not get into the LED/bulb panels or other electrical components of your refrigerator.
- ▶ Ensure that water doesn't get into the control panel of the freezer door.
- ▶ Don't allow water to collect at the bottom of the refrigerator.
- ▶ Do not store volatile chemicals such as ether and benzene in the refrigerator.
- ▶ The fumes, besides damaging food can build up and cause an explosion.

This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

MAINTENANCE

Moving your Refrigerator

NEO FR258/278/305 models :

- ▶ Switch-off the mains and disconnect the power cord from socket.
- ▶ Remove all food items from the refrigerator, freezer and vegetable drawer.
- ▶ Use a soft, damp cloth to wipe the refrigerator from the inside and outside.
- ▶ Fasten the doors and interior components using tape to prevent them from moving/opening during transportation.
- ▶ Lift the refrigerator slightly from the front and slide using castors at the rear.

Replacing the fused lamp

- ▶ Disconnect refrigerator - Switch off the power supply and remove the plug from the socket.
- ▶ Transparent cover - Locate the transparent cover on the control box.
- ▶ Remove the transparent cover - Using a blunt edged screw driver remove the lamp cover using the thumb depression provided at the bottom.
- ▶ Remove the fused lamp - Turn the lamp in the anti-clockwise direction to unscrew.
- ▶ Replace the new lamp - Replace the fused lamp with a new lamp of the rating (15W) and fasten it in the lamp socket by turning it clockwise.
- ▶ Put the transparent cover the restart - Put the lens back in position, plug the power cord in the mains and switch ON.

The marking of the maximum rated wattage of illuminating lamps shall be easily discernible while the lamp s being replaced.

For compression-type appliances the marking of the type of flammable refrigerant and of the flammable insulation blowing gas, as well as the symbol "Caution: risk of fire", shall be visible when gaining access to the motor-compressors.

Children should be supervised to ensure that they do not play with the appliance.

TROUBLESHOOTING

PROBLEM	PROBING	SOLUTION
Refrigerator does not work	Is the power cord plugged in the socket	Reconnect the power plug
	Is there a power breakdown	Wait till the power resumes
	Has the circuit breaker tripped	Check through some electrician
Ice formation is slow	Is the air flow knob set to normal ice position	Set your upper compartment knob (Airflow knob) to fast ice mode
Cooling in the refrigerator is not enough	Delux models: Is your lower compartment knob set to lower value	Rotate the knob to set it to higher value
	Elite model: Is your cooling mode set to lower modes	Press it to set to higher position
	Is the passage obstructed by food	Reposition the food items kept directly in front of the air duct
	Are the refrigerator doors fully closed	Ensure always doors to be in completely closed position
	Are you storing hot foods in the refrigerator	Do not keep hot utensils in the refrigerator
	Are there any pads or plastic covers on the shelf	Remove all pads or plastic covers to clear the airflow path
Refrigerator runs non stop	Is the cooling level set to high position	Reduce it to lower levels
	Is the door left open for long	Ensure always doors to be in completely closed position
Refrigerator side walls are hot	This is not a problem. The walls heat slightly during normal operation	Please refer to the sticker pasted on side wall
Refrigerator gives a mild shock	Is your house earthing proper	Please get your house wiring checked by some electrician
Refrigerator compartment is smelly	Has the refrigerator not been cleaned recently	Please clean your refrigerator frequently
	Is there an object with strong smell inside	Prevent storing food items which emanates strong smell

Electrical Shock Hazard



- ▶ Do not attempt to modify any part of this appliance.
- ▶ Do not connect this appliance to power sources other than specified.
- ▶ If the power cord is damaged, have it replaced by your Whirlpool® Service Centre.
- ▶ Do not use mechanical devices or other means to accelerate the defrosting process.
- ▶ Do not damage the refrigerant circuit.
- ▶ Do not use electrical appliances in the food storage compartments.

FAQS

Q. 1 Is moisture in the Vegetable Drawer normal?

Ans. Yes. As the water in the vegetables evaporates, it strikes the cold surface of the refrigerator, hence resulting in formation of water droplets. The humid air over the vegetable is however swept away by the dynamic airflow inside the refrigerator, keeping your vegetables fesh.

Q. 2 Why do I hear a noise from the back of the refrigerator?

Ans. The refrigerator is kept cold inside with the help of cooling coil, fan motor which is inside the product and the compressor which is fitted at the bottom rear side of the refrigerator. During the operation of the refrigerator it is normal to hear a humming noise.

Q. 3 How much power does my refrigerator consume per day?

Ans. Normally any frost free refrigerator would consume anywhere between 1.5 to 2 units per day, however depending upon the usage pattern it can even go higher.

Q. 4 Why is there smell emanating from my refrigerator?

Ans. Check if any item which emanates strong smell has been kept unwrapped in the refrigerator. If so, wrap it in polythene or keep it in a closed container. Keeping cut lemon will also help in reducing the odour.

Q. 5 How much time is required to make ice?

Ans. Depending on the room temperature and the door opening frequency, the ice making in the trays provided could be anywhere between 90 mins to 135 mins. However, depending upon the usage pattern, it can even go higher.

Q. 6 Why are the sidewalls hot sometimes?

Ans. Sidewalls are warm as a hot gas tube is provided at the side edges of the cabinet. This helps in avoiding moisture formation on the walls when humidity is high.

Q. 7 Why is there a noise when the Compressor starts?

Ans. It is normal to hear noise when the compressor starts and stops.

Q. 8 How frequently should I clean my refrigerator? Can I use warm water? Can I use detergents?

Ans. It is advisable to clean your refrigerator twice a month. You can clean it with warm water and mild detergents.

FAQS

Q. 9 What is the use of a chiller / Everyday Fresh?

Ans. In chiller you have colder temperature than that of shelves and Vegetable Drawer. This compartment can be used for faster cooling of water, beverages, beer and milk preservation etc. As a precaution, please do not store bottles for longer duration since it could freeze & burst.

Q. 10 Why do vegetables get spoilt when kept on the top shelf (below chiller)?

Ans. The zone below the chiller is not suitable for vegetables. It is recommended to store vegetables in the Vegetable Drawer, which has the desired temperature for keeping vegetables fresh.

Q. 11 Does milk get spoilt when kept in the Vegetable Drawer?

Ans. Milk needs colder temperature for it to remain fresh. Since the vegetable drawer is kept at warmer temperature, milk will get spoilt in it. It is recommended to store milk in the chiller.

Q. 12 I wish to keep the door open for some time. However I don't want to hear the alarm sound. What do I have to do?

Ans. 6th Sense™ Door Open Alarm* buzzer is provided to alert the user when the door is left open for more than 2 minutes. However, if the door is to be intentionally kept open for more than 2 minutes, the buzzer may be temporarily switched off by pressing the 6th Sense™ Door Open Alarm* switch.

Q. 13 Do I need to clean the back tray of my refrigerator?

Ans. As your product is equipped with frost free mechanism, you need not clean the tray, however in extreme moisture conditions; very seldom you may require to empty the tray.

Q. 14 What brand of stabilizer is recommended?

Ans. Whirlpool® recommends Duromax Voltage Stabilizers. For specifications, please contact your nearest Whirlpool® Authorized Dealer or Whirlpool® Authorized Service Partner.



House Wiring Issues

Damage caused due to house wiring issues such as short leading to general non-functioning of the machine.

Rat bite issues on wiring harness

Damages such as short circuit leading to non-functioning of the machine due to rat bite on wiring harness.

Changes in the wiring

Any changes done in the product wiring by Whirlpool unauthorized person.

Hazardous Substances :

A few components used in manufacturing this refrigerator contain low content of some substances classified as hazardous, according to E-Waste Rules published by the Government of India. These do not pose any risk to the storage of food and beverages in the refrigerator. Nor does physical contact with the refrigerator during the life of the product endanger health or safety to humans or any living creature. However, if the refrigerator is not disposed safely at the end of its life, inappropriate handling of waste may pose risks to health and environment. Hence, it is our advice that you contact Whirlpool when you are ready to discard the product so that we can channelize the appliance and its components for safe disposal.



Warning: Risk of fire/flammable materials.



Refrigerator Disposal:

By ensuring this product is disposed of correctly, you will help avoid potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The Symbol on the product or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the authorized collection center for the recycling of electrical and electronic equipment waste generated at the end of life of the product. Disposal must be carried out in accordance with local environmental regulations for e-waste disposal, which mandate channelization of e-waste to authorized collection center(s) or registered dismantler(s) or recycler(s) or returned to the pick-up or take back services provided by the manufacturer.

For more detailed information about treatment, recovery, disposal and recycling of this product, please call @ 60008558* (for private subscribers) & 18601804558 (for BSNL & MTNL subscribers)

* Prefix your city STD code

INSTALLATION REPORT - Whirlpool's Copy



Whirlpool Home Care Centre



Model No. & Serial No.: _____ Compressor No.: _____
Customers Name: _____ Telephone No.: _____
Address: _____

Installation Check Points

Machine Delivered on: _____ Machine Installed on: _____

Tick Appropriate (By Service Engineer)			
Refrigerator Package Contains			
1	Received following items -Use and care guide & keys	Yes <input type="checkbox"/>	No <input type="checkbox"/>
Demonstration			
1	Any Transit damage Observed after unpacking	Yes <input type="checkbox"/>	No <input type="checkbox"/>
2	Condition of Earthing & Plug Point	Good <input type="checkbox"/>	Poor <input type="checkbox"/>
3	Warranty Terms & condition explained	Yes <input type="checkbox"/>	No <input type="checkbox"/>
4	Basic Function & features	Yes <input type="checkbox"/>	No <input type="checkbox"/>
5	User Interface function	Yes <input type="checkbox"/>	No <input type="checkbox"/>
Explanation			
1	Usage of Refrigerator	Yes <input type="checkbox"/>	No <input type="checkbox"/>
2	House Wiring - Voltage condition	Yes <input type="checkbox"/>	No <input type="checkbox"/>
	a. Phase & Neutral (220 - 230 V)	_____ Volt	
	b. Phase & Earth (220 - 230 V)	_____ Volt	
	c. Neutral & Earth (< 10 V)	_____ Volt	
	If not as per specification, has customer been advised on action to be taken)	Yes <input type="checkbox"/>	No <input type="checkbox"/>
3	House wiring condition	Good <input type="checkbox"/>	Poor <input type="checkbox"/>
	If poor, has customer been advised on action to be taken?	Yes <input type="checkbox"/>	No <input type="checkbox"/>
4	Door Locking/unlocking	Yes <input type="checkbox"/>	No <input type="checkbox"/>
5	Refrigerator's body/side heating	Yes <input type="checkbox"/>	No <input type="checkbox"/>
6	Door gasket removal/cleaning/fitment	Yes <input type="checkbox"/>	No <input type="checkbox"/>
7	Leveling of the Refrigerator	Yes <input type="checkbox"/>	No <input type="checkbox"/>
8	Vegetable storage guidelines in crisper	Yes <input type="checkbox"/>	No <input type="checkbox"/>
9	Thermostat/Airflow setting as per loads and ambient	Yes <input type="checkbox"/>	No <input type="checkbox"/>
10	Normal Noise - Compressor, Gas flow & Fan air cutting	Yes <input type="checkbox"/>	No <input type="checkbox"/>
11	Reason of electrical Shocks/hazards	Yes <input type="checkbox"/>	No <input type="checkbox"/>
12	Error code Explanation	Yes <input type="checkbox"/>	No <input type="checkbox"/>
13	Ice bracket usage	Yes <input type="checkbox"/>	No <input type="checkbox"/>
14	Door alarm	Yes <input type="checkbox"/>	No <input type="checkbox"/>
15	Door opening and closing information	Yes <input type="checkbox"/>	No <input type="checkbox"/>
16	Cleaning in deck area	Yes <input type="checkbox"/>	No <input type="checkbox"/>
17	Bottle stuck	Yes <input type="checkbox"/>	No <input type="checkbox"/>
18	Things to be taken while covering of the refrigerator	Yes <input type="checkbox"/>	No <input type="checkbox"/>
19	Do's & Don'ts	Yes <input type="checkbox"/>	No <input type="checkbox"/>



Customer Voice .. Your feedback matters !!!

1.	The installation person was courteous & helpful	Yes <input type="checkbox"/>	No <input type="checkbox"/>
2.	I would describe my experience with installation as	Satisfied <input type="checkbox"/>	Not Satisfied <input type="checkbox"/>
3.	I confirmed my warranty by calling Whirlpool call center, post installation.	Yes <input type="checkbox"/>	No <input type="checkbox"/>

I certify that the above information & checks have been done to my satisfaction & I am fully satisfied with the installation performance of the refrigerator.

Customers signature: _____

Warranty is not applicable, if
- Product is not used as per installation guidelines/usage explanation, beyond 180 days from purchase.
- 'Chargeable' situations as explained in user and care guide.

Service
SMS 'WFL' TO 5000
CALL 80088538
for private subscriber
18601804558
© 2005, 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016, 2017, 2018, 2019, 2020, 2021, 2022, 2023, 2024, 2025, 2026, 2027, 2028, 2029, 2030, 2031, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2043, 2044, 2045, 2046, 2047, 2048, 2049, 2050, 2051, 2052, 2053, 2054, 2055, 2056, 2057, 2058, 2059, 2060, 2061, 2062, 2063, 2064, 2065, 2066, 2067, 2068, 2069, 2070, 2071, 2072, 2073, 2074, 2075, 2076, 2077, 2078, 2079, 2080, 2081, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2092, 2093, 2094, 2095, 2096, 2097, 2098, 2099, 2100, 2101, 2102, 2103, 2104, 2105, 2106, 2107, 2108, 2109, 2110, 2111, 2112, 2113, 2114, 2115, 2116, 2117, 2118, 2119, 2120, 2121, 2122, 2123, 2124, 2125, 2126, 2127, 2128, 2129, 2130, 2131, 2132, 2133, 2134, 2135, 2136, 2137, 2138, 2139, 2140, 2141, 2142, 2143, 2144, 2145, 2146, 2147, 2148, 2149, 2150, 2151, 2152, 2153, 2154, 2155, 2156, 2157, 2158, 2159, 2160, 2161, 2162, 2163, 2164, 2165, 2166, 2167, 2168, 2169, 2170, 2171, 2172, 2173, 2174, 2175, 2176, 2177, 2178, 2179, 2180, 2181, 2182, 2183, 2184, 2185, 2186, 2187, 2188, 2189, 2190, 2191, 2192, 2193, 2194, 2195, 2196, 2197, 2198, 2199, 2200, 2201, 2202, 2203, 2204, 2205, 2206, 2207, 2208, 2209, 2210, 2211, 2212, 2213, 2214, 2215, 2216, 2217, 2218, 2219, 2220, 2221, 2222, 2223, 2224, 2225, 2226, 2227, 2228, 2229, 2230, 2231, 2232, 2233, 2234, 2235, 2236, 2237, 2238, 2239, 2240, 2241, 2242, 2243, 2244, 2245, 2246, 2247, 2248, 2249, 2250, 2251, 2252, 2253, 2254, 2255, 2256, 2257, 2258, 2259, 2260, 2261, 2262, 2263, 2264, 2265, 2266, 2267, 2268, 2269, 2270, 2271, 2272, 2273, 2274, 2275, 2276, 2277, 2278, 2279, 2280, 2281, 2282, 2283, 2284, 2285, 2286, 2287, 2288, 2289, 2290, 2291, 2292, 2293, 2294, 2295, 2296, 2297, 2298, 2299, 2300, 2301, 2302, 2303, 2304, 2305, 2306, 2307, 2308, 2309, 2310, 2311, 2312, 2313, 2314, 2315, 2316, 2317, 2318, 2319, 2320, 2321, 2322, 2323, 2324, 2325, 2326, 2327, 2328, 2329, 2330, 2331, 2332, 2333, 2334, 2335, 2336, 2337, 2338, 2339, 2340, 2341, 2342, 2343, 2344, 2345, 2346, 2347, 2348, 2349, 2350, 2351, 2352, 2353, 2354, 2355, 2356, 2357, 2358, 2359, 2360, 2361, 2362, 2363, 2364, 2365, 2366, 2367, 2368, 2369, 2370, 2371, 2372, 2373, 2374, 2375, 2376, 2377, 2378, 2379, 2380, 2381, 2382, 2383, 2384, 2385, 2386, 2387, 2388, 2389, 2390, 2391, 2392, 2393, 2394, 2395, 2396, 2397, 2398, 2399, 2400, 2401, 2402, 2403, 2404, 2405, 2406, 2407, 2408, 2409, 2410, 2411, 2412, 2413, 2414, 2415, 2416, 2417, 2418, 2419, 2420, 2421, 2422, 2423, 2424, 2425, 2426, 2427, 2428, 2429, 2430, 2431, 2432, 2433, 2434, 2435, 2436, 2437, 2438, 2439, 2440, 2441, 2442, 2443, 2444, 2445, 2446, 2447, 2448, 2449, 2450, 2451, 2452, 2453, 2454, 2455, 2456, 2457, 2458, 2459, 2460, 2461, 2462, 2463, 2464, 2465, 2466, 2467, 2468, 2469, 2470, 2471, 2472, 2473, 2474, 2475, 2476, 2477, 2478, 2479, 2480, 2481, 2482, 2483, 2484, 2485, 2486, 2487, 2488, 2489, 2490, 2491, 2492, 2493, 2494, 2495, 2496, 2497, 2498, 2499, 2500, 2501, 2502, 2503, 2504, 2505, 2506, 2507, 2508, 2509, 2510, 2511, 2512, 2513, 2514, 2515, 2516, 2517, 2518, 2519, 2520, 2521, 2522, 2523, 2524, 2525, 2526, 2527, 2528, 2529, 2530, 2531, 2532, 2533, 2534, 2535, 2536, 2537, 2538, 2539, 2540, 2541, 2542, 2543, 2544, 2545, 2546, 2547, 2548, 2549, 2550, 2551, 2552, 2553, 2554, 2555, 2556, 2557, 2558, 2559, 2560, 2561, 2562, 2563, 2564, 2565, 2566, 2567, 2568, 2569, 2570, 2571, 2572, 2573, 2574, 2575, 2576, 2577, 2578, 2579, 2580, 2581, 2582, 2583, 2584, 2585, 2586, 2587, 2588, 2589, 2590, 2591, 2592, 2593, 2594, 2595, 2596, 2597, 2598, 2599, 2600, 2601, 2602, 2603, 2604, 2605, 2606, 2607, 2608, 2609, 2610, 2611, 2612, 2613, 2614, 2615, 2616, 2617, 2618, 2619, 2620, 2621, 2622, 2623, 2624, 2625, 2626, 2627, 2628, 2629, 2630, 2631, 2632, 2633, 2634, 2635, 2636, 2637, 2638, 2639, 2640, 2641, 2642, 2643, 2644, 2645, 2646, 2647, 2648, 2649, 2650, 2651, 2652, 2653, 2654, 2655, 2656, 2657, 2658, 2659, 2660, 2661, 2662, 2663, 2664, 2665, 2666, 2667, 2668, 2669, 2670, 2671, 2672, 2673, 2674, 2675, 2676, 2677, 267



رقم الموديل والرقم التسلسلي: _____ رقم الحرك: _____
 اسم العميل: _____ رقم الهاتف: _____
 العنوان: _____
 نقاط مراجعة التركيب _____
 تم تركيب الجهاز في: _____ تم توصيل الجهاز في: _____

عرض الخدمة على الثلاجة يشمل

- 1 استلام الأجزاء التالية - دليل الاستخدام والعناية والمفاتيح

عرض كيفية عمل المنتج

- 1 أي ضرر عابر لوحظ بعد التفرغ
- 2 حالة تاريض الأسلاك ونقطة التوصيل
- 3 تم توضيح شروط الضمان
- 4 تم توضيح الوظيفة الأساسية والمميزات
- 5 تم توضيح وظيفة واجهة المستخدم

2

1. استخدام الثلاثة
2. شبكة الأسلاك المنزلية - حالة الجهد
أ. مرحلة ومحاييد (V 220-230)
ب. مرحلة وأرضي (V 220-230)
ج. محاييد وأرضي (V 10)

إن لم تكن وفقا للمواصفات، تم إبلاغ العميل عن الإجراءات التي يتعين اتخاذها)

- 3 حالة شبكة الأسلاك المنزلية
إن لم تكن وفقا للمواصفات، تم إبلاغ العميل عن الإجراءات التي يتعين اتخاذها)

- 4 فتح / غلق الباب

- 6 خلع / تنظيف / إعادة تركيب سلة الباب
7 استواء وضع الثلجة
8 استواء وضع الثلجة

- 8 إرشادات تخزين الخضار في الدرج الخاص بها
9 إعداد الترموستات / تدفق الهواء حسب الأحـم
10 الضمضاء العادية - المتمم وتدفعه الغاز مقل

- 10 الضوضاء العادية - الموتور، و تدفق الغاز و قطع هواء المروحة
11 سبب الصدمات / المخاطر الكهربائية
12 شرح من الخطأ

- 12 شرح رمز الخطأ
13 استخدام قوالب الثلج
14 إنذار الباب

- 15 معلومات فتح و غلق الباب
16 تنظيف المناطق الخارجية

- 17 انحشار الزجاجات
18 أشياء يجب إتباعها أثناء تغطية الثلجة

صوت العميل --- رأيك يهمنا!!!

- الشخص الذي قام بالتركيب مهذب و متعاون
- يمكن أن أصف تجربتي مع التركيب بأني
- قمت بتأكيد الضمان من خلال الاتصال بشركة Whirlpool مركز الاتصال. و خدمة ما بعد التركيب.

شاهد بأن المعلومات الواردة أعلاه و أعمال المراجعة تم القيام بها بشكل جيد & وأنا راض تماماً عن أداء تركيب الخلاصة.

توقيع العميل: —

الضمان غير قابل للتطبيق. إذا
-المنتج لم يتم استخدامه وفقا لتفسير المبادئ التوجيهية/استخدام التثبيت. بعد
180 يوما من الشراء.
- الحالات المخالفة لما هو موضح في دليل المستخدم ودليل الرعاية.

المواد الخطرة:

بعض من المكونات المستخدمة في تصنيع هذه الثلاجة تحتوي على نسبة منخفضة من بعض المواد المصنفة كمواد خطرة. وفقا "لقواعد الاتحاد الأوروبي للتخلص من النفايات" التي نشرتها حكومة الهند. هذه المكونات لا تشكل أي خطر على تخزين المواد الغذائية والمشروبات في الثلاجة. كما لا يشكل الاتصال الجسدي المباشر بالثلاجة أثناء فترة صلاحية الجهاز خطرا على صحة وسلامة الإنسان أو أي كائن حي. ومع ذلك، إذا لم يتم التخلص من الثلاجة بأمان في نهاية حياتها، فإن التعامل الغير سليم مع النفايات قد تشكل خطرا على الصحة والبيئة. وبالتالي، فإننا ننصح بالاتصال بشركة Whirlpool عندما تكون على استعداد للتخلص من المنتج حتى تتمكن من توجيه الجهاز ومكوناته للتخلص الآمن.



التخلص من الثلاجة:

من خلال ضمان التخلص بشكل صحيح من هذا المنتج، سوف تساعد على تجنب الآثار السلبية المحتملة على البيئة وصحة الإنسان، والتي كان من الممكن أن تنتج عن معالجة النفايات الغير مناسبة لهذا المنتج.

الرمز الموجود على المنتج أو على الوثائق المرافقة للمنتج، يشير إلى أن هذا الجهاز لا يجوز التعامل معه كنوع من النفايات المنزلية. وبدلاً من ذلك يجب أن يسلم الجهاز إلى مركز جمع وإعادة تدوير النفايات الكهربائية والإلكترونية المعتمد في نهاية العمر الافتراضي للمنتج. يجب أن يتم التخلص وفقاً للأنظمة البيئية المحلية للتخلص من النفايات الإلكترونية، والذي يوجب توجيه النفايات الإلكترونية إلى مركز جمع معتمد أو إلى الموظفون المسجلون للتخلص من الأجهزة (أو) إعادة تدويرها، أو أن يسلم الجهاز إلى خدمة الإعادة المقدمة من قبل الشركة المصنعة.

للحصول على معلومات أكثر تفصيلاً حول الحلول والتأهيل والتخلص من وإعادة تدوير هذا المنتج، يرجى الاتصال @ 60008558 *
(للمشاركين من القطاع الخاص) 18601804558 (لشركة BSNL و MTNL)
* قم بإضافة الرمز الخاص بمدینتک STD

سؤال وجواب

- س. 9 ما هو مجال استخدام المبرد / خاصية طازجة كل يوم chiller / Everyday Fresh؟
ج. في مقصورة المبرد يمكنك الحصول على درجات برودة أعلى من تلك الموجودة على الأرفف أو في درج الخضراوات. يمكن استخدام تلك المقصورة في التبريد السريع للمياه، والمشروبات، والبيرة، والحفاظ على الحليب الخ . كإجراء وقائي، من فضلك لا تقم بتخزين الزجاجات لمدة أطول حيث يمكن أن تتجمد وتنفجر.
- س. 10 لماذا تفسد الخضراوات عندما توضع على الرف العلوي (أسفل المبرد)؟
ج. المنطقة أسفل المبرد غير مناسبة للخضراوات. من المستحسن تخزين الخضراوات في درج الخضراوات، الذي يتميز بدرجة الحرارة المطلوبة لتخزين الخضراوات الطازجة.
- س. 11 هل يفسد الحليب عند الاحتفاظ به في درج الخضراوات؟
ج. يحتاج الحليب إلى درجة برودة أعلى ليبقى طازجا. وحيث أن درج الخضراوات يبقى في درجة حرارة أكثر دفئا، وبالتالي يفسد الحليب فيه. يوصى بتخزين الحليب في مقصورة المبرد.
- س. 12 أريد أحيانا الإبقاء على باب الثلاجة مفتوحا لبعض الوقت. ولكنني لا أريد سماع صوت الإنذار. ماذا يجب على أن أفعل؟
ج. تم توفير جرس التنبيه الخاص بخاصية الحاسة السادسة إنذار الباب المفتوح 6th Sense™ Door Open Alarm، لتنبيه المستخدم عندما يتم ترك الباب مفتوحا لأكثر من 2 دقيقة. وعلى الرغم من ذلك، إذا ترك الباب مفتوحا لأكثر من دقيقتين بشكل متعمد، يمكنك إلغاء صوت التنبيه مؤقتا عن طريق الضغط على مفتاح 6th Sense™ Door Open Alarm.
- س. 13 هل يجب تنظيف حوض جميع المياه في الجزء الخلفي للثلاجة؟
ج. إن جهازك مزود بآلية عدم تكون الثلج، وبالتالي لا تحتاج القيام بتنظيف الحوض الخلفي، ولكن في حالات الرطوبة العالية، و بشكل نادر جدا قد تحتاج لتفريغ الحوض.
- س. 14 ما هو نوع مثبت التيار الموصي به؟
ج. توصي Whirlpool® مثبت التيار الكهربائي ماركة Duromax. لخواص المثبت، من فضلك اتصل بأقرب موزع معتمد لشركة Whirlpool® أو شريك خدمة Whirlpool® المعتمد.

مسائل تتعلق بشبكة الأسلاك المنزلية
الأضرار الناجمة بسبب شبكة الأسلاك المنزلية مثل قصر سلك التوصيل والذي قد يؤدي إلى تعطيل عمل الجهاز بشكل عام.
المشاكل المتعلقة بعضة الجرد وأثرها على شبكة الأسلاك
الأضرار مثل الماس الكهربائي بسبب عضه الجرد وأثرها على شبكة الأسلاك والذي قد يؤدي إلى تعطل عمل الجهاز
التغييرات في الأسلاك
أية تغييرات في شبكة أسلاك المنتج قد يقوم بها شخص غير معتمد من Whirlpool



سؤال وجواب

- س. 1 هل الرطوبة الموجودة في درج الخضراوات طبيعية؟
ج. نعم. حيث أن الماء الموجود بشكل طبيعي في الخضراوات يتبخر. ويصطدم بسطح الثلجة البارد ، وبالتالي تتكون قطرات الماء. وعلى الرغم من ذلك يتم إزاحة الهواء الرطب الموجود على الخضراوات بواسطة تدفق الهواء الديناميكي داخل الثلجة. ويحافظ ذلك على الخضراوات طازجة دائما.
- س. 2 لماذا أسمع ضوضاء من خلف الثلجة؟
ج. تبقى الثلجة باردة من الداخل عن طريق ملف التبريد. وموتور المروحة الموجود داخل المنتج و كذلك عن طريق المحرك المثبت في أسفل الجزء الخلفي من الثلجة. أثناء تشغيل الثلجة من الطبيعي أن تسمع بعض الضوضاء.
- س. 3 ما هو مقدار استهلاك الثلجة للطاقة يوميا؟
ج. من الطبيعي أن تستهلك أي ثلاجة خالية من الثلج ما بين 1.5 و 2 وحدة في اليوم. ولكن ذلك يعتمد على نمط الاستخدام فمن الممكن أن ترتفع أكثر من ذلك.
- س. 4 لماذا تصدر رائحة من الثلجة؟
ج. تأكد من عدم وجود أي نوع من الغذاء ذو الرائحة النفاذة غير مغطي في الثلجة. إذا كان الأمر كذلك. قم بتغطيته بغطاء بولي إيثيلين. أو في حاوية طعام مغلقة. الحرص على وجود الليمون المقطع داخل الثلجة يساعد أيضا في الحد من الرائحة.
- س. 5 ما هو الوقت المطلوب لعمل ثلج؟
ج. يعتمد ذلك على درجة حرارة الغرفة و تكرار فتح باب الثلجة. يمكن أن يتم صنع الثلج في القوالب المرفقة في الفترة الزمنية بين 90 - 135 دقيقة. ولكنه يمكن أن يرتفع. اعتمادا على نمط الاستخدام.
- س. 6 لماذا تكون الجدران الجانبية ساخنة أحيانا؟
ج. تكون الجوانب دافئة بسبب وجود أنبوب الغاز الساخن في الحواف الجانبية للكابينة. ويساعد ذلك على تجنب تشكيل الندى على الحوائط الجانبية عندما ترتفع درجة الرطوبة.
- س. 7 لماذا تصدر الضوضاء عندما يبدأ المحرك في العمل؟
ج. من الطبيعي أن تسمع ضجيج عندما يبدأ المحرك و يتوقف.
- س. 8 ما هو عدد المرات المثالي لتنظيف الثلجة ؟ هل يمكن استخدام الماء الدافئ؟ هل يمكن استخدام المنظفات؟
ج. ينصح بتنظيف الثلجة مرتين شهريا. يمكنك تنظيفها بالماء الدافئ والمنظفات اللطيفة.

استكشاف الأخطاء وإصلاحها

المشكلة	البحث عن الأسباب	الحل
الثلاجة لا تعمل	هل تم توصيل سلك الكهرباء في المقبس	أعد توصيل سلك الكهرباء
	هل هناك انقطاع في التيار الكهربائي	انتظر حتى يعود مرة أخرى
	هل تعثر قاطع الدائرة الكهربائية	حقق من خلال بعض فنيي الكهرباء
تشكيل الثلج بطيء	هل تم تحديد وضع مقبض تدفق الهواء على وضع تشكيل الثلج العادي	قم بتعيين مقبض المقصورة العلوية (مقبض تدفق الهواء) على وضع الثلج السريع
التبريد في الثلاجة لا يكفي	موديلات Delux : هل تم تعيين مقبض المقصورة السفلية على قيمة أقل	قم بتدوير المقبض لتعيين القيمة الأعلى
	موديلات Elite : هل تم تعيين وضع التبريد على حد أدنى	قم بالضغط عليه لتعيين قيمة أعلى
	هل مر الهواء مسدود بالغذاء	قم بإعادة ترتيب المواد الغذائية الموجودة في مجرى الهواء مباشرة
	هل أبواب الثلاجة مغلقة تماما	تأكد دائما من أن الأبواب في وضع الإغلاق التام
	هل تقوم بتخزين الأطعمة الساخنة في الثلاجة	لا تحفظ الأواني الساخنة في الثلاجة
	هل هناك أي رفادات أو أغطية بلاستيكية على الرف	قم بإزالة جميع الرفادات أو الأغطية البلاستيكية من مسار تيار الهواء
الثلاجة تعمل بدون توقف	هل تم تعيين مستوى التبريد على وضع التبريد العالي	قم بتقليله إلى مستويات أقل
	هل تم ترك أبواب الثلاجة مفتوحة لفترة طويلة	تأكد دائما من أن الأبواب في وضع الإغلاق التام
الجدران الجانبية للثلاجة ساخنة	هذه ليست مشكلة. درجة حرارة الجدران ترتفع قليلا أثناء التشغيل العادي	يرجى الرجوع إلى الملصق الموجود على الجدار الجانبي
ثلاجة تعطي صدمة كهربية خفيفة	هل نظام التأسيس الخاص بمنزلك سليم	الرجاء فحص الأسلاك الكهربائية في منزلك بواسطة كهربائي
مقصورة الثلاجة بها رائحة غير مستحبة	هل تم تنظيف الثلاجة مؤخرا	يرجى القيام بتنظيف الثلاجة بشكل متكرر
	هل يوجد أي شيء ذو رائحة كريهة في الثلاجة	يجب منع تخزين المواد الغذائية ذات الروائح الكريهة

خطر الصدمة الكهربائية



- ❖ لا تحاول تعديل أي جزء في هذا الجهاز.
- ❖ لا تقم بتوصيل هذا الجهاز بمصدر كهرباء مخالف لما تم تحديده.
- ❖ إذا أصيب السلك بالضرر، يجب أن يتم تغييره بواسطة مركز خدمة @Whirlpool.
- ❖ لا تقم باستخدام الأجهزة الميكانيكية أو أي وسيلة أخرى لتسريع عملية إذابة الثلج.
- ❖ لا تقم بإلحاق الضرر بدائرة سائل التبريد.
- ❖ لا تستخدم الأجهزة الكهربائية في مقصورة تخزين الغذاء.

الصيانة

نقل الثلاجة

للموديلات: NEO FR258/278/305:

- ◀ قم بإيقاف تشغيل الكهرباء ثم افصل سلك الكهرباء من المقبس.
- ◀ قم بإزالة جميع المواد الغذائية من الثلاجة أو الفريزر أو درج الخضروات.
- ◀ استخدم قطعة قماش ناعمة ومبللة لمسح الثلاجة من الداخل والخارج.
- ◀ قم بتثبيت الأبواب و المكونات الداخلية باستخدام الشريط اللاصق لمنعها من التحرك / الفتح أثناء النقل.
- ◀ قم برفع الثلاجة قليلاً من الأمام وحرك باستخدام العجلات الموجودة في الجزء الخلفي.

استبدال المصباح المتصل بصمام انصهار (فيوز)

- ◀ قم دائماً بفصل التيار الكهربائي وانزع سلك الكهرباء من المقبس .
- ◀ الغطاء الشفاف - يوجد الغطاء الشفاف على صندوق التحكم .
- ◀ قم بإزالة غطاء شفاف - باستخدام المفك ذو الحد المدب. قم بإزالة غطاء المصباح بالضغط بالإبهام على الجزء الخاص بذلك والموجود في الأسفل
- ◀ قم بإزالة المصباح المزود بفيوز - حرك المصباح عكس اتجاه عقارب الساعة للفك.
- ◀ استبدل المصباح الجديد- استبدل المصباح المزود بفيوز بأخر جديد بقدرة (15 وات). ثم ثبته في مقبس المصباح بتحريكه في اتجاه عقارب الساعة.
- ◀ ضع الغطاء الشفاف - ضع العدسة في مكانها الصحيح مرة أخرى. قم بتوصيل سلك الطاقة في التيار الكهربائي وشغل ON.

ملاحظة: يستخدم جهاز NEO ICHILL مكونات التعبئة والتغليف المصنوعة من الورق المعاد تدويره الصديق للبيئة

الصيانة

تنظيف NEOFRESH

- قم دائماً بفصل التيار الكهربائي وانزع القابس من المقبس قبل القيام بعملية التنظيف.
- قم بإزالة جميع الرفوف والسلال. لإزالة أرفف الثلاجة. قم بتحريكها حتى الجزء الأمامي للرف ثم اسحب للخارج.
- قم بتحريك المبرد للخارج ، وإمالة لأعلى واسحب بلطف.
- قم بإزالة السلالات الموجودة في أبواب الثلاجة و الفريزر بالدفع لأعلى والسحب للخارج.
- استخدام قطعة قماش ناعمة ومنظفات لطيفة لتنظيف الثلاجة تماماً. احرص على عدم إتلاف موانع التسرب الموجودة بالباب .
- أترك الثلاجة جف بترك الباب مفتوحاً لبعض الوقت.
- قم بتوصيل القابس وشغل التيار الكهربائي. أترك الثلاجة تبرد لبعض الوقت قبل وضع الطعام في الداخل.

تحذيرات:

- لا ترش الماء بشكل مباشر على الثلاجة.
- لا تعمل مع مواد الرش القابلة للاشتعال.
- تأكد من فحص الجهد قبل إدخال سلك توصيل التيار في المقبس.
- تأكد من عدم إعادة إدخال مقبس التيار الكهربائي في غضون الخمس دقائق الأولى من إزالته من المقبس.
- تأكد من عدم تسرب المياه إلى لوحة اللمبات أو الإضاءة LED / أو المكونات الكهربائية الأخرى من الثلاجة.
- التأكد من عدم تسرب المياه إلى لوحة التحكم في باب الفريزر.
- لا تسمح بتجمع وركود الماء في الجزء السفلي من الثلاجة.
- لا تقم بتخزين المواد الكيميائية المتطايرة مثل الأثير والبنزين في الثلاجة.
- إلى جانب إتلاف المواد الغذائية، يمكن أن تتراكم الأبخرة وتسبب الانفجار.

التشغيل





- طريقة استبدال Activ Deo المزود بشريط التوقيت
- ◀ يجب أن يتم استبدال Activ Deo كل 6 أشهر في الظروف المثالية.
- ◀ انزع غطاء Activ Deo للخارج.
- ◀ قم باستبدال شريط Activ Deo (المتوافر في خدمة Whirlpool®) بآخر جديد.
- ◀ اضغط وقم بتثبيت الغطاء مرة أخرى
- ◀ يرجى الاتصال بمراكز الرعاية المنزلية Whirlpool® للاستبدال.
- ◀ إن شريط التوقيت المزود مع المنتج يشير إلى وقت استبدال المنتج.
- ◀ لتفعيل شريط التوقيت. قم ببساطة بالضغط على الفقاعة الموجودة على الجزء الأمامي. يبدأ الخط الموجود على نافذة المؤشر في التلون.
- ◀ قم باستبدال Activ Deo عندما يتحول مؤشر Timestrip إلى اللون الأسود / الأحمر.
- استبدال مرشحات Freshonizer / Freshflow المرنة
- ◀ يرجى الاتصال بمراكز المساعدة المنزلية Whirlpool® للاستبدال.
- استبدال منقي الهواء Freshonizer
- ◀ يجب استبدال منقي الهواء Freshonizer كل 6 أشهر لتحقيق الأداء الأمثل.
- ◀ إن شريط التوقيت Timestrip المزود مع المنتج تشير إلى وقت استبدال المنتج.
- ◀ لتفعيل شريط التوقيت. قم ببساطة بالضغط على الفقاعة الموجودة على الجزء الأمامي. يبدأ الخط الموجود على نافذة المؤشر في التلون.
- ◀ قم باستبدال منقي الهواء Freshonizer عندما يتحول مؤشر Timestrip إلى اللون الأسود / الأحمر.
- ◀ لاستبدال Freshonizer. اضغط واسحب للخارج في الاتجاه الرأسي. قم بوضع عبوة جديدة بالضغط لأسفل. (راجع الصورة).
- ◀ يرجى الاتصال بمراكز المساعدة المنزلية Whirlpool® للاستبدال.

*في بعض الموديلات الاختارة فقط.

التشغيل

NEO FR258/278/305: للموديلات

الوضع	حالة الاستخدام
منخفض	خلال فصل الشتاء أو عند عدم وجود الكثير من الطعام في الثلاجة
متوسط	هذا هو الإعداد الافتراضي والموصي به. يمكن استخدامه في ظروف الاستخدام العادية
مرتفع	خلال فصل الصيف أو عند وجود الكثير من الطعام المخزن في الثلاجة.
لتبريد السريع	خلال حرارة الصيف الشديدة أو عندما تريد تبريد أسرع.

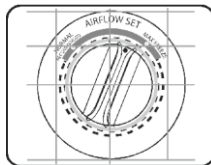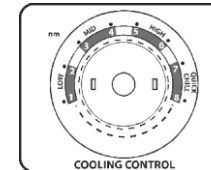


التحكم في تدفق الهواء

أدوات التحكم في تدفق الهواء في الثلاجة تتحكم في توزيع الهواء البارد بين مقصورة الثلاجة ومقصورة الفريزر. حوّل المقبض للبسار لاختيار إعداد "ثلج عادي" 'Normal Ice' ولليمين لاختيار إعداد "ثلج سريع" 'Fast Ice'. وقد تم إعداد المقبض مسبقاً على الوضع المتوسط كما هو موضح في الصورة لتبريد موحد في مقصورات الثلاجة والفريزر.

وضع المقايض	حالة الاستخدام
يادي	للحصول على الثلج العادي في الفريزر. والتبريد الشديد في مقصورة الثلاجة.
تجميد لأقصى درجة	هذا هو الإعداد الافتراضي والموصى به. يمكن استخدامه في ظروف الاستخدام العادية

للتبريد المتعادل في مقصورة الثلاجة ومقصورة الفريزر، قم بوضع مقبض التحكم في تدفق الهواء في المنتصف.

التشغيل

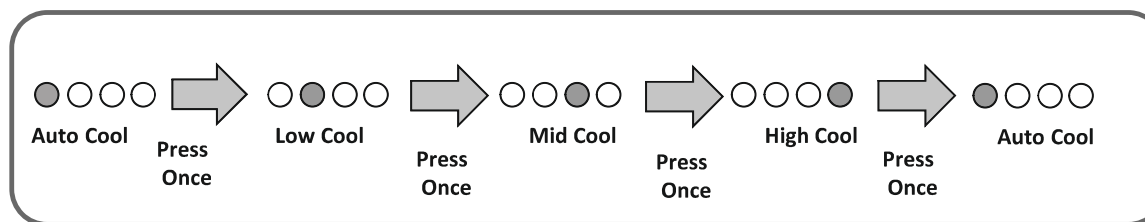


الشكل 1

الوضع	حالة الاستخدام
تبريد تلقائي - Auto Cool	هذا هو الإعداد الافتراضي. يمكن استخدامه في ظروف الاستخدام العادية
تبريد منخفض - Low Cool	خلال فصل الشتاء أو عند عدم وجود الكثير من الطعام في الثلاجة
تبريد متوسط - Mid Cool	خلال فصل الصيف أو عند وجود الكثير من الطعام المخزن في الثلاجة
تبريد عالي - High Cool	خلال حرارة الصيف الشديدة أو عندما تريد تبريد قوي جدا

للموديلات الغير مزودة بواجهة المستخدم الإلكترونية

التحكم في درجات الحرارة
للتحكم في درجات الحرارة في ثلاجتك. حوّل المقبض حسب طلباتك. ومقبض التحكم هذا موجود داخل قسم الثلاجة. حوّل المقبض باتجاه اليسار لتقليل درجة التبريد و جّاه اليمين لزيادة درجة التبريد وهو مضبوط افتراضيا على التبريد المتوسط.

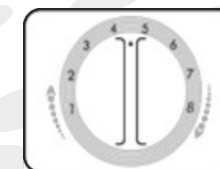

للموديلات NEO IC425/465/495

الوضع	حالة الاستخدام
3 - 1	خلال فصل الشتاء أو عند عدم وجود الكثير من الطعام في الثلاجة
5 - 4	هذا هو الإعداد الافتراضي. يمكن استخدامه في ظروف الاستخدام العادية
8 - 6	خلال فصل الصيف/الصيف شديد الحرارة أو عند وجود الكثير من الطعام المخزن في الثلاجة

التشغيل

الآن يمكنك بسهولة ضبط كافة إعدادات الثلاجة وفقا لاحتياجاتك. نظام NEO iCHILL الجديد مزود بلوحة التحكم الجديدة المعدة بمجموعة من الميزات المتقدمة من أجل إسعادك. قم فقط بتوصيل الثلاجة بالكهرباء. واتبع التعليمات الواردة أدناه لاكتشاف الراحة في تشغيل NEO iCHILL.

للموديلات المزودة بواجهة المستخدم الإلكترونية

الحاسة السادسة تحضير الثلج السريع 6th Sense™ Quick Chili
تقوم هذه الوظيفة بتحضير الثلج بسرعة فائقة. ويبرد المياه حتى في حرارة الصيف الشديدة. يمكن استخدامها في حال قدوم ضيوف بشكل مفاجئ وفي تلبية احتياجات الحفلات.



اضغط على الزر للتفعيل. يبدأ ضوء التبريد السريع في الوميض عند تفعيل هذا الوضع. عند التفعيل. سيتم تشغيل هذا الوضع لمدة ساعة وبعد ذلك. يتوقف الوميض وتعود الثلاجة تلقائياً للعمل على الوضع السابق في التبريد. ومع ذلك. إذا كنت ترغب في إلغاء تفعيل هذا الوضع. قم فقط بالضغط على زر Quickchill. سيتوقف وميض الضوء وتعود الثلاجة للعمل على الوضع السابق في التبريد. يمكن تغيير إعدادات التبريد أثناء تفعيل وضع Quickchill. وتبدأ الإعدادات الجديدة في العمل عند إيقاف تفعيل وضع Quickchill.

إنذار الحاسة السادسة الخاص بالباب المفتوح - 6th Sense™ Door Open Alarm
يقوم إنذار 6th Sense™ الخاص بالباب المفتوح بتنبيهك لقفل باب الثلاجة إذا ما ترك مفتوحاً بطريق الخطأ لأكثر من دقيقتين. وهذا لا يمنع فقط فقدان التبريد ولكن يوفر الكهرباء أيضاً.




الحاسة السادسة نظام وضع التبريد التلقائي 6th Sense™ Auto Cool Mode
يتحكم وضع نظام التبريد 6th Sense™ Auto Cool Mode بدرجة حرارة الثلاجة بذكاء حتى يتسنى لك الحصول على التبريد المثالي. دائماً.
عند تشغيل ثلاجة للمرة الأولى. يكون هذا الوضع مفعلاً بشكل أوتوماتيكي وبضوء الأزرق.
نظام وضع التبريد 6th Sense™ Auto Cool Mode هو الطفرة المقبلة في تكنولوجيا التبريد. بمجرد تفعيل هذا النظام تبدأ خاصية Auto Cool التبريد الأوتوماتيكي بالعمل بشكل مستمر في الخلفية أثناء تشغيل المنتج. ويومض الضوء الأزرق عند تشغيل هذه الخاصية.

إعداد التبريد

الوضع اليدوي يوفر لك المرونة لاختيار عناصر التحكم يدوياً حسب اختيارك.
وافترضياً. تكون الثلاجة على وضع تبريد الحاسة السادسة.
لضبط وضع التبريد يدوياً. اضغط على زر إعداد التبريد "SET COOLING BUTTON". وعلى زر تبريد منخفض. LOW COOL. يومض الضوء مرتين ويبقى مضيئاً. ثم اضغط مرة واحدة لإدخال وضع التبريد المتوسط MID COOL. استمر في الضغط لتحديد الوضع المطلوب. و"التسلسل التلقائي الدوري" هو منخفض "متوسط" عالي "أوتوماتيكي" ...
إعدادات التبريد المختلفة موضحة في الصفحة التالية.

التثبيت

خطوات التركيب لموديلات NEO FR 258/278/305 :

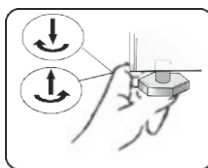

الشكل 1

الخطوة الأولى: قم بإزالة التعبئة الخارجية المصممة خصيصا لحماية NEO FRESH قم بفحص الثلاجة أثناء الاستلام للتأكد من وصولها بأمان إلى منزلك. في حال وجود أي ضرر أثناء نقل الثلاجة، قم بإبلاغ الوكيل الخاص بك في غضون 24 ساعة من التوصيل.

الخطوة 2: بعد فك تعبئة الثلاجة، قم بتحديد مكان ذي تهوية مناسبة وقريب إلى مصدر الكهرباء. اترك خلوص أو فراغ كاف للتخلص من الحرارة الزائدة، ويفضل أن يكون ذلك 6 بوصة (150 ملم) في الجزء الخلفي ومن الجانبين والجزء العلوي.

الخطوة 3: يمكنك نقل الثلاجة من خلال رفع الجزء الأمامي قليلا وتحريكها على العجلات الخلفية.

الخطوة 4: قم بلف أداتي التسوية الأماميتين، المزودتان أسفل الثلاجة، في اتجاه عقارب الساعة لرفع الجزء الأمامي، وعكس اتجاه عقارب الساعة لخفضه (راجع الشكل 1). يجب أن يكون الجزء الأمامي أعلى قليلا من الجزء الخلفي بحيث يغلق الباب بلطف عندما يترك مفتوحا.

أمر يجب أن تضعها في اعتبارك:

◀ حافظ على الثلاجة بعيدا عن أشعة الشمس المباشرة ومصادر الحرارة العالية الأخرى مثل الفرن ومنطقة الطبخ.

◀ تجنب الأماكن المكشوفة، والرطوبة.

◀ تجنب المناطق المفروشة بالسجاد. التثبيت المستقر يقلل


الضوضاء ويمنع الإهالة.

التوصيل

قم بتوصيل سلك الثلاجة بمخرج ثلاثي يتضمن التأريض.


قم بضبط إعدادات التبريد (راجع صفحات 4 و 5 للحصول على الإرشادات).

تأكد من تأريض النقطة الكهربائية بشكل صحيح. تجنب استخدام أسلاك التمديد.

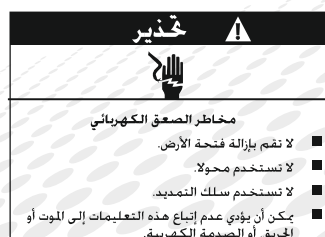

ملاحظة: من المستحسن تثبيت الثلاجة من قبل مثل خدمة Whirlpool® المعتمد

طائياتياح ةمساللا


تحذير

صاألشخا لبمن ق مادتخس لالاصصم از غير هلجا اذه (يما فب
لاأطفا لكذ)ضيفخت مع
ما ، ةعرفملاو ةخبرلا صقن ، أو ةيلق عوأ قيس أو حةيدسج اتردق
نكي مل
ارشإ مهحنم منقأوا ا تاميلعتتقلعتسابق نم ةز هجألا مادختلب
صشخ
ةملسالا عن ةلوؤسم
هازجلا مع نيلعبو م الهنا نم دكلتأل الف الطبلع فارش إلجبي.

تحذير: احفظ فتحات تهلولتي ، ي حافوتي اهلجأوز ي في القينبل المدةمج او ، م ةضدان نعالق.
تحذير: تخست لاأ مدجهقر ةيكنيكاي م و أوئسأ لخرى سترلتي لم ععي ازا اءل الصق ، ر عاد تلا كلموم هابي صن قبال لشرى ةك ةعنصملا

تحذير: لتت لاد فنقر غا ا اتزلتبريد.
تحذير: تخست لاأ مدهلأجا ةزهكلا ةينبا داخل مساحات تخزيا نلغء اذ ي في اهلجأ ، زلا اذ نكات ما نلنوع
ةعنصملا ةكلشرا هب صتوأ.

تحذير: عند تحديد موقع اهلج ، زكتأ مأن سلا كتيالر بمحس أو غير متضرر.
تحذير: حة لادد موقع مخقرج بتمخر متنقأول مصدر طمة محاق لو ي في الجا عزم ي فللخا نهلجز.
بيتترلئل بامام لكشب ينلهؤملا صاألشخا وأ ةمدلخا ليكو أو ةعنصملا ةكلشرا لبمن ق هلا دبئسا يجب ، ضرعلا كلس فلت ةلي حاف
طرب خنتجل.

ز هالجا اذه يل فعائش لالءلب قاعدف ةدما عم ويلجا ءهبالا لبع لثم ةرفجت م ةدما نتخر ال .

- لثم ةهيمشالا تيقابلتطاو ةيلا لمنز يقاتبلتطا يم فادتخس لالدم از هلجا اذه
- لمعلا يئاتب من هاو غير تبكاملو ةيار تجلا المحالت يفين فوظملا مطبخ اطقم
- ةينكسلا اتئيبل من هابالت و غير تمولا ادق ونفلا ا فيهمالو ع ار عمزلا بيوت:
- ار الفطاو سريرا عون يئاتب
- ةنتجلا ة غير لثمم يقاتبم و تطعالت ميدقت.

احتياطات السلامة

سلامتك وسلامة الآخرين أمر هام جدا

وقد قمنا بتوفير العديد من رسائل الأمان الهامة في هذا الدليل وعلى الجهاز الخاص بك. قم دائما بقراءة وإتباع كافة رسائل السلامة.

هذا هو رمز التحذير فيما يتعلق بالسلامة.

هذا الرمز ينبهك إلى المخاطر التي يمكن أن تقتل أو تؤذيك أنت أو الآخرين.

جميع رسائل السلامة يسبقها رمز التنبيه للسلامة أو كلمة خطر أو تحذير "DANGER" or "WARNING".

هذه الكلمات تعني:

إذا لم تتبع التعليمات قد يؤدي ذلك إلى قتلك أو إصابتك بشكل خطير .

إذا لم تتبع التعليمات قد يؤدي ذلك إلى قتلك أو إصابتك بشكل خطير .

وجميع الرسائل السلامة حدد أنواع المخاطر. وترشدك إلى كيفية تقليل فرصة الإصابة وما يمكن أن يحدث إذا لم يتم إتباع الإرشادات.

التخلص السليم من ثلاجتك القديمة أمر هام



انحباس الطفل والاختناق ليست من مشاكل الماضي. الثلاجات القديمة المهجورة تشكل خطرا حتى إذا ما تركت دون مراقبة لبضعة أيام فقط.

إذا كنت تنوي التخلص من ثلاجتك القديمة، يرجى إتباع هذه التعليمات للمساعدة لمنع وقوع الحوادث.

قبل التخلص من ثلاجتك أو الفريزر القديمين:

قم بخلع الأبواب.


اترك الرفوف في مكانها بحيث لا يستطيع الأطفال التسلق إلى الداخل بسهولة.

ازهاجالا ويتيح بلع كباتمر نوبكرلا
قورلكلاقيورلف.ةائرديربتلا
ويتيح بلع. (HC) R600a هزالج
مع ينبيوتاواليز: (R600a)
ناتويوااليز هو غاز يعييطنودب ثيرتأ
ينيب،هنكل كلك
قليا لعائشلال كلك، دكتأ من أن بيبأنا
قترادديتبرلا هي
غير قلتا، قصحا عند غيتفر ةائرديتبرلا.
مدتخسي C-Pentane لمعاكخفن في
قورغ لعزلا
هو غاز لبقا لعائشلال

تحذير

خطر الاختناق

قم بإزالة الأبواب من ثلاجتك القديمة. يمكن أن يؤدي عدم القيام بذلك إلى الموت أو إلى الإصابة بضرر في المخ.

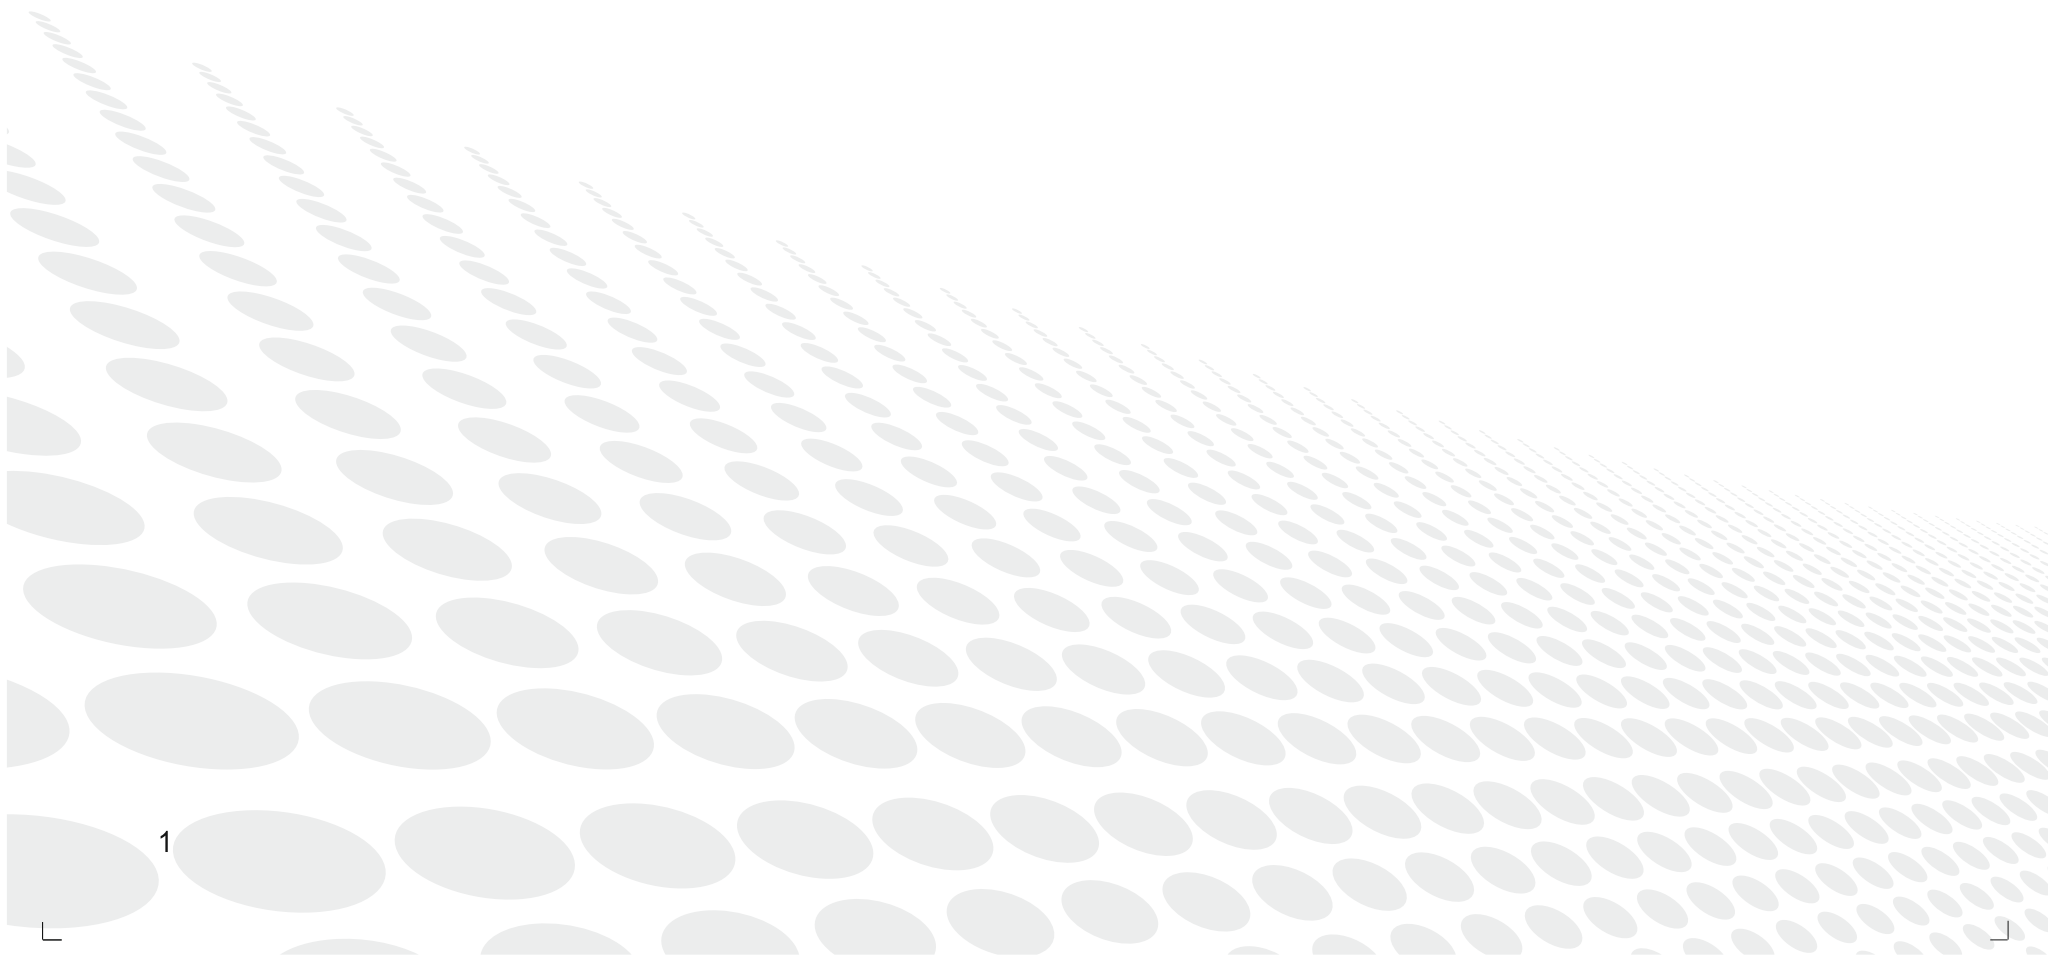

1





المحتويات

1	عالم NEO FRESH
2	احتياطات السلامة
4	التثبيت
5	التشغيل
9	الصيانة
11	استكشاف الأخطاء وإصلاحها
12	الأسئلة الشائعة
15	تقرير التثبيت



مكتب الشركة: PLOT NO. 40, SECTOR - 44, GURGAON - 122002

لزيد من المعلومات، قم بتسجيل الدخول إلى www.whirlpoolindia.com

© علامة تجارية مسجلة / TM العلامات التجارية لشركة Whirlpool، الولايات المتحدة الأمريكية. © 2009 Whirlpool الهند المحدودة. جميع الحقوق محفوظة * للتخلص من النفايات الإلكترونية الناجمة عن نهاية حياة المنتج Whirlpool @ الخاص بك. فضلا اتصل على @ 60008558 > (للمشتركين الخاص) 18601804558 (للمشتركي BSNL / MTNL) > يرجى إدخال كود مدينتك STO.

Whirlpool

WHIRLPOOL OF INDIA LIMITED

CORPORATE OFFICE PLOT NO. 40, SECTOR - 44, GURUGAON - 122002

For more details, log on to www.whirlpoolindia.com

© Registered trademark/TM Trade mark of whirlpool, U.S.A. @ 2009 whirlpool of India Ltd. All rights reserved

For disposal of e-waste generated at end of life of your whirlpool® product, you may kindly call @ 60008558 (for private subscribers) & 18601804558 (for BSNL/MTNL subscribers) *kindly prefix your city STD code.

Happiness begins at home

W11101659